

Parts Book

IQ84294U 2019/12/19

404J

- Catalogue des pièces de rechange
- Ersatzteilliste
- Catalogo parti di ricambio
- Catálogo de repuestos

 **Perkins®**

THE HEART OF EVERY GREAT MACHINE



The information given within this parts book was correct at the time of printing and is subject to change without notice. Always refer to your local Perkins outlet for the latest information. Only fully trained personnel should carry out servicing of engines. Before working on any engine always refer to the correct user service and maintenance manual.

Always refer to your local Perkins outlet before purchasing any parts.

Subject to any existing rights of third parties, the information given in this document is the property of Perkins Engines Limited and should not be copied, in whole or part, without the prior written consent of the Company.

Contents

Perkins Platinum Protection	4
Introduction	5
How to use your Parts Book	5
Engine Breakdown	6
Symbols and Notes	10

Perkins Platinum Protection

Perkins Platinum Protection is the best value cover for Perkins engines. Available to purchase in flexible packages.

What benefits will I receive?

- Unbeatable value for money, with absolutely no excess to pay
- Our global network of fully trained professional Perkins technicians will ensure that you always receive a trustworthy and reliable service
- The same cover as your standard warranty - we won't charge for parts, labour, or travel when we repair your engine (subject to Terms and Conditions)

Upgrade to Perkins Platinum Protection before your standard warranty expires:

- Comprehensive cover for up to 100 percent of components*
- Flexible packages from two to five years
- Support from Perkins global network of fully trained technicians
- We will provide electrical updates at the same time as your engine repairs should you need this, in the event of a claim
- No unexpected charges in getting your engine back up and running
- Talk to your local Perkins distributor today, or visit www.perkins.com/platinumprotection for more information.

* Terms and Conditions apply

Introduction

The build list of your engine, found on the front page of this parts book, provides a unique reference to the components fitted to your engine; therefore this parts book is only applicable to this particular engine

Always quote your build list and engine serial number when contacting your Perkins outlet.

How to use your Parts Book

This parts book has been designed to provide you with all the information you need to identify parts to service your engine. There are several features within the book to make it easy to find the parts you require

Front Page

This lists your build list number and the date of publication of this book.

Symbol Descriptions

Provides a quick reference guide to the symbols used within the book.

Engine Breakdown

Use this to identify all the major sections of your engine and the relevant pages within the book.

Parts Lists & Illustrations

This section shows each major section of your engine broken down into individual part numbers along with an associated illustration for identifying the parts you require.

The illustrations used in this parts book are representational only and should only be used for identification purposes.

For fitting instructions please refer to your engine Service Manual.

Parts Index

Using either the part number or description of the part you require this section will help you locate the page within the **Parts Lists & Illustrations** section where the part appears.

Engine Breakdown

 
 
















Section	Page
Cylinder Block 5412238.....	12
Cylinder Block 5412238.....	14
Rear End Oil Seal 5412238.....	16
Pipes 5412238.....	18
Relief Valve 5412238.....	20
Oil Pump 5412238.....	22
Crankshaft, Main Bearings & Big End Bearings 3994716.....	24
Pistons & Connecting Rods 5412240.....	26
Pistons & Connecting Rods 5412240.....	28
Cylinder Head 5285595.....	30
Cylinder Head 5285595.....	32
Rocker Shaft Assembly 3994749.....	34
Camshaft 4458627.....	36
High Pressure Fuel Pump 5412241.....	38
High Pressure Fuel Pump 5412241.....	40
Fuel Rail 5412241.....	42
High Pressure Fuel Pipes 5412241.....	44
Fuel Leak-Off Pipe 5412241.....	46
Atomisers 5412241.....	48
Engine Control Module	


5242309.....	50
Flywheel Housing	
5285598.....	52
Flywheel & Starter Ring	
5496186.....	54
Starter Motor	
3984818.....	56
Fan Drive Pulley	
3984866.....	58
Fan Drive Mounting	
3989095.....	60
Lubricating Oil Sump	
5787017	62
Dipstick & Filler Tube	
5787017	64
Blanking Plug	
3985865.....	66
Lubricating Oil Filler	
3985867.....	68
Oil Filter	
3988177.....	70
Crankshaft Pulley	
4459988.....	72
Water Pump	
5665994.....	74
Thermostat & Housing	
5665994.....	76
Oil Cooler	
5665994.....	78
Water Outlet Housing	
3985884.....	80
Fan	
3989093.....	82
Alternator & Fixings	
5496187.....	84
Alternator Belt	
4770812.....	86
Timing Case	
5242311	88
Front Cover	
5242311	90
Front Plate	
5242311	92

Sensors	
5242311	94
Turbocharger	
5412249	96
Turbo Oil Feed Pipe	
5412249	98
Turbo Oil Drain Pipe	
5412249	100
Inlet Manifold	
5412249	102
Inlet Manifold	
5412249	104
Cylinder Head Cover	
5412249	106
Exhaust Manifold	
5412249	108
NOx Reduction System	
5412249	110
NOx Reduction System	
5412249	112
NOx Reduction System	
5412249	114
NOx Reduction System	
5412249	116
NOx Reduction System	
5242331	118
Exhaust Outlet	
5242331	120
CEM - Sensors	
5242331	122
CEM - Support Bracket	
5242331	124
CEM - Sensors	
5242331	126
Air Inlet System	
5504553	128
Temperature Sensor	
5667563	130
Warning Labels	
5667563	132
Cold Start System	
5285605	134
Engine Lifting Eyes	

5285607.....	136
Lubricating Oil Pressure Switch/Gauge	
5504476.....	138
Wiring Harness	
5675720.....	140
Wiring Harness	
5675720.....	142
Fuel Filter	
4665550.....	144
Fuel Filter	
4665550.....	146
Fuel Filter	
4665550.....	148
Fuel Filter	
4959885.....	150
Engine Identification Labels	
5504407.....	152

 Symbols and Notes


Symbol	Description
	From Engine Number
	Upto Engine Number
	Repairs and Replaces
	See Appropriate Section - Reference Number
	Alternative
	Order
	Remanufactured Part
	New for Old Part
	Number of Teeth
	Thickness
	Bottom
	Top
	Left Hand
	Right Hand
	Reference for Detailed Breakdown
	Other Service Options Available
	Cylinder Number
	See History Section

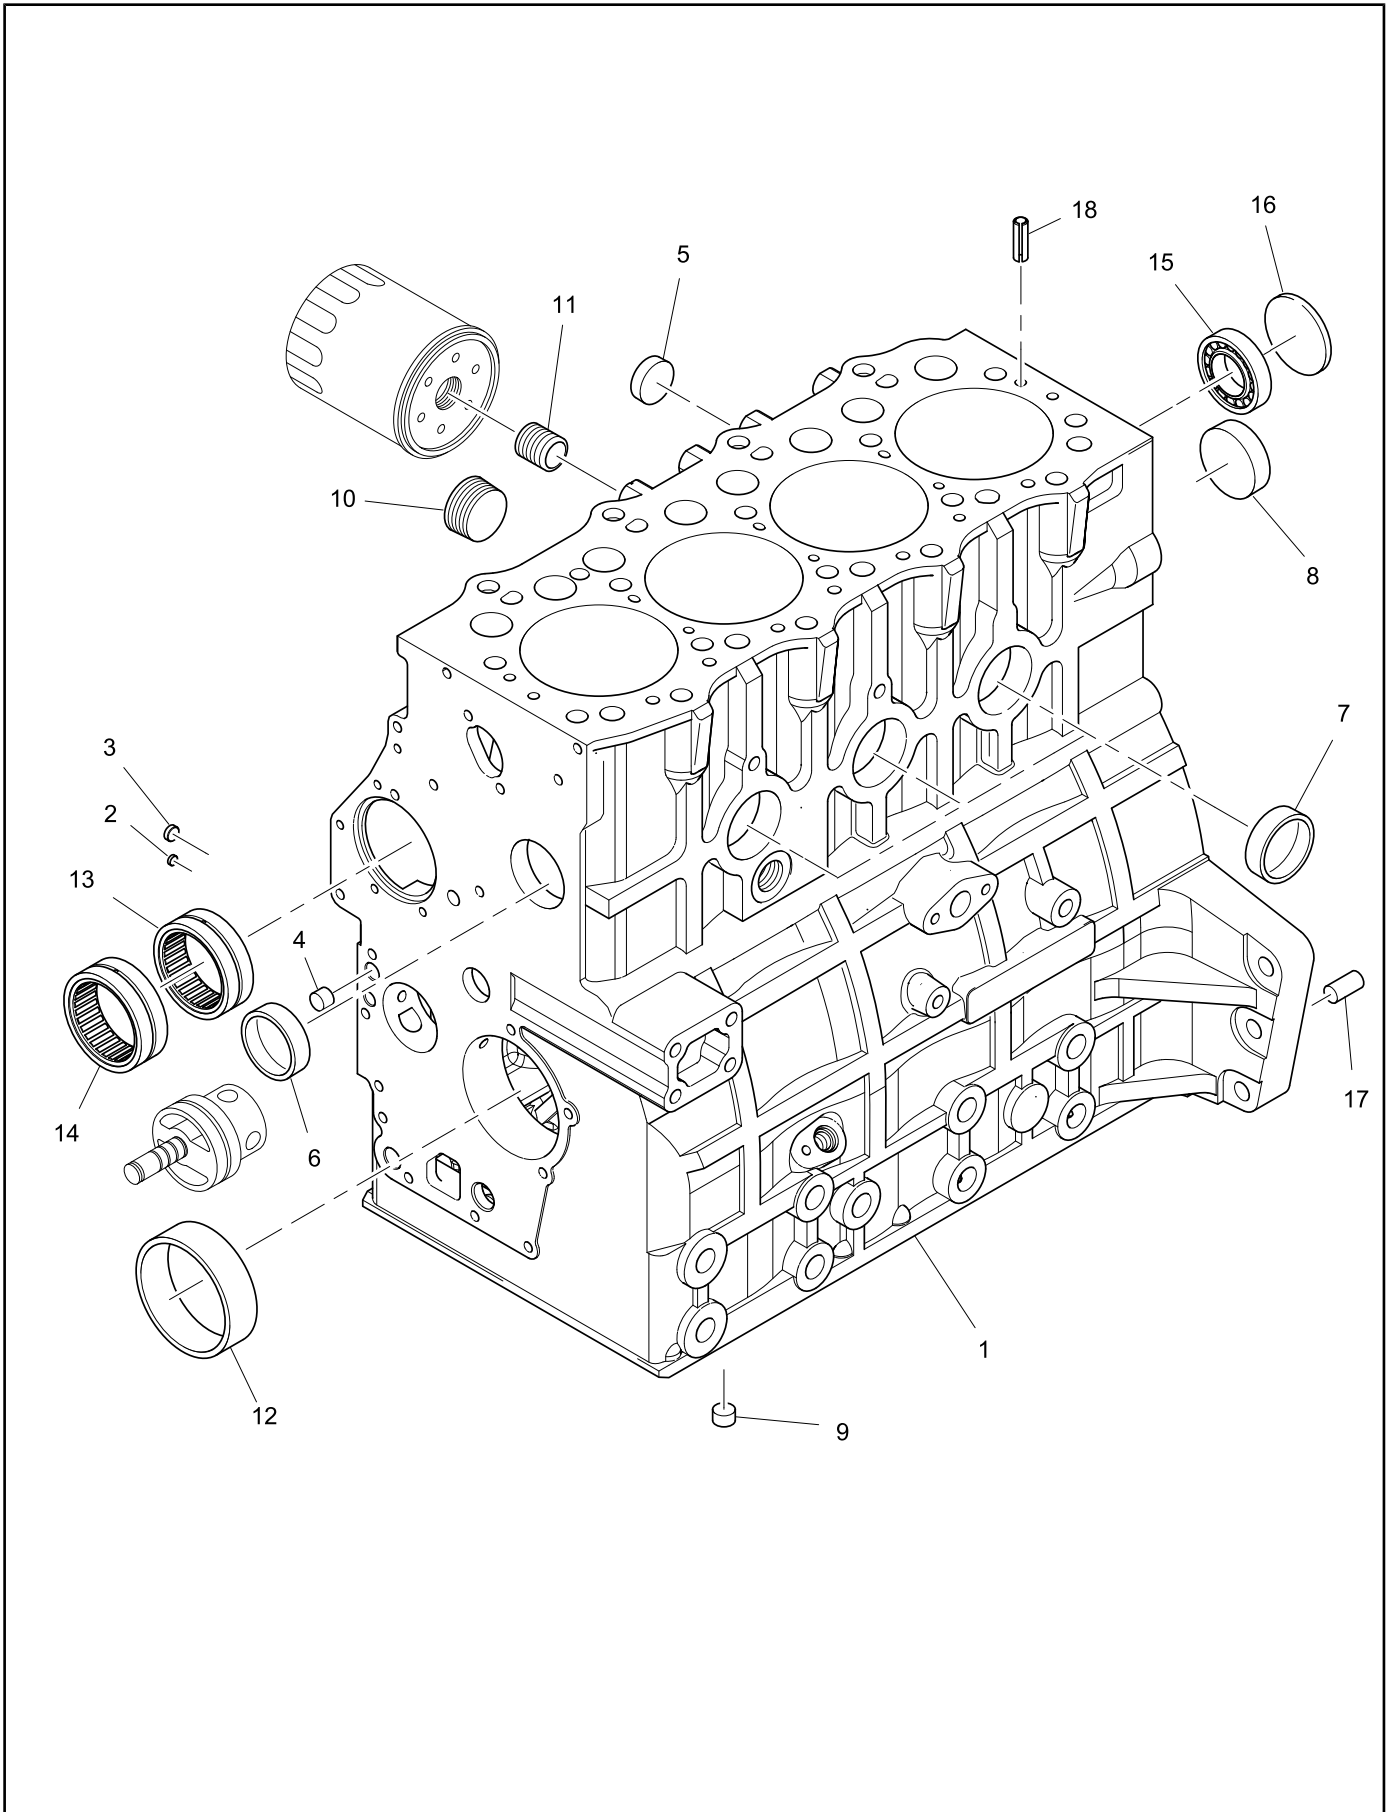 

Cylinder Block	Plate A
	5412238


Item	Part No.	References	Qty.	Description	Notes
1			1	CYLINDER BLOCK ASSEMBLY	(1)
2	198466940		4	PLUG	
3	198466010		3	PLUG	
4	198466020		2	PLUG	
5	064210025	↖	2	PLUG	
6	064209055		1	PLUG	
7	064209055		3	PLUG	
8	064209055		1	PLUG	
9	198466920		2	PLUG	
10	T420246		1	PLUG	
11	140546020		1	CONNECTION	
12	198517222	Ⓢ	1	BUSH	
13	042309017		1	NEEDLE BEARING	
14	042309018		1	NEEDLE BEARING	
15	040106203		1	BALL BEARING	
16	064100045		1	PLUG	
17	030501025		2	DOWEL	
18	T30309005		2	SPRING PIN	
Service Options					
12	198517226	⅜ (-)0.25MM	1	BUSH	
12	198517229	⅜ (-)0.50MM	1	BUSH	

Footnotes	
(1)	SERVICE BY COMPLETE ENGINE

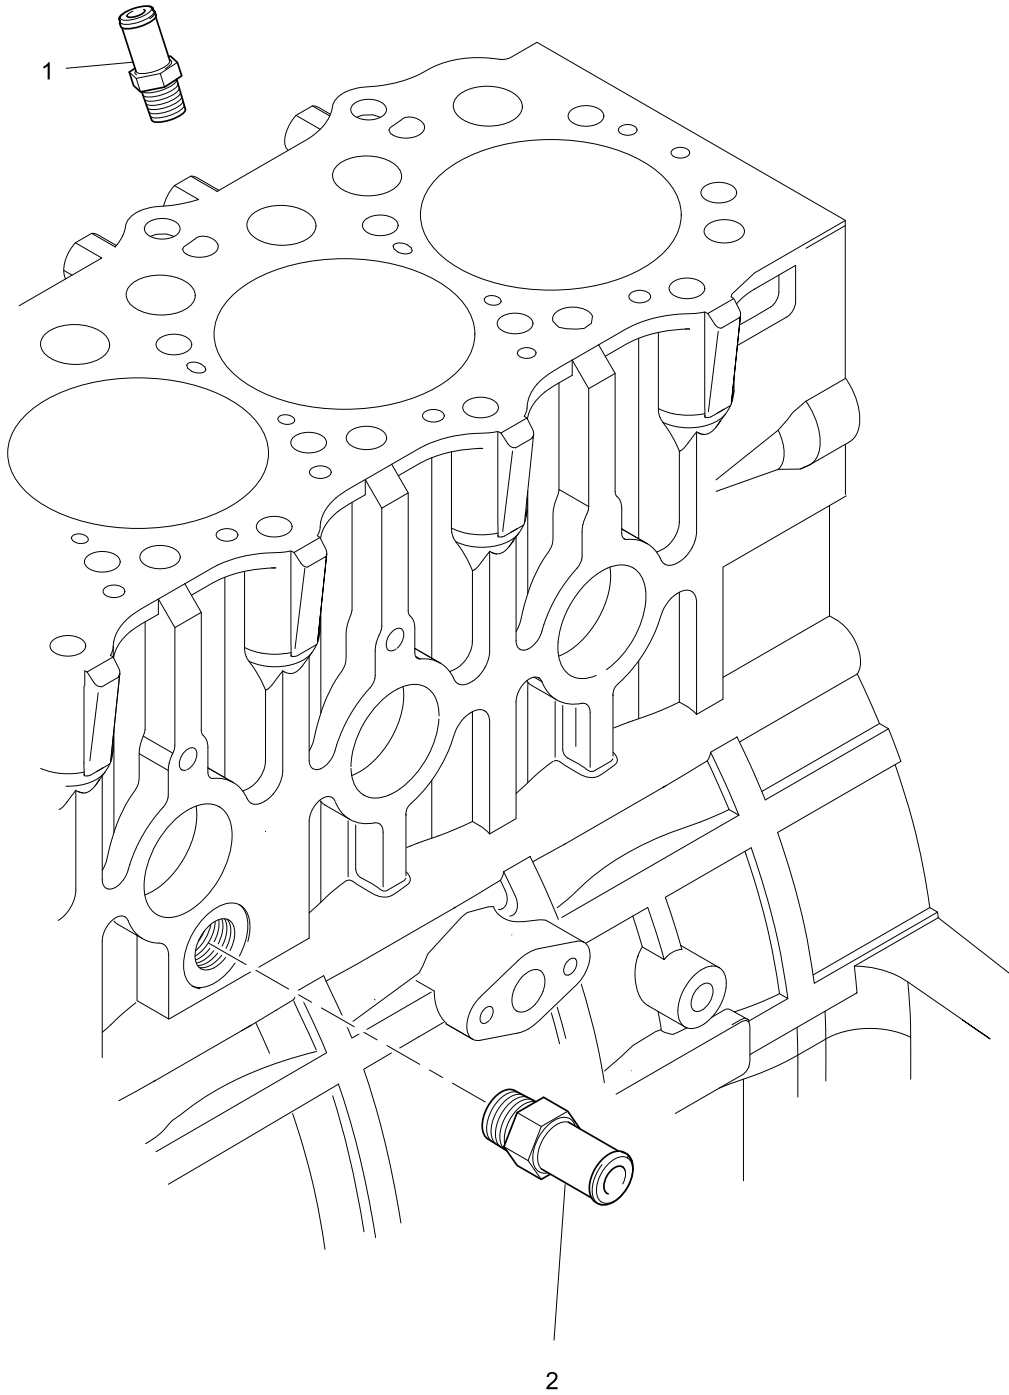 

Cylinder Block	Plate B
	5412238


Item	Part No.	References	Qty.	Description	Notes
1	340674010		1	ADAPTOR	
2	198487890		1	CONNECTION	

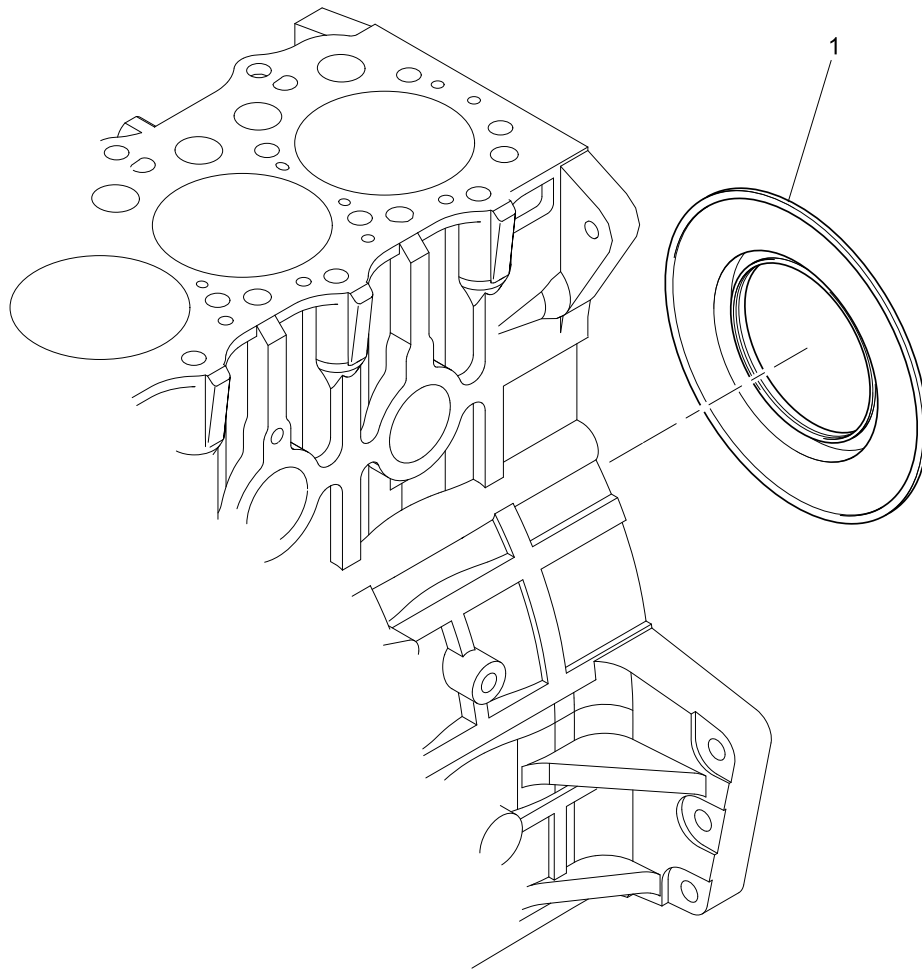 

Rear End Oil Seal	Plate A
	5412238


Item	Part No.	References	Qty.	Description	Notes
1	050209083		1	SEAL - REAR END OIL	

 Footnotes

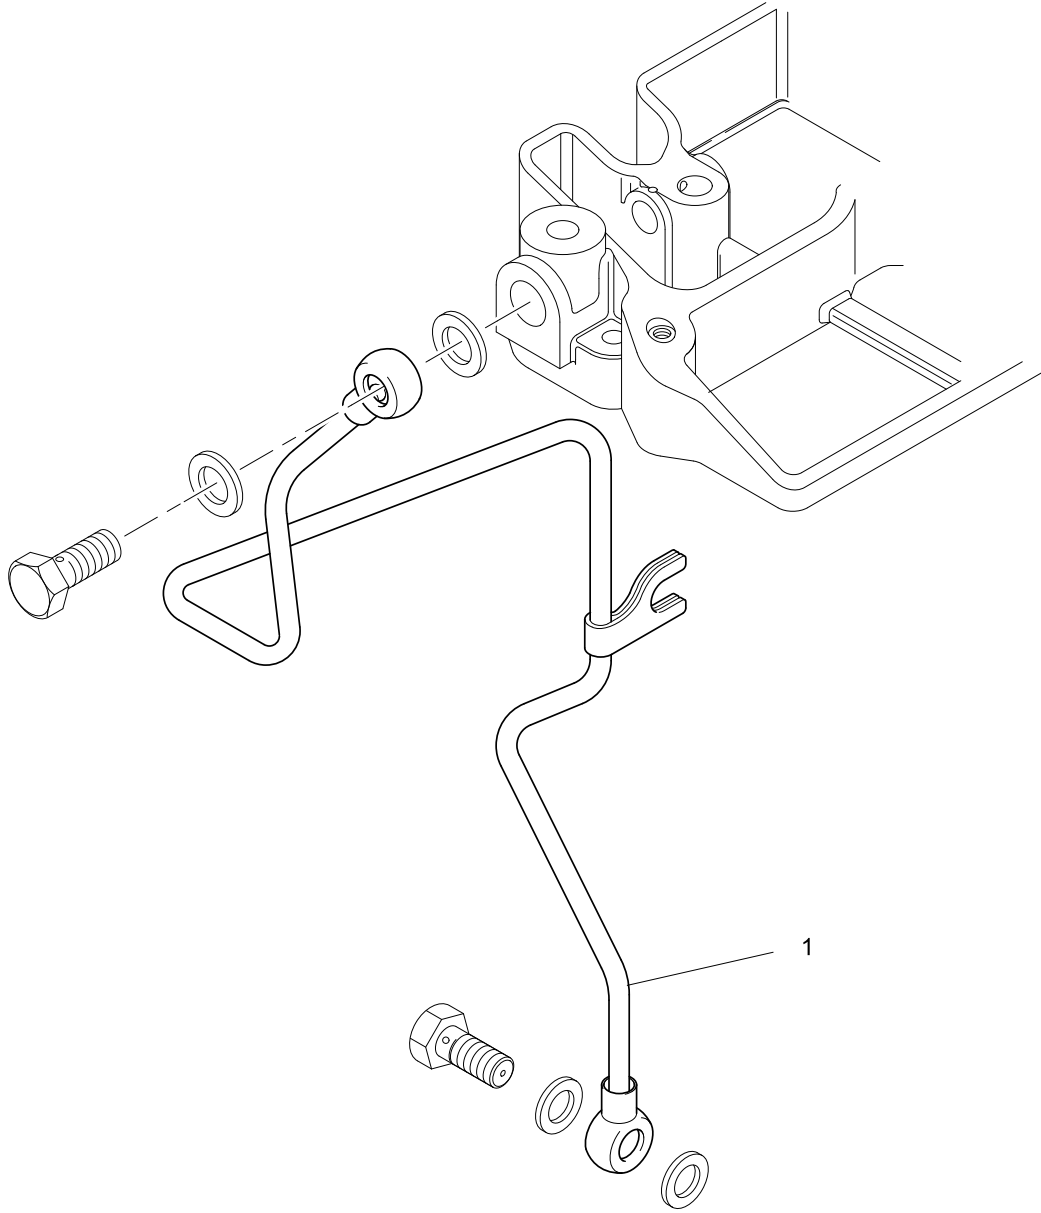


Pipes	Plate A
	5412238

Item	Part No.	References	Qty.	Description	Notes
1	140607720		1	PIPE - OIL	

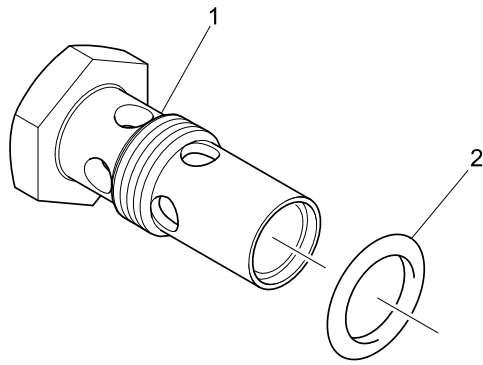 

 
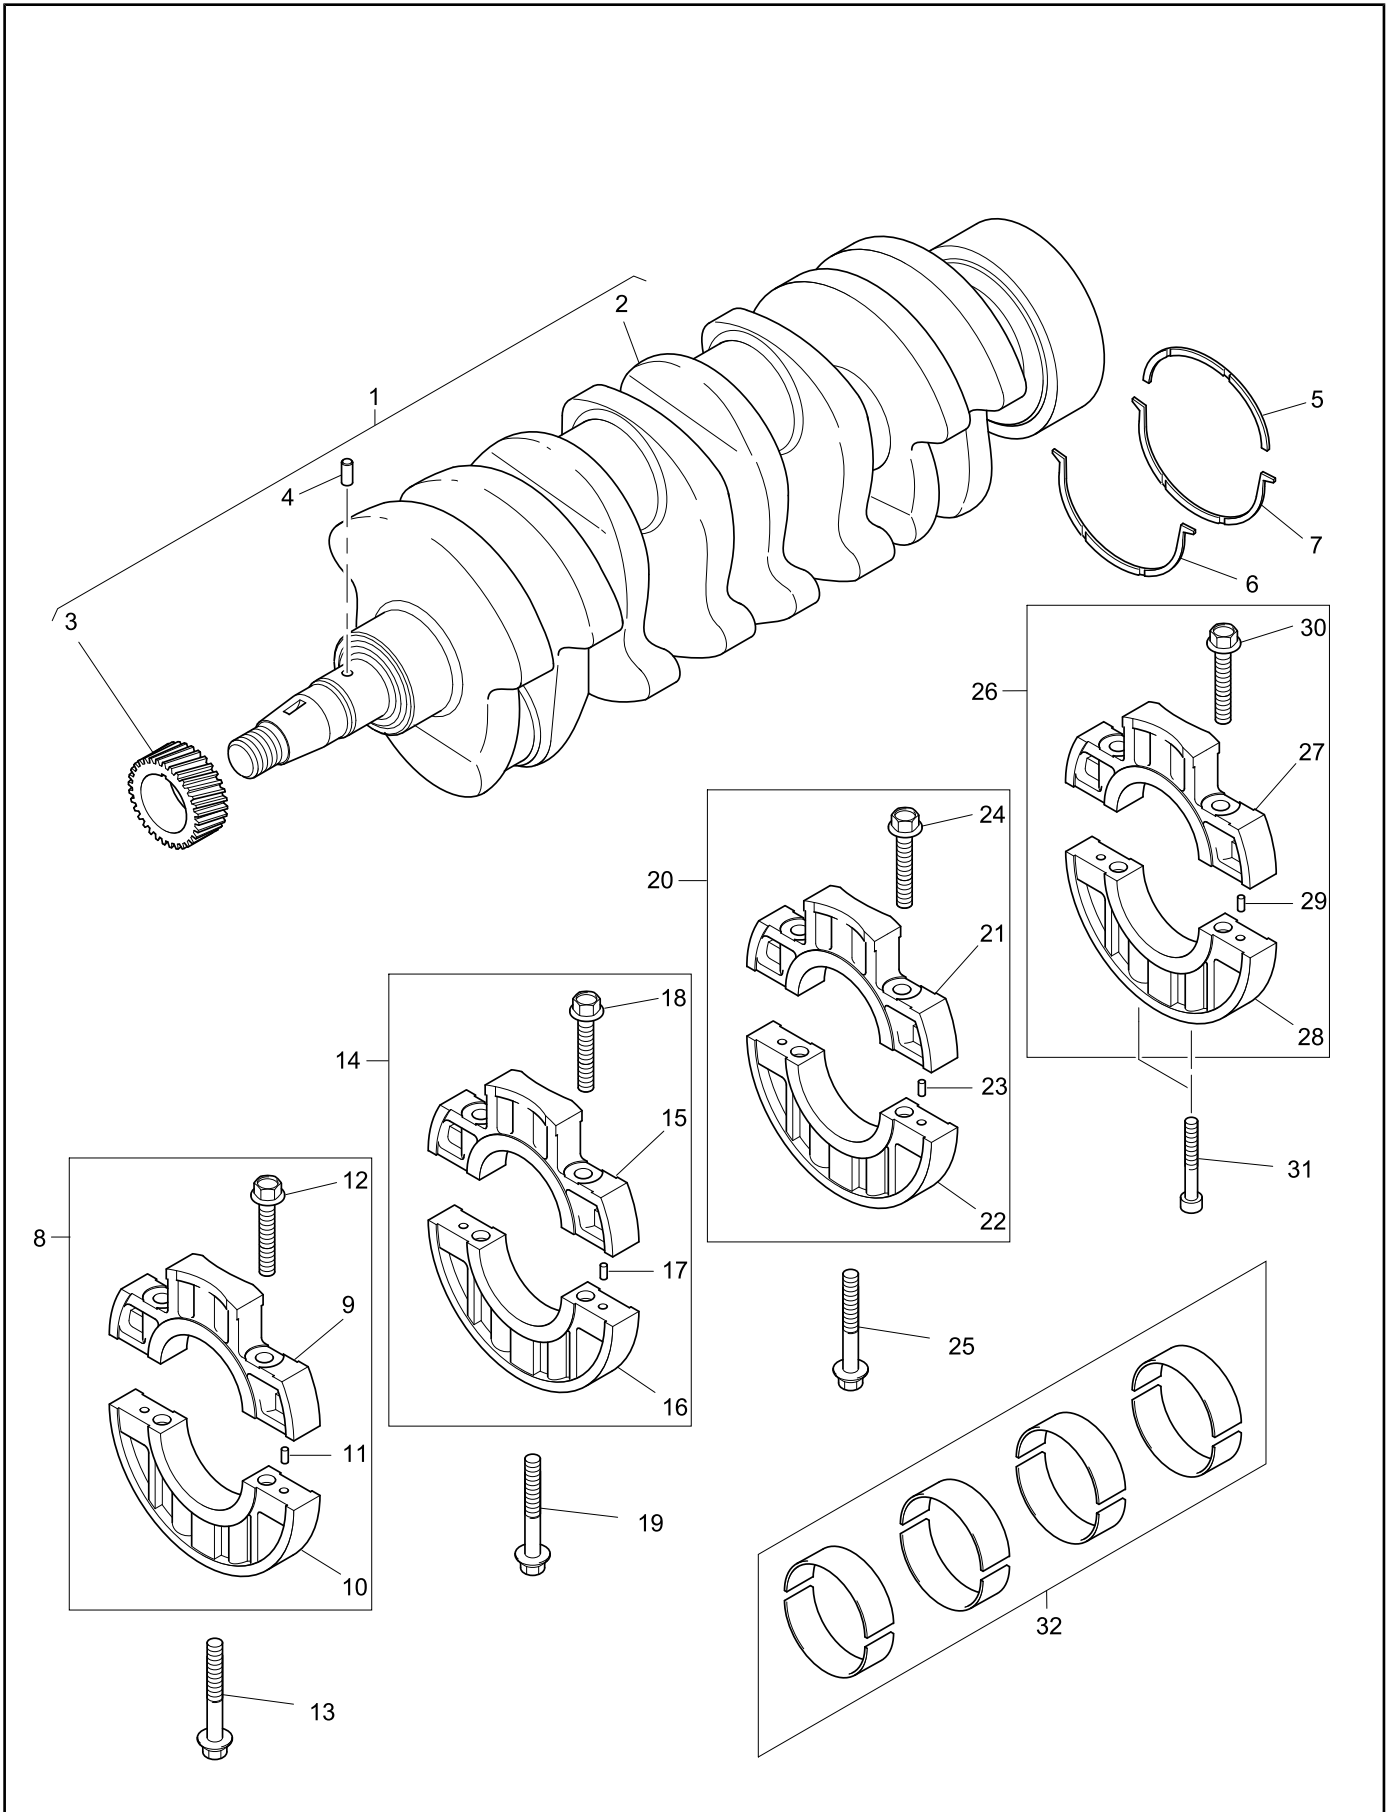 
Relief Valve	Plate A
	5412238

Item	Part No.	References	Qty.	Description	Notes
1	140036220		1	RELIEF VALVE	
2	052109078		1	SEAL - O RING	


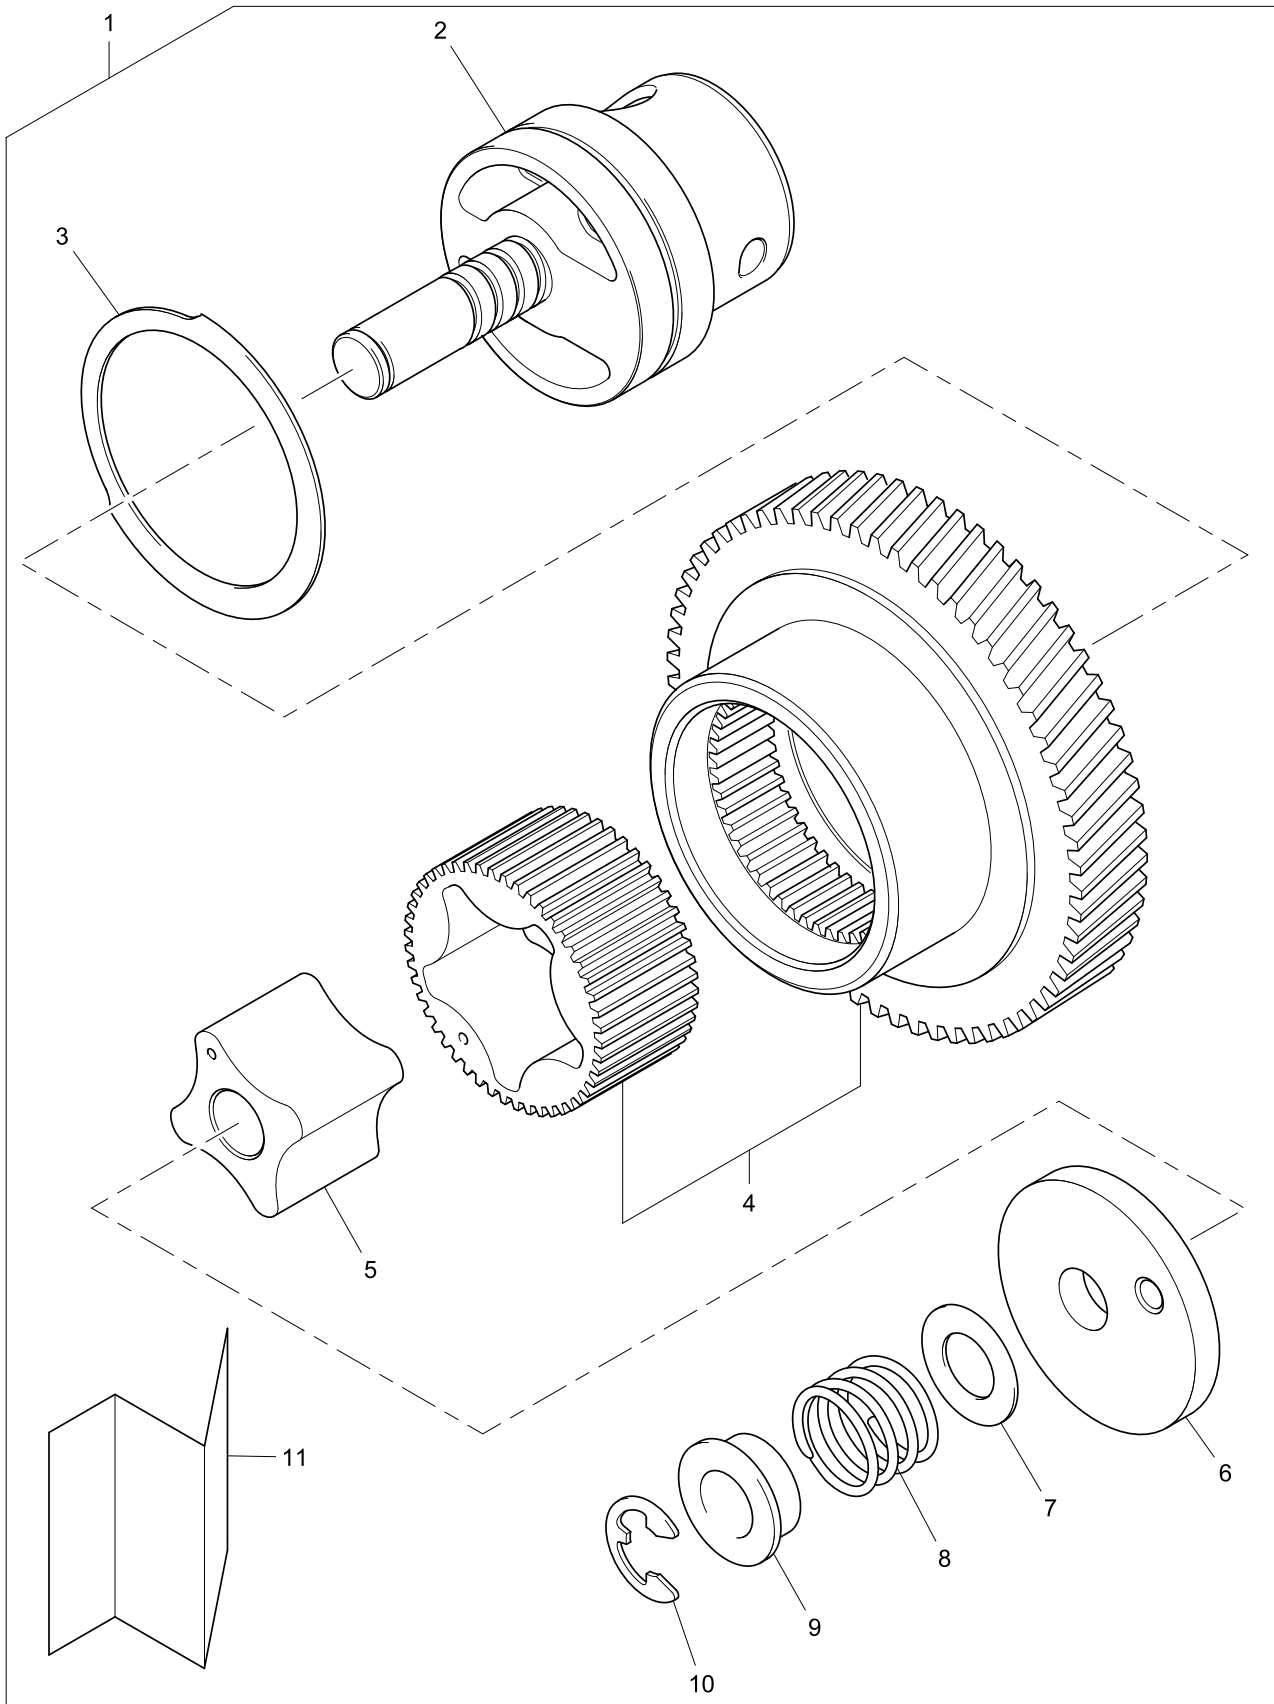


Oil Pump	Plate A
	5412238


Item	Part No.	References	Qty.	Description	Notes
1	T431279		1	OIL PUMP KIT	
2		 ⇒ T431279	1	DRIVE SHAFT	
3	199266270		1	THRUST WASHER	
4		⇒ T431279	1	IDLER GEAR	
5		⇒ T431279	1	ROTOR	
6	140116220		1	COVER	
7	199286340		1	SHIM KIT	
8	198216720		1	SPRING	
9	199236540		1	COLLAR	
10	036800010		1	CIRCLIP	
11			1	LEAFLET	




Item	Part No.	References	Qty.	Description	Notes
1	T430998		1	CRANKSHAFT ASSEMBLY	
2		⇒ T430998	1	CRANKSHAFT	
3	U15276270		1	CRANKSHAFT GEAR	
4	030509020		1	KEY	
5	199266210		1	THRUST WASHER	
6	199266200		1	THRUST WASHER	
7	199266200		1	THRUST WASHER	
8	110156360		1	BEARING HOLDER ASSEMBLY	
9		⇒ 110156360	1	CAP	
10		⇒ 110156360	1	CAP	
11	030500612		2	DOWEL	
12	010109406		2	SCREW	
13	2314J011		1	SCREW	
14	110156370		1	BEARING HOLDER ASSEMBLY	
15		⇒ 110156370	1	CAP	
16		⇒ 110156370	1	CAP	
17	030500612		2	DOWEL	
18	010109406		2	SCREW	
19	2314J011		1	SCREW	
20	110156380		1	BEARING HOLDER ASSEMBLY	
21		⇒ 110156380	1	CAP	
22		⇒ 110156380	1	CAP	
23	030500612		2	DOWEL	
24	010109406		2	SCREW	
25	2314J011		1	SCREW	
26	110156390		1	BEARING HOLDER ASSEMBLY	
27		⇒ 110156390	1	CAP	
28		⇒ 110156390	1	CAP	
29	030500612		2	DOWEL	
30	010109406		2	SCREW	
31	010700860		2	BOLT	
32	U5MB0025	↔	1	MAIN BEARING KIT	
Service Options					
32	U5MB0025A	↔ (-) 0.25MM	1	MAIN BEARING KIT	

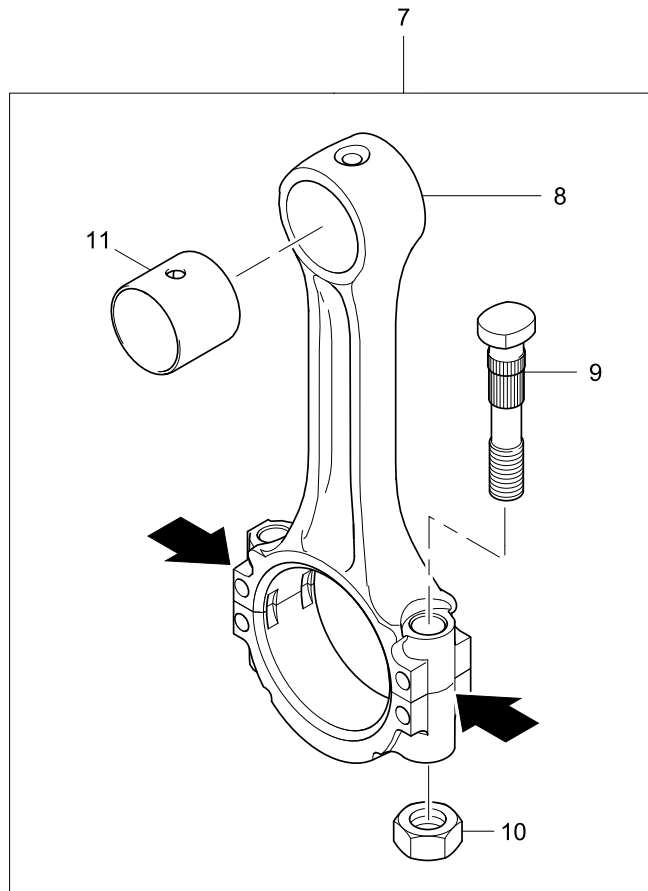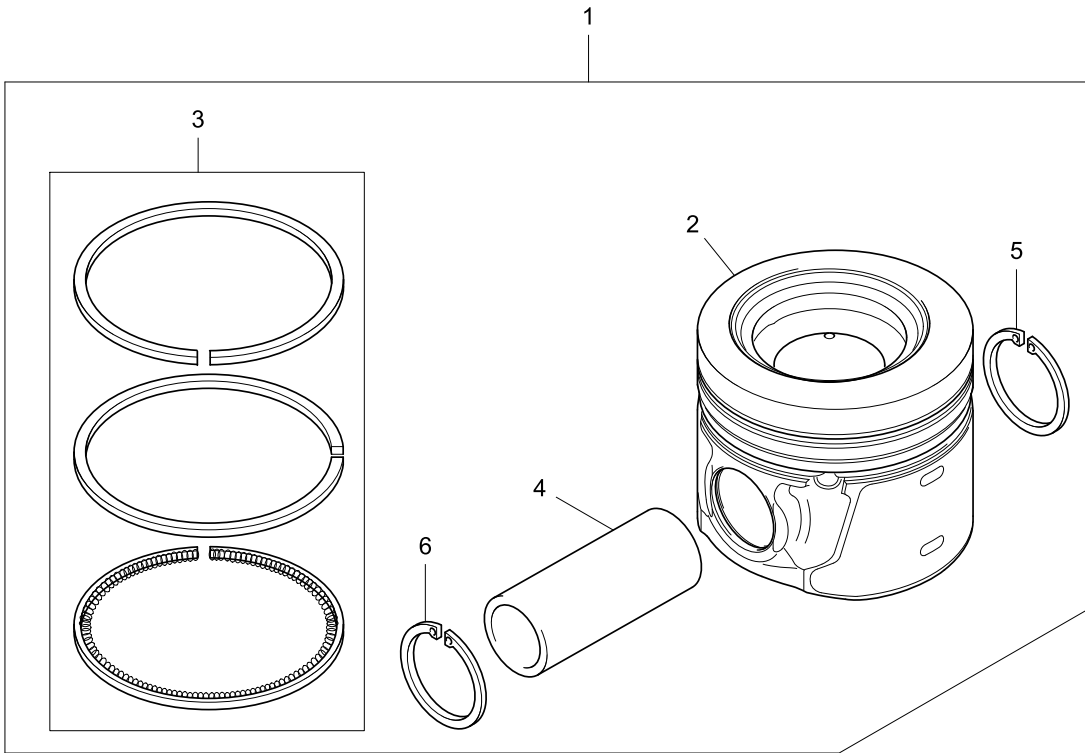  


Item	Part No.	References	Qty.	Description	Notes
1	T432028		4	PISTON AND RING KIT	
2		⇒ T432028	1	PISTON	
3	T432033		1	PISTON RING KIT	
4	T432047		1	GUDGEON PIN	
5	036500028		1	CIRCLIP	
6	036500028		1	CIRCLIP	
7	115026390		4	CON ROD ASSEMBLY	
8		⇒ 115026390	1	CON ROD	
9	115176140		2	CON ROD BOLT	
10	020109120		2	CON ROD NUT	
11	198517645		1	BUSH	

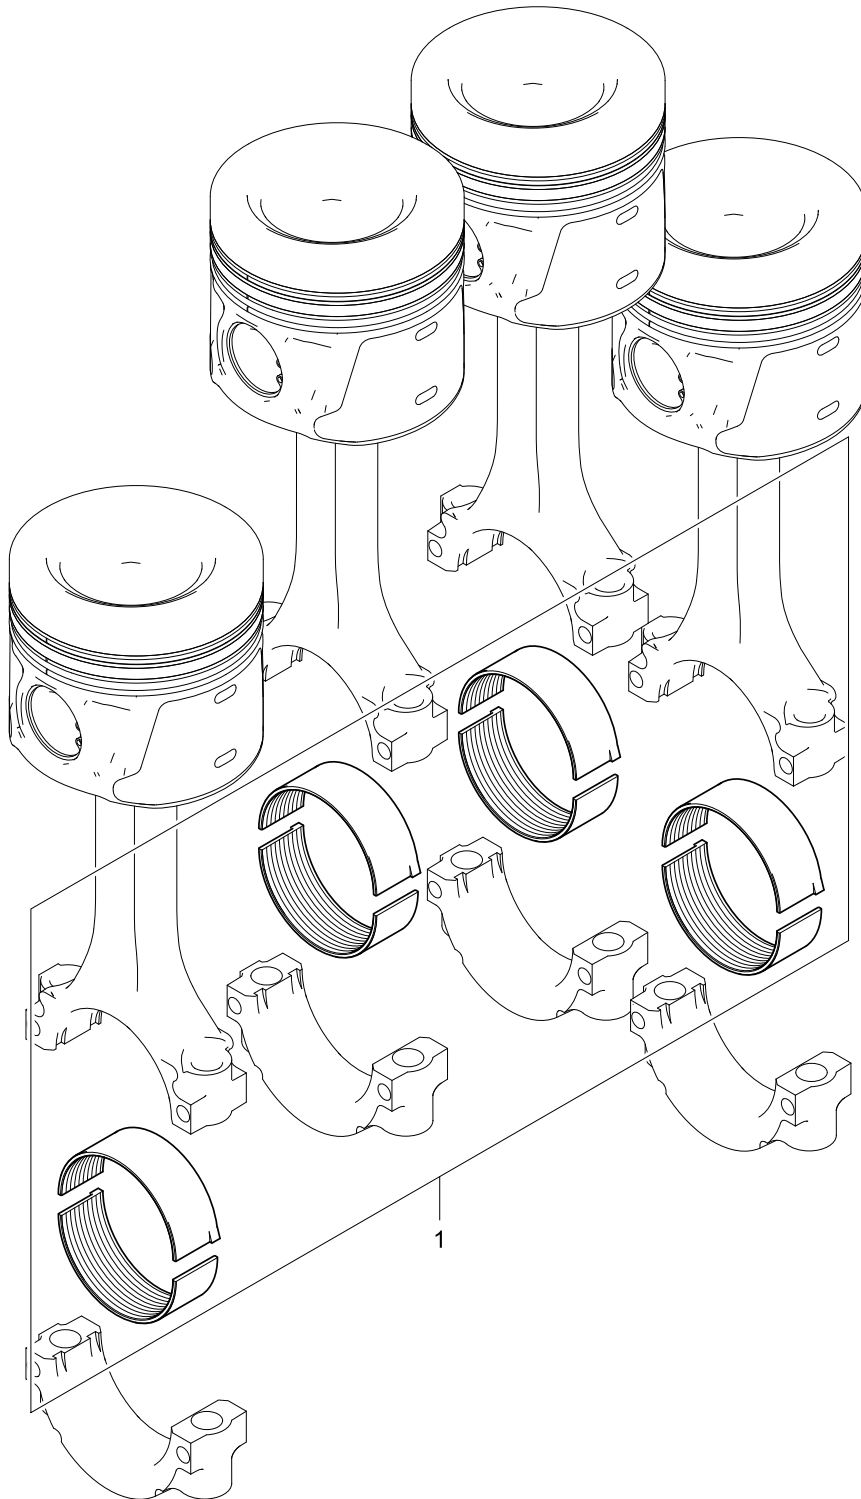 


Pistons & Connecting Rods	Plate B
	5412240

Item	Part No.	References	Qty.	Description	Notes
1	T402620		1	BIG END BEARING KIT	
Service Options					
1	U5ME0030A	$\frac{+}{-} (-)0.25\text{MM}$	1	BIG END BRG KIT - U/S	
1	U5ME0030B	$\frac{+}{-} (-)0.50\text{MM}$	1	BIG END BRG KIT - U/S	

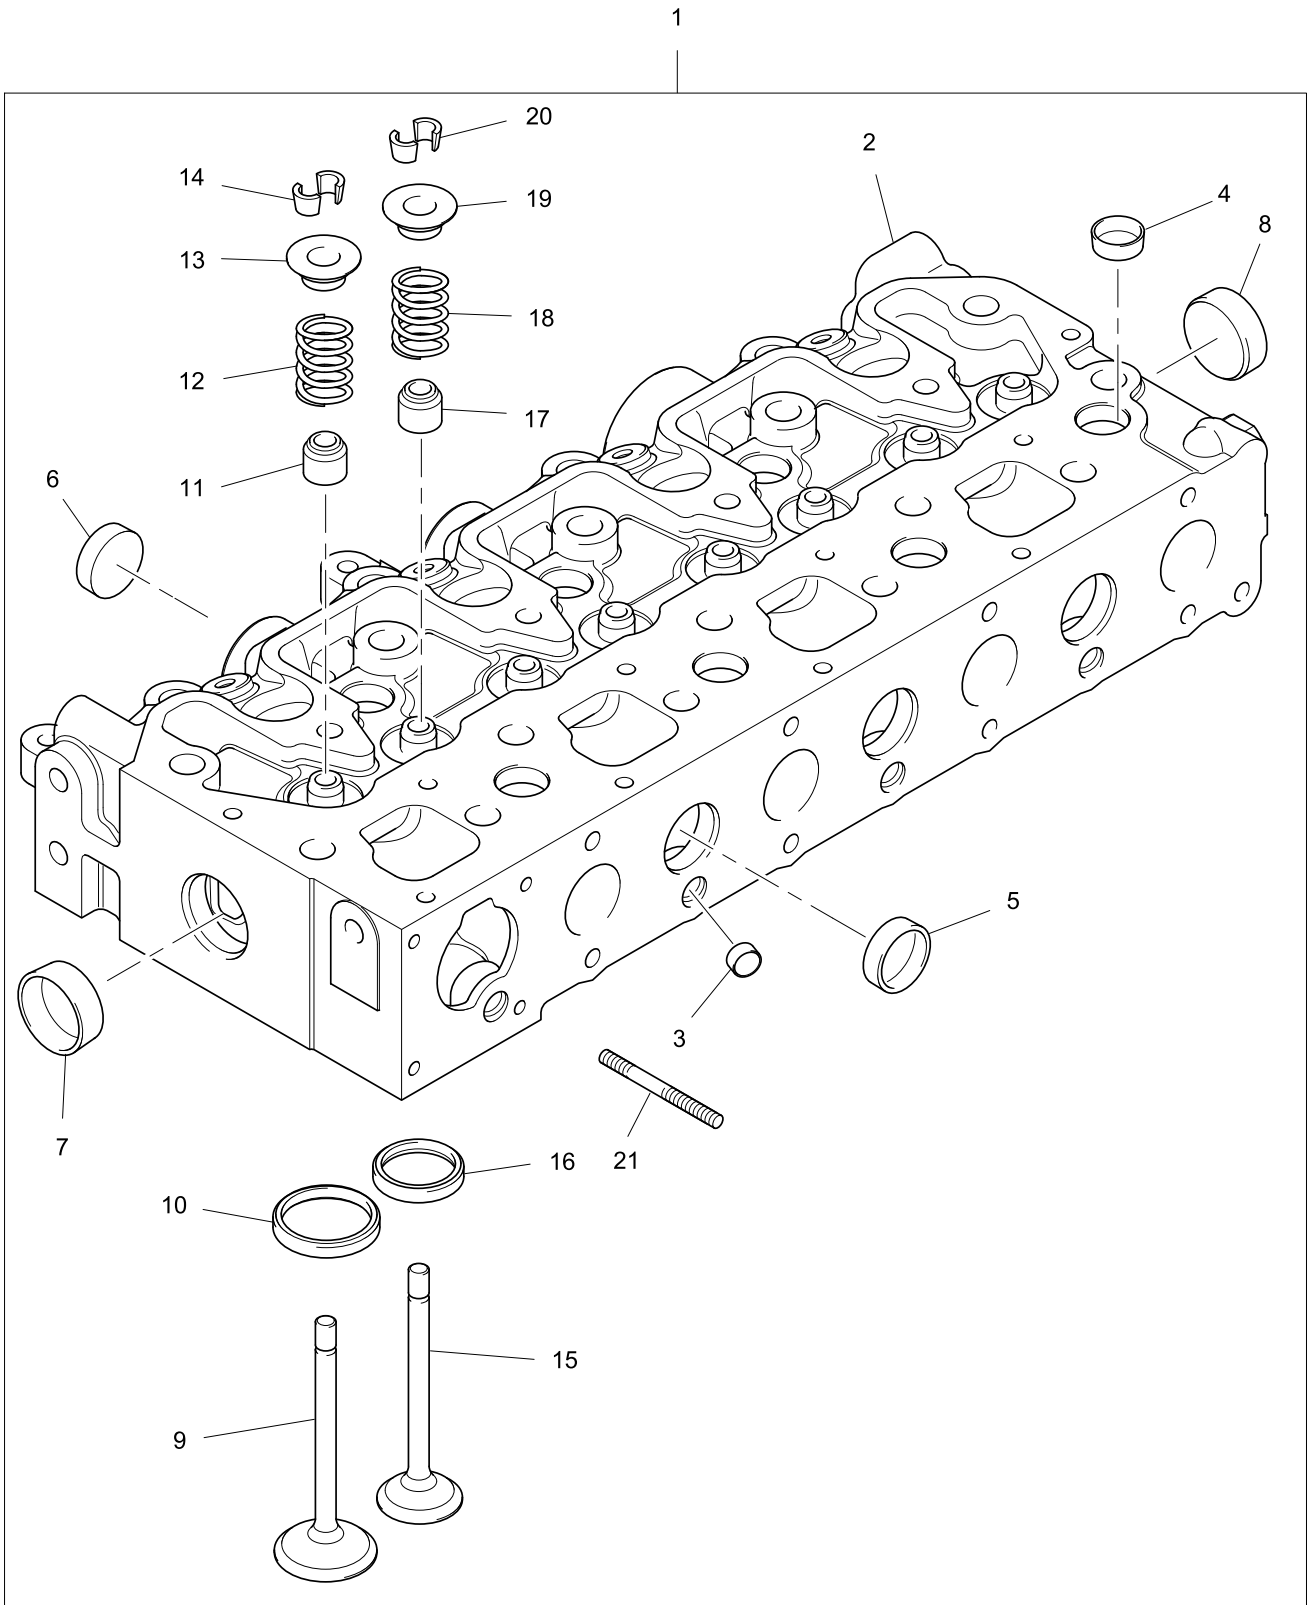 


Cylinder Head	Plate A
	5285595


Item	Part No.	References	Qty.	Description	Notes
1	T432006		1	CYLINDER HEAD ASSEMBLY	
2		⇒ T432006	1	CYLINDER HEAD	
3	064210010	↔	3	PLUG	
4	064210018	↔	7	PLUG	
5	064210025	↔	3	PLUG	
6	064210025	↔	2	PLUG	
7	064210030	↔	1	PLUG	
8	064210030	↔	1	PLUG	
9	U20166400		4	INTAKE VALVE	
10	110136560		4	VALVE SEAT INSERT	
11	U20406140		4	SEAL - VALVE STEM	
12	198217470	↔	4	VALVE SPRING	
13	120186080		4	CAP	
14	120226070		4	VALVE COLLET	
15	U20176420		4	EXHAUST VALVE	
16	110136570		4	VALVE SEAT INSERT	
17	U20406140		4	SEAL - VALVE STEM	
18	198217470	↔	4	VALVE SPRING	
19	120186080		4	CAP	
20	120226070		8	VALVE COLLET	
21	012110655		2	STUD	

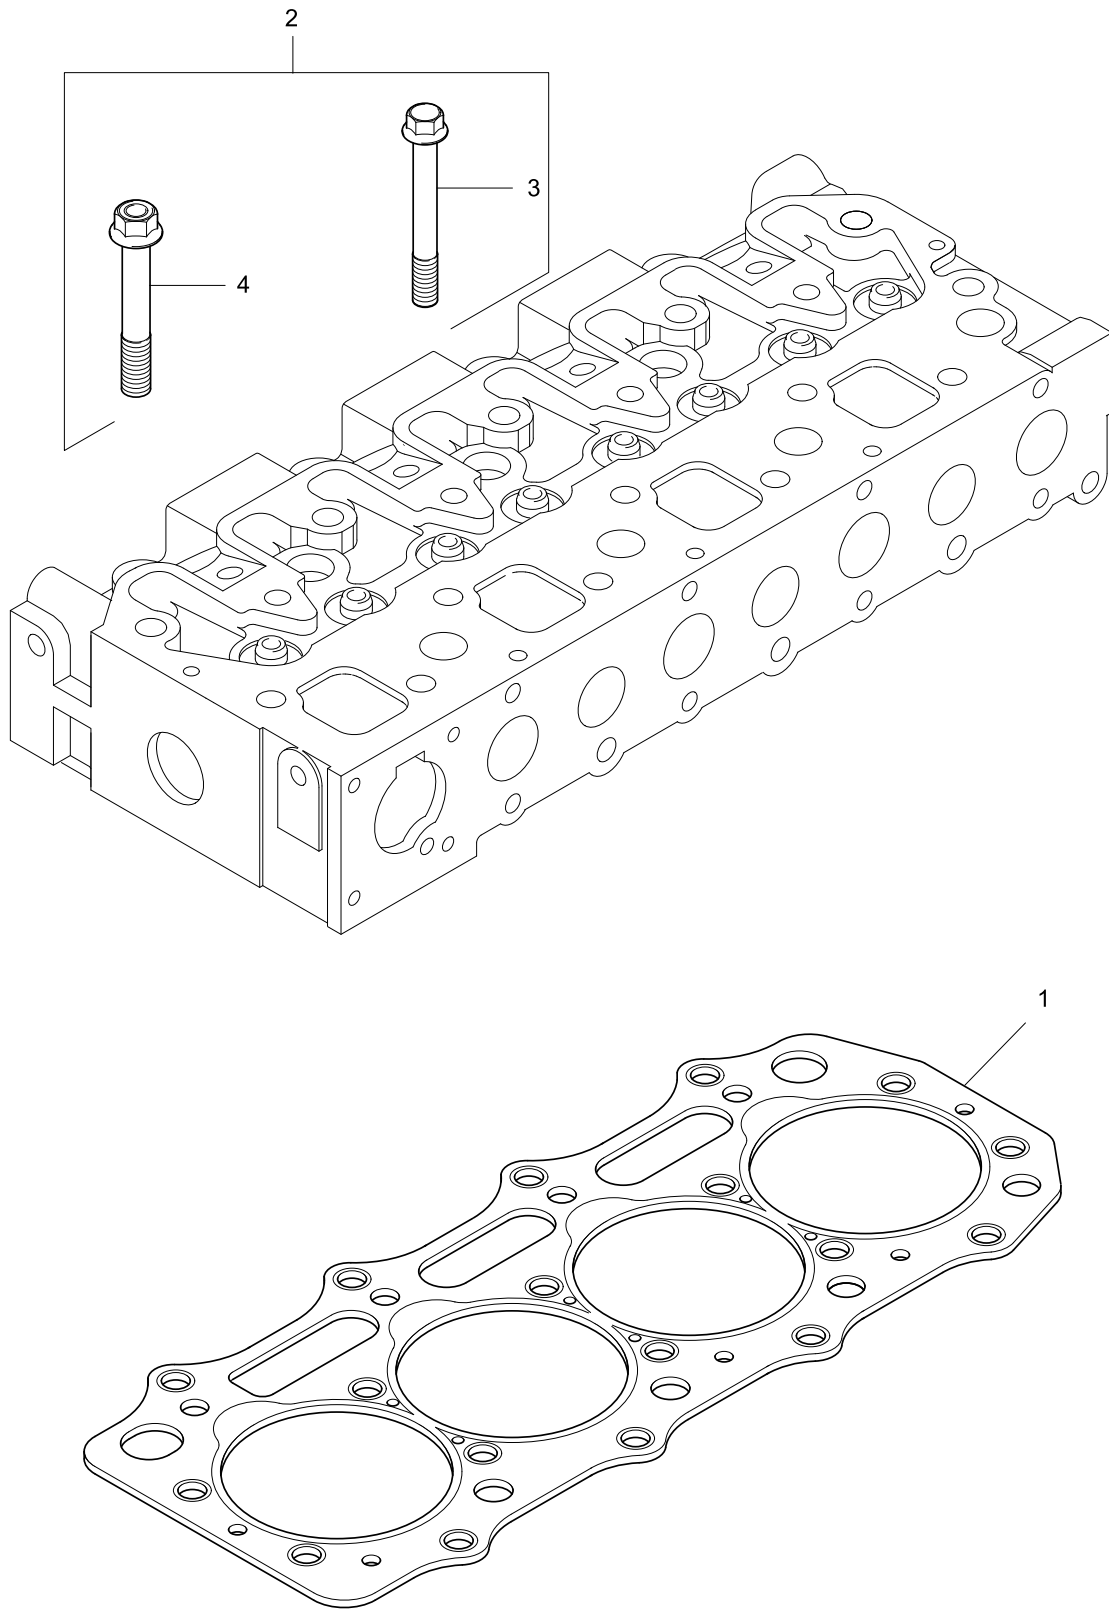 

 
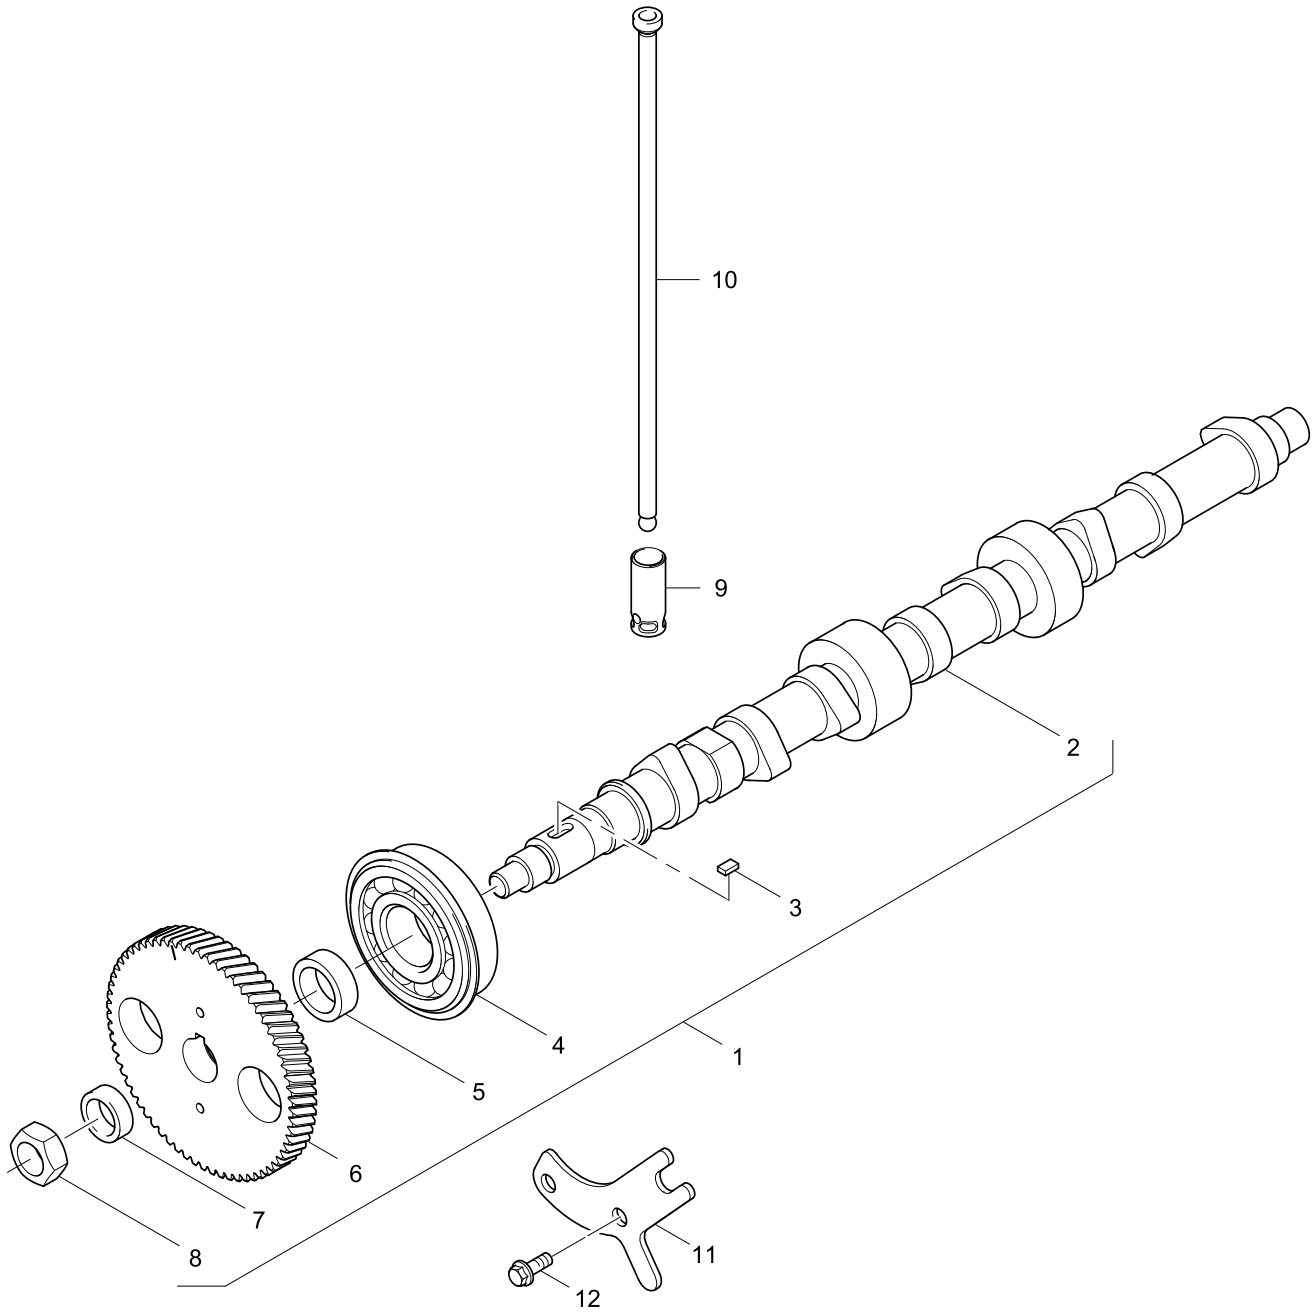 
Cylinder Head	Plate B
	5285595

Item	Part No.	References	Qty.	Description	Notes
1		Ⓢ	1	GASKET - CYLINDER HEAD	
2	T427106		1	CYLINDER HEAD BOLT	
3	T432083		14	BOLT	
4	T432082		4	BOLT	
Service Options					
1	111147771	⚖ 1.3MM	1	GASKET - CYLINDER HEAD	1.3MM
1	111147761	⚖ 1.2MM	1	GASKET - CYLINDER HEAD	1.2MM
1	111147751	⚖ 1.1MM	1	GASKET - CYLINDER HEAD	1.1MM
1	111147780	⚖ 1.5MM	1	GASKET - CYLINDER HEAD	1.5MM

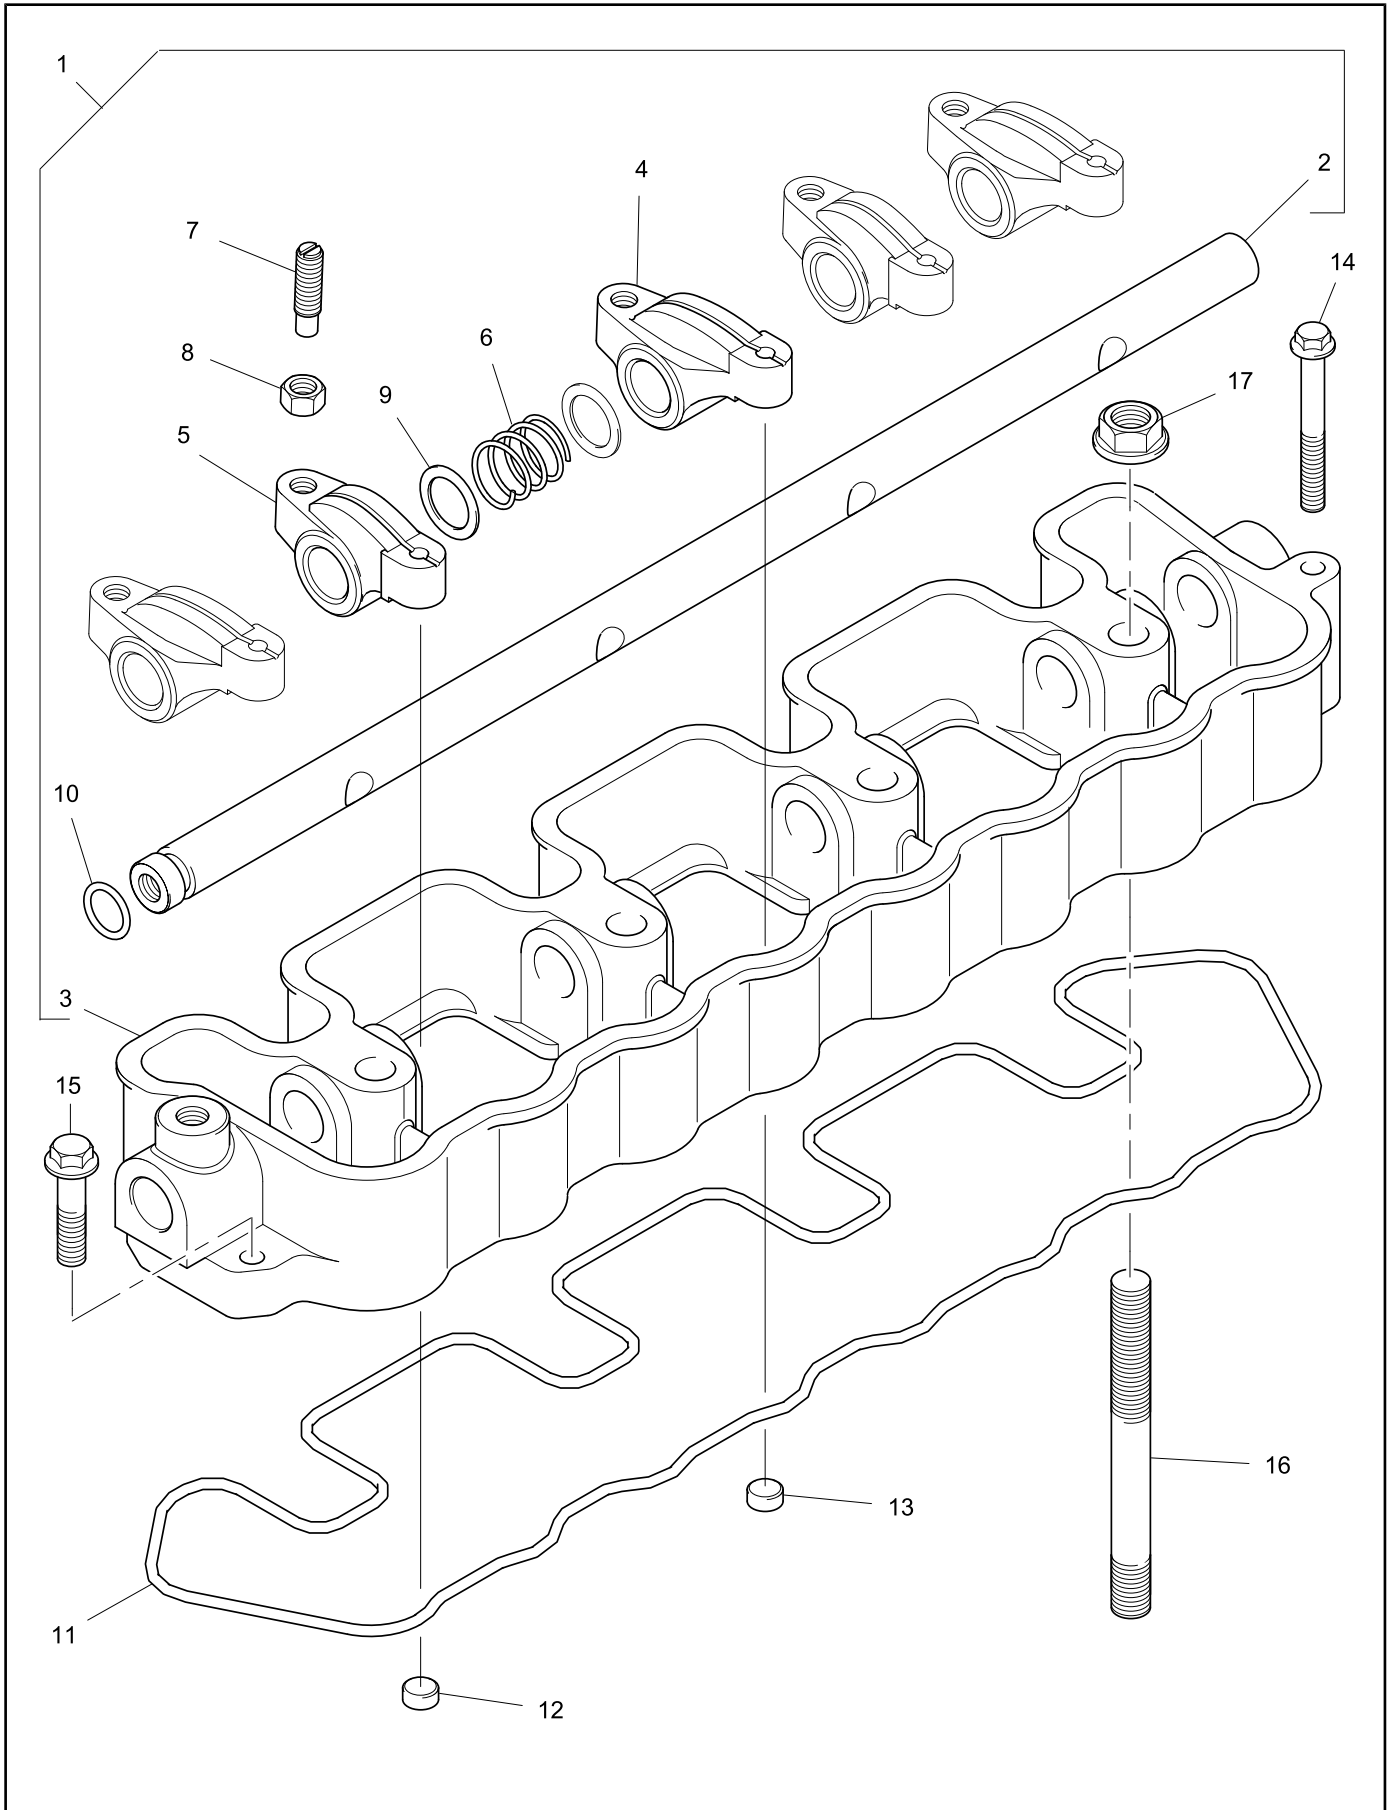

Item	Part No.	References	Qty.	Description	Notes
1	120036393		1	ROCKER BOX ASSEMBLY	
2	120316201		1	ROCKER SHAFT	
3	120346341		1	BRACKET	
4	120356131		4	ROCKER ARM ASSEMBLY	
5	120356141		4	ROCKER ARM ASSEMBLY	
6	198217170		3	ROCKER SHAFT SPRING	
7	199486220		8	SCREW	
8	020109076		8	NUT	
9	199280300		6	WASHER	
10	052109076		1	SEAL - O RING	
11	U20996250		1	SEAL - ROCKER BOX	
12	120216041		4	VALVE SPRING CAP	
13	120216041		4	VALVE SPRING CAP	
14	2314F011		1	SCREW	
15	011310625	 a.	1	SCREW	
16	012109044		4	STUD	
17	023100010		4	NUT	


History					
a.					
	012110625		1	STUD	
15	023100006		1	NUT	
b.					
	120346262		1	BRACKET	



Camshaft	Plate A
	4458627


Item	Part No.	References	Qty.	Description	Notes
1	120027150		1	CAMSHAFT	
2		⇒ 120027150	1	CAMSHAFT	
3	034100508		1	KEY	
4	040109057		1	BALL BEARING	
5	199216360		1	SPACER	
6	U20276230	ⓐ b.	1	CAMSHAFT GEAR	
7	U99216320		1	SPACER	
8	020800016		1	NUT	
9	U20116160	ⓐ c.	8	TAPPET	
10	120456311	ⓐ a. c.	8	PUSHROD	
11	199566750		1	PLATE	
12	2314F001	ⓐ c.	2	SCREW	

History					
a.					
10	120456310		8	PUSHROD	
b.					
6	120276230		1	CAMSHAFT GEAR	
c.					
9	U20116160		1	TAPPET	
10	120456310		1	PUSHROD	
12	2314F001		1	SCREW	

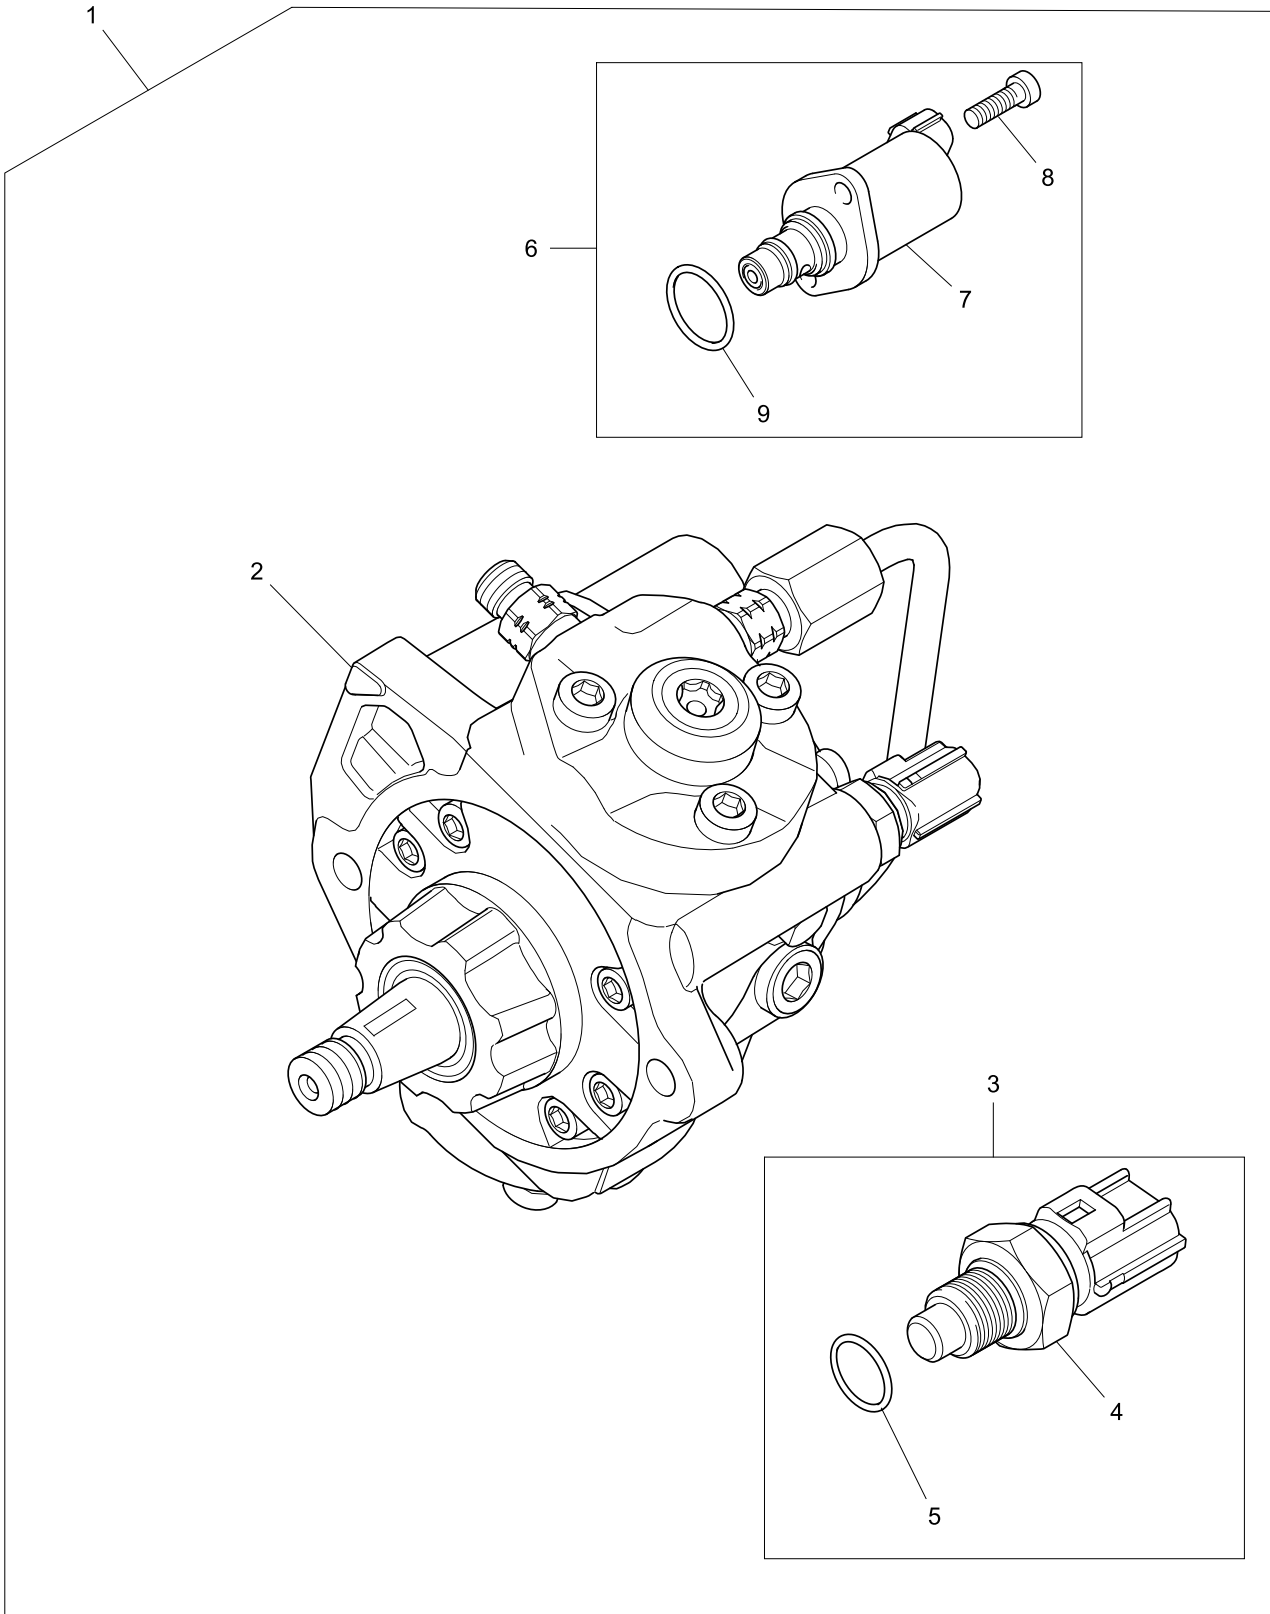 


High Pressure Fuel Pump	Plate A
	5412241

Item	Part No.	References	Qty.	Description	Notes
1	T432111		1	HIGH PRESSURE FUEL PUMP	
2		⇒ T432111	1	HIGH PRESSURE FUEL PUMP	
3	T405451		1	TEMPERATURE SENSOR	
4		⇒ T405451	1	TEMPERATURE SENSOR	
5		⇒ T405451	1	O RING	
6	131296979		1	FUEL INJECTION PUMP KIT	
7		⇒ 131296979	1	VALVE	
8		⇒ 131296979	2	SCREW	
9		⇒ 131296979	1	O RING	

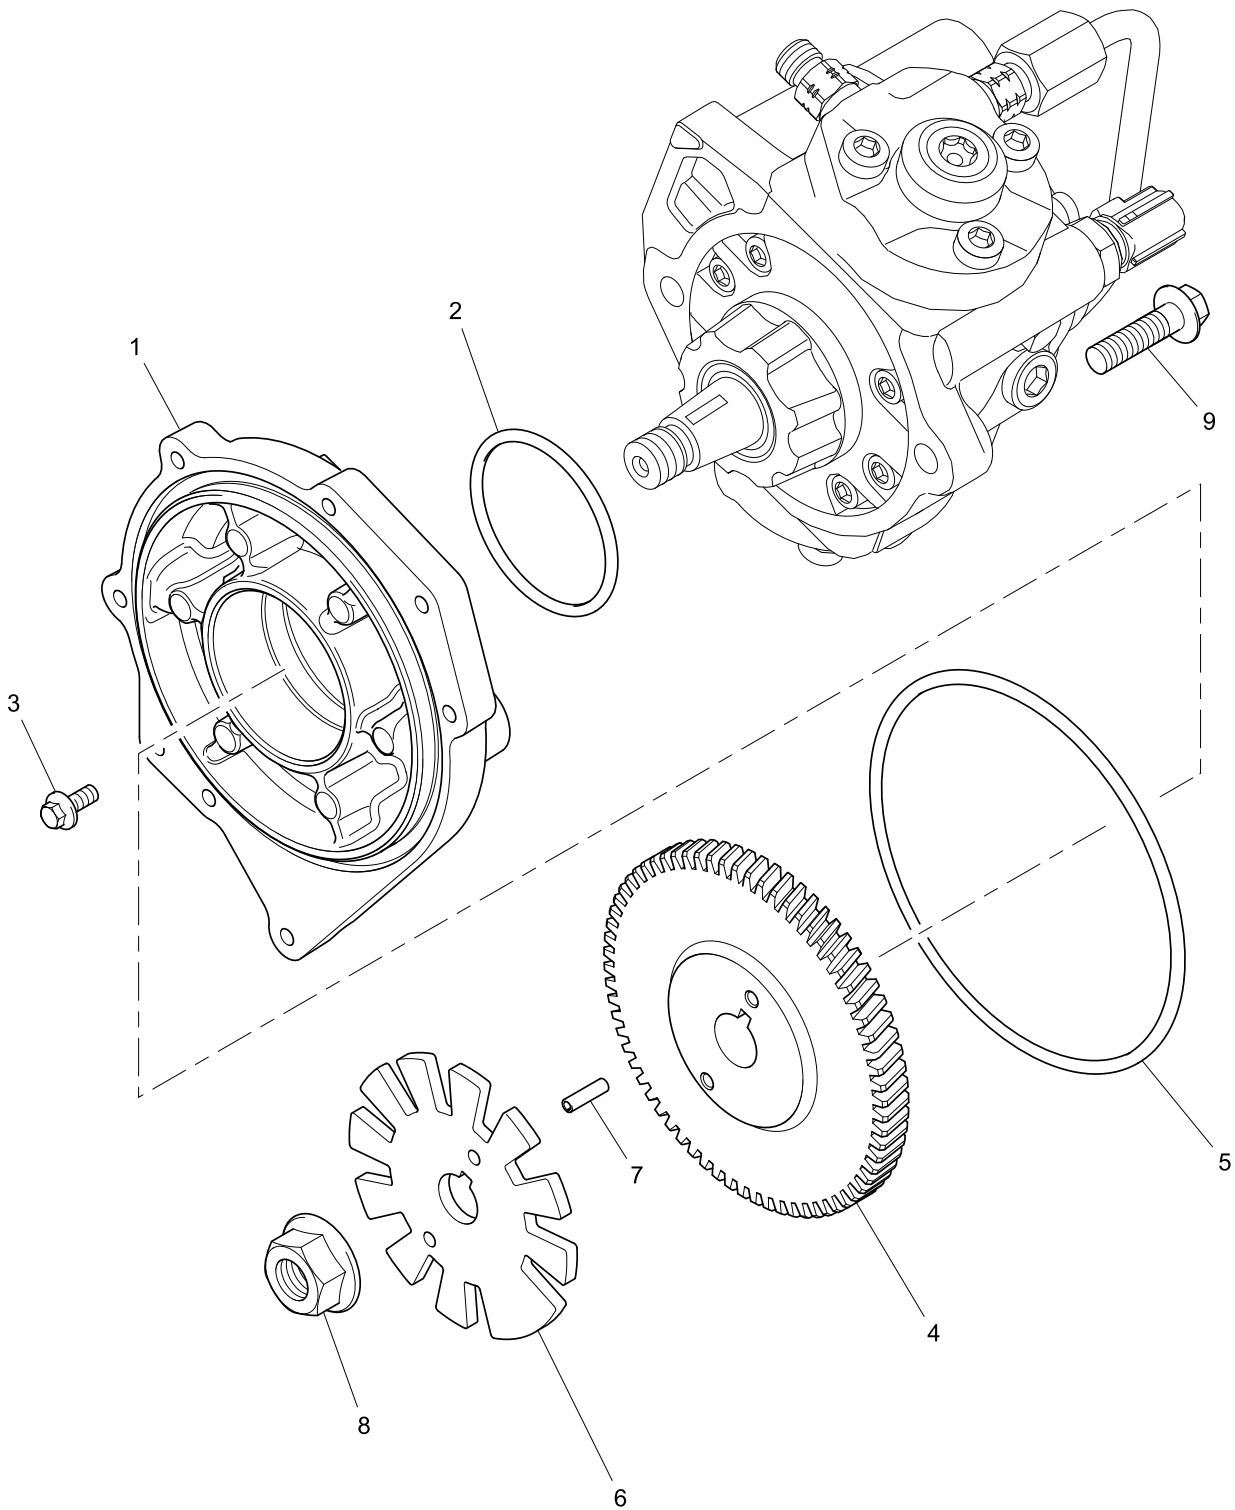 


Item	Part No.	References	Qty.	Description	Notes
1	T428531		1	FLANGE	
2	052400500		1	SEAL	
3	2314F003		2	SCREW	
4	T432046		1	GEAR	
5	052301150		1	SEAL	
6	T432087		1	TIMING DEVICE	
7	030300414		2	PIN	
8	023109011		1	NUT	
9	2314H005		2	SCREW	

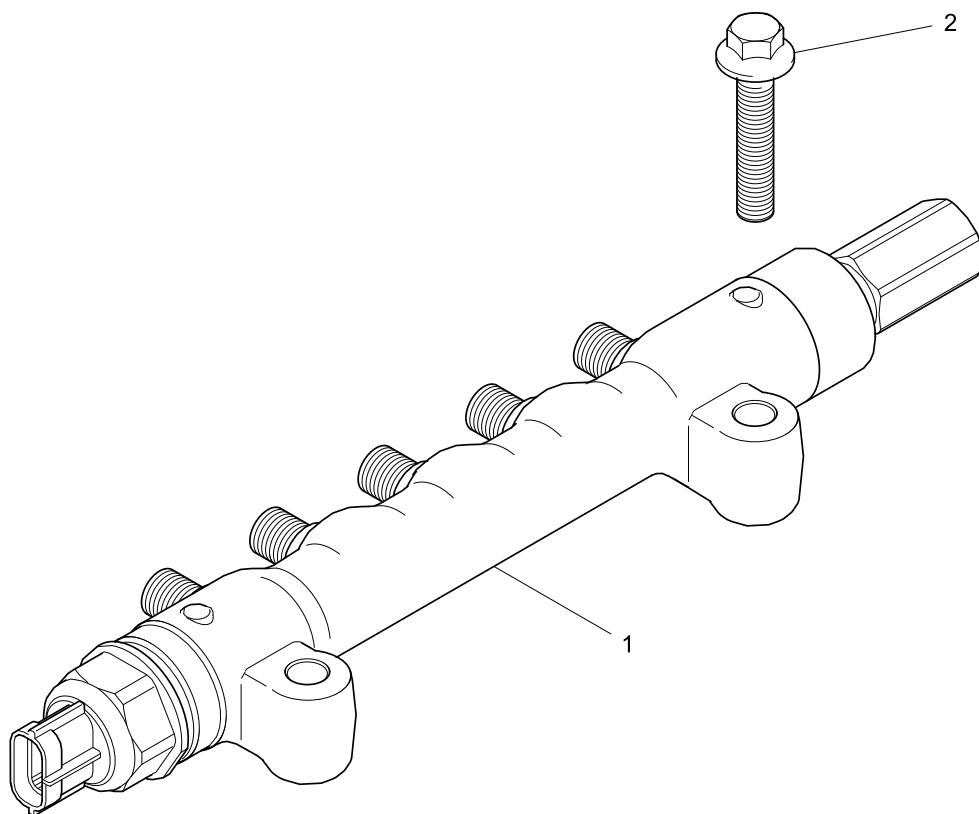 


Fuel Rail	Plate A
	5412241


Item	Part No.	References	Qty.	Description	Notes
1	T432112		1	FUEL RAIL	
2	2314H007		2	SCREW	

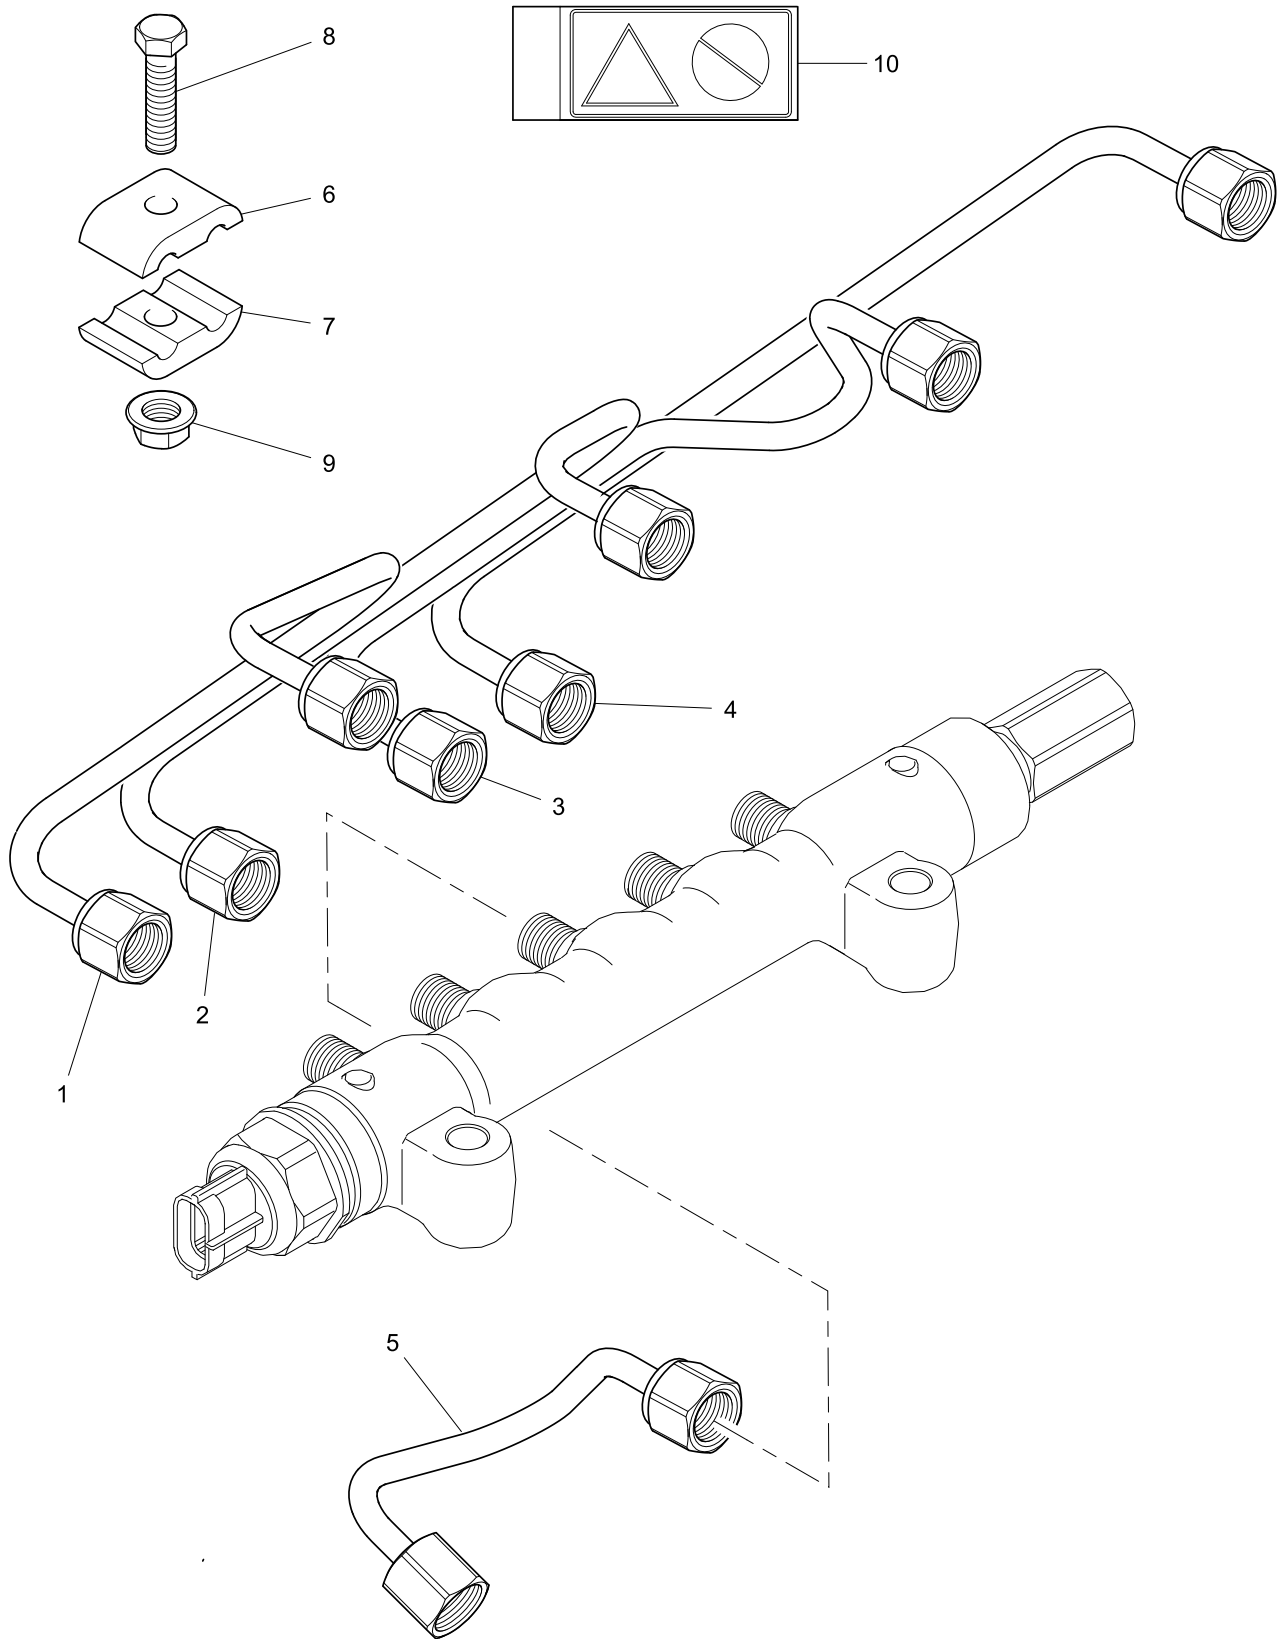 

Item	Part No.	References	Qty.	Description	Notes
1	131501080		1	PIPE - FUEL INJ NO 1 CYL	
2	131501090		1	PIPE - FUEL INJ NO 2 CYL	
3	131501100		1	PIPE - FUEL INJ NO 3 CYL	
4	131501110		1	PIPE - FUEL INJ NO 4 CYL	
5	131501070		1	PIPE - FUEL	
6	199106021		2	CLAMP	
7	199106021		2	CLAMP	
8	010110625		2	SCREW	
9	023100006		2	NUT	
10	T407729		1	LABEL	

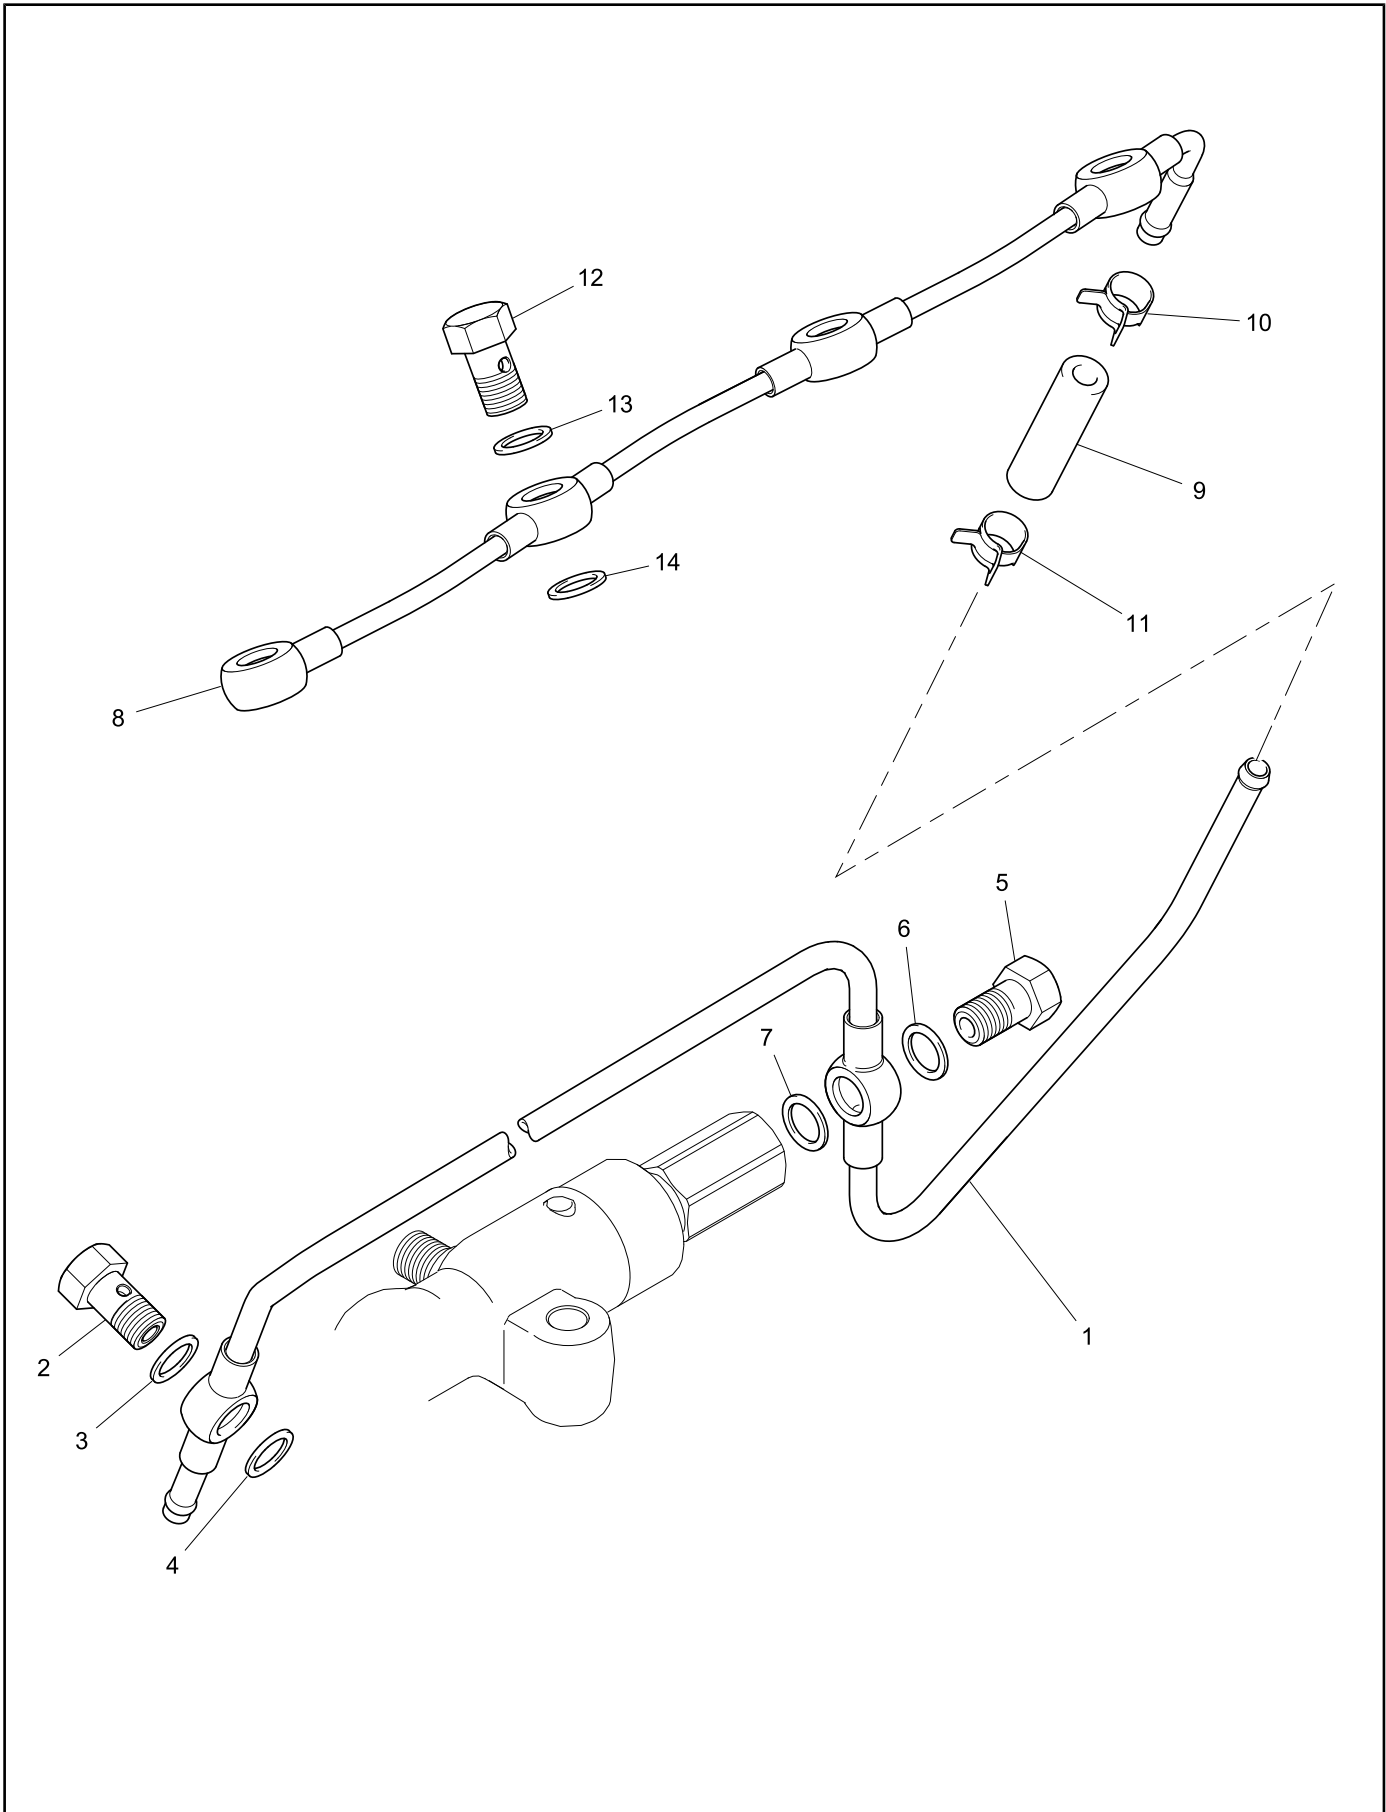 


Item	Part No.	References	Qty.	Description	Notes
1	131607270		1	PIPE - LEAK OFF	
2	T431915		1	BANJO BOLT	
3	131426400		1	WASHER	
4	131426400		1	WASHER	
5	198481150		1	BANJO BOLT	
6	131426400		1	WASHER	
7	131426400		1	WASHER	
8	131607330		1	PIPE - LEAK OFF	
9	068209668		1	HOSE - FUEL	
10	067200100		1	CLIP	
11	067200100		1	CLIP	
12	T431915		4	BANJO BOLT	
13	131426400		4	WASHER	
14	131426400		4	WASHER	

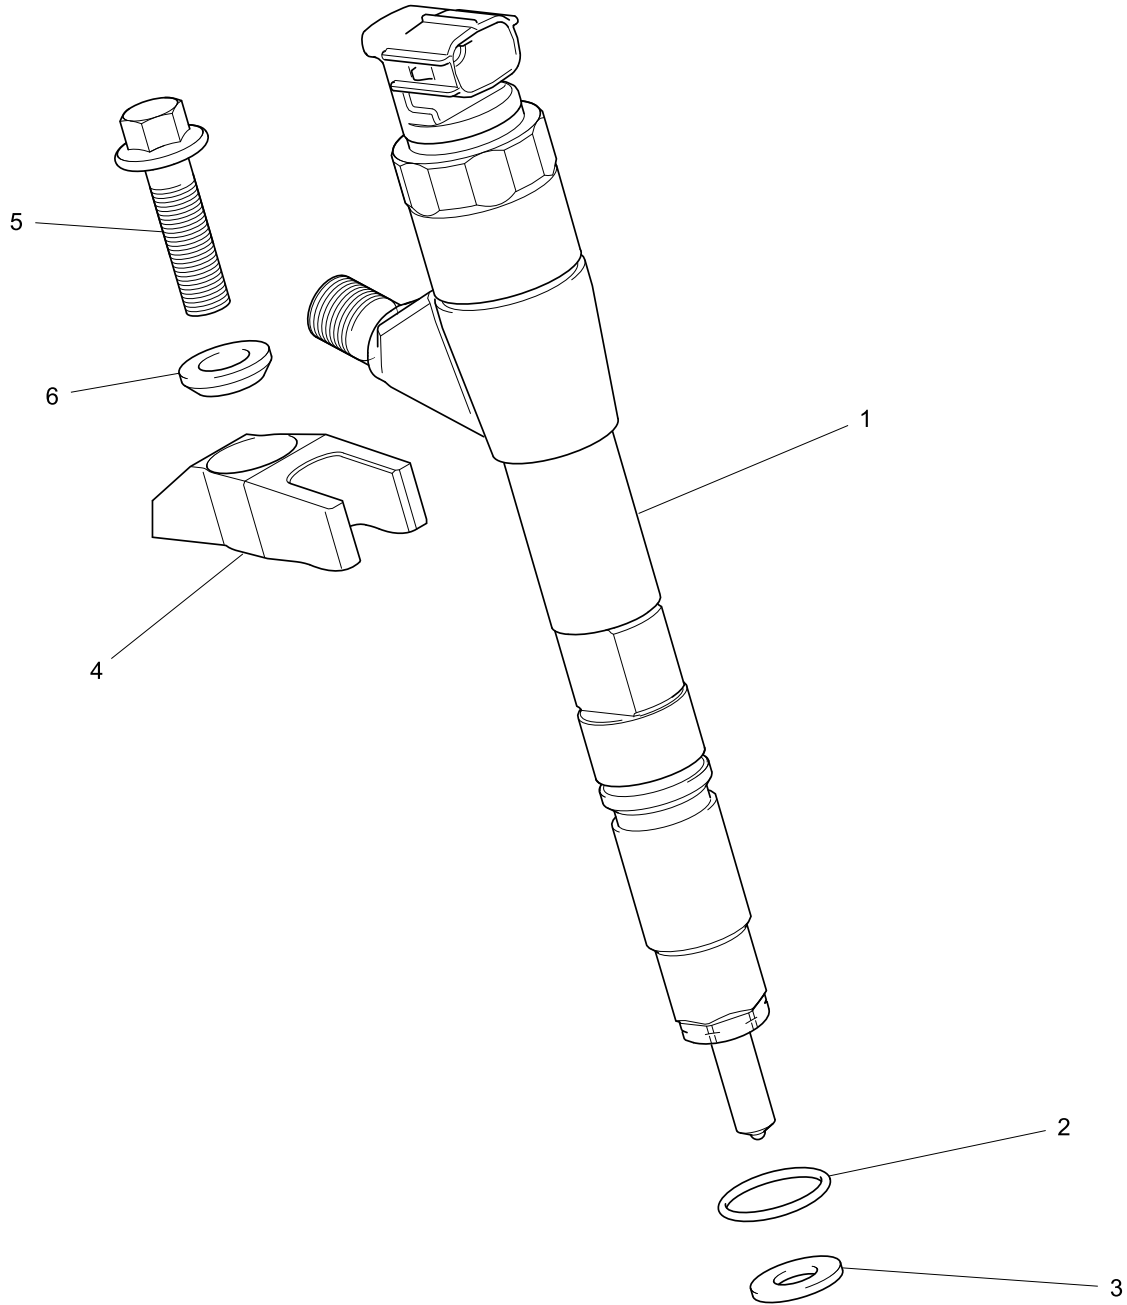 


Atomisers	Plate A
	5412241

Item	Part No.	References	Qty.	Description	Notes
1	T432110		4	INJECTOR	
2	052400180		4	SEAL - O RING	
3	131996130		4	INJECTOR SEATING WASHER	
4	131566080		4	INJECTOR CLAMP	
5	2314H005		4	SCREW	
6	131576010		4	WASHER	

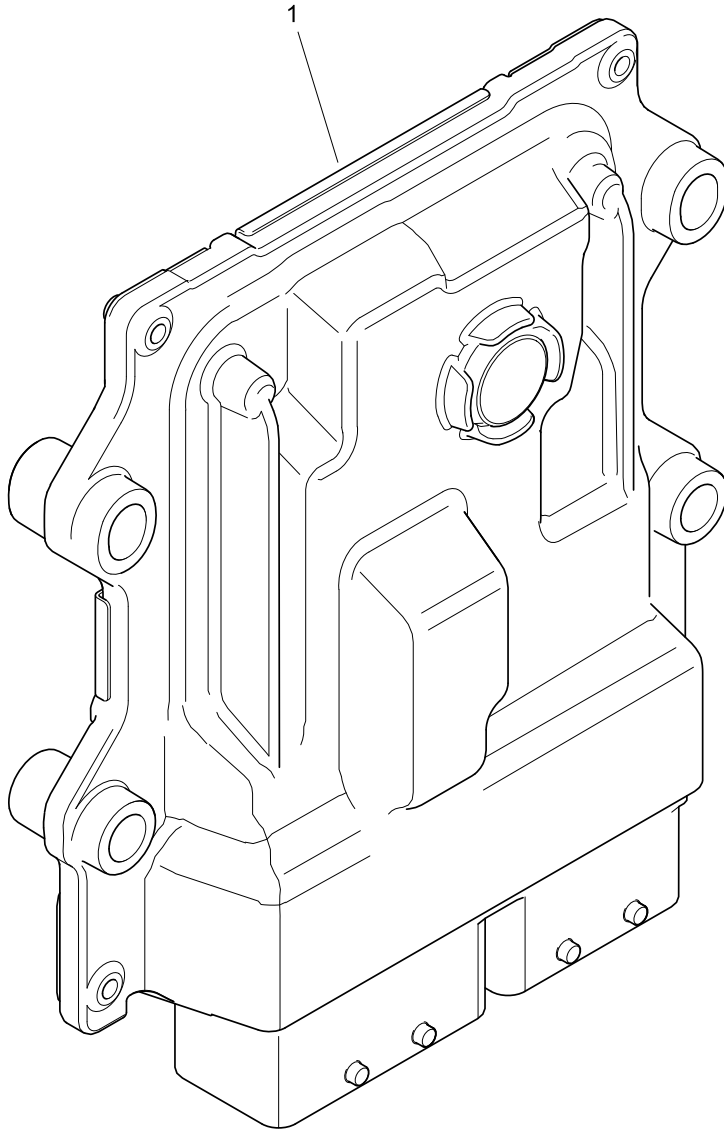 


Engine Control Module	Plate A
	5242309


Item	Part No.	References	Qty.	Description	Notes
1	T432007		1	ENGINE CONTROL MODULE	

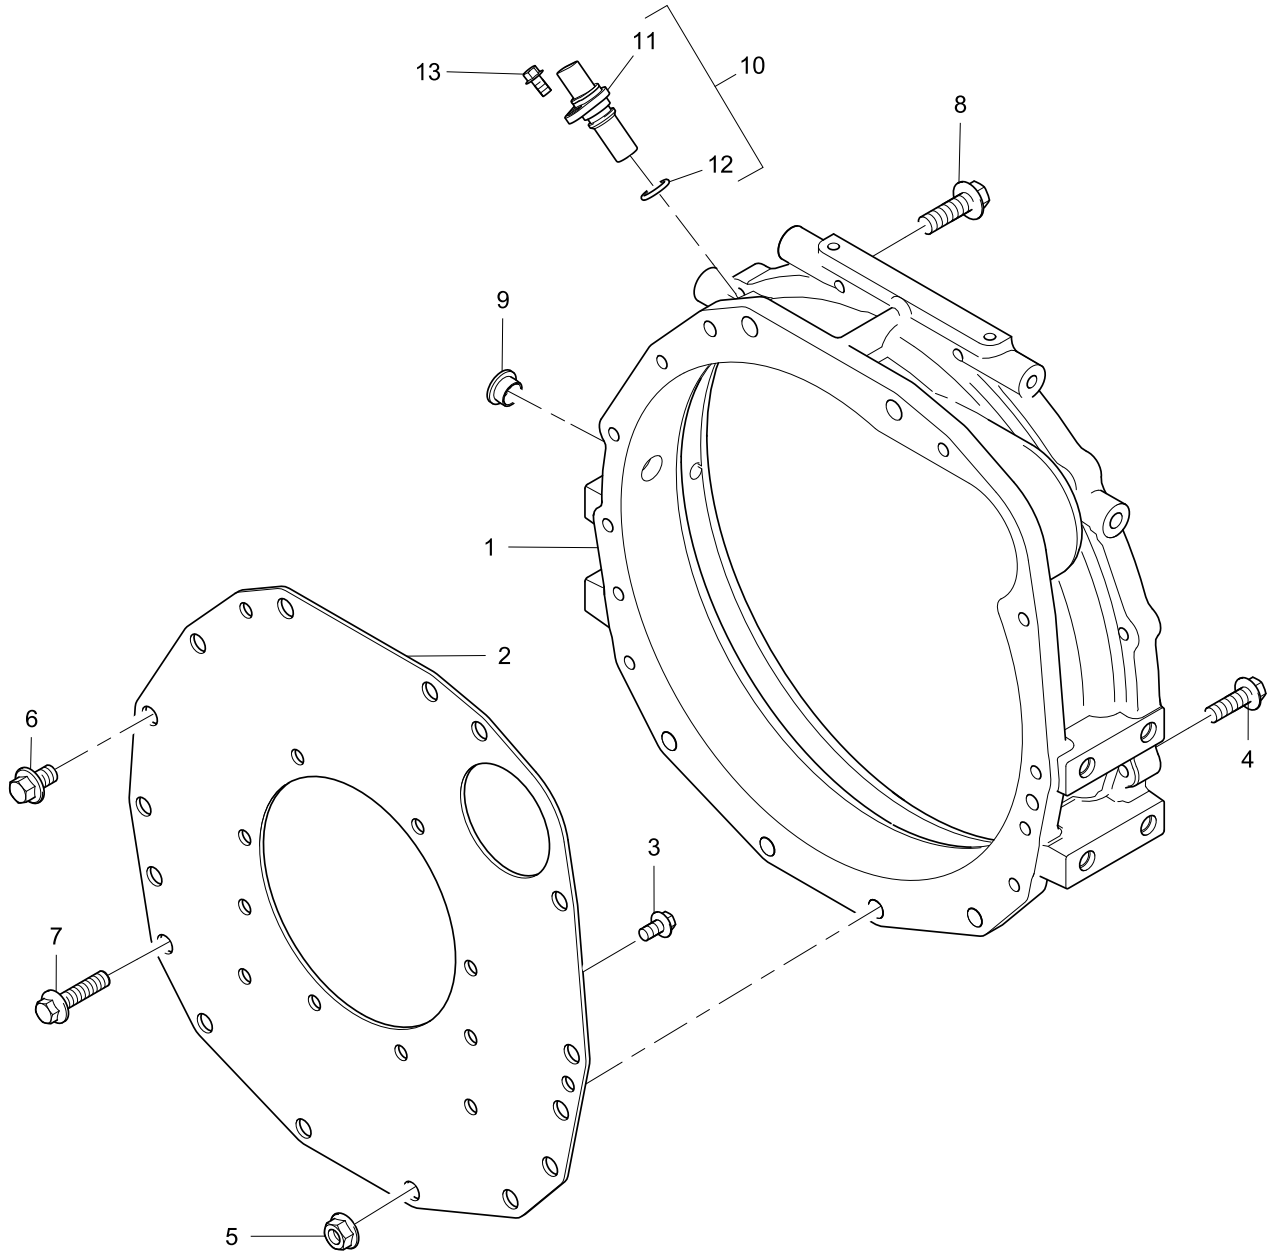 

Item	Part No.	References	Qty.	Description	Notes
1	4794840		1	FLYWHEEL HOUSING	
2	110367570		1	BACKPLATE	
3	2314H102		10	SCREW	
4	2314J004		4	SCREW	
5	2318A604		4	NUT	
6	2314J001		2	SCREW	
7	2314J006		6	SCREW	
8	2314J604		2	SCREW	
9	2487646		1	PLUG	
10	T432003		1	SPEED SENSOR	
11		⇒ T432003	1	CRANKSHAFT SPEED SENSOR	
12	CH12649		1	SEAL - O RING	
13	2314F002		1	SCREW	

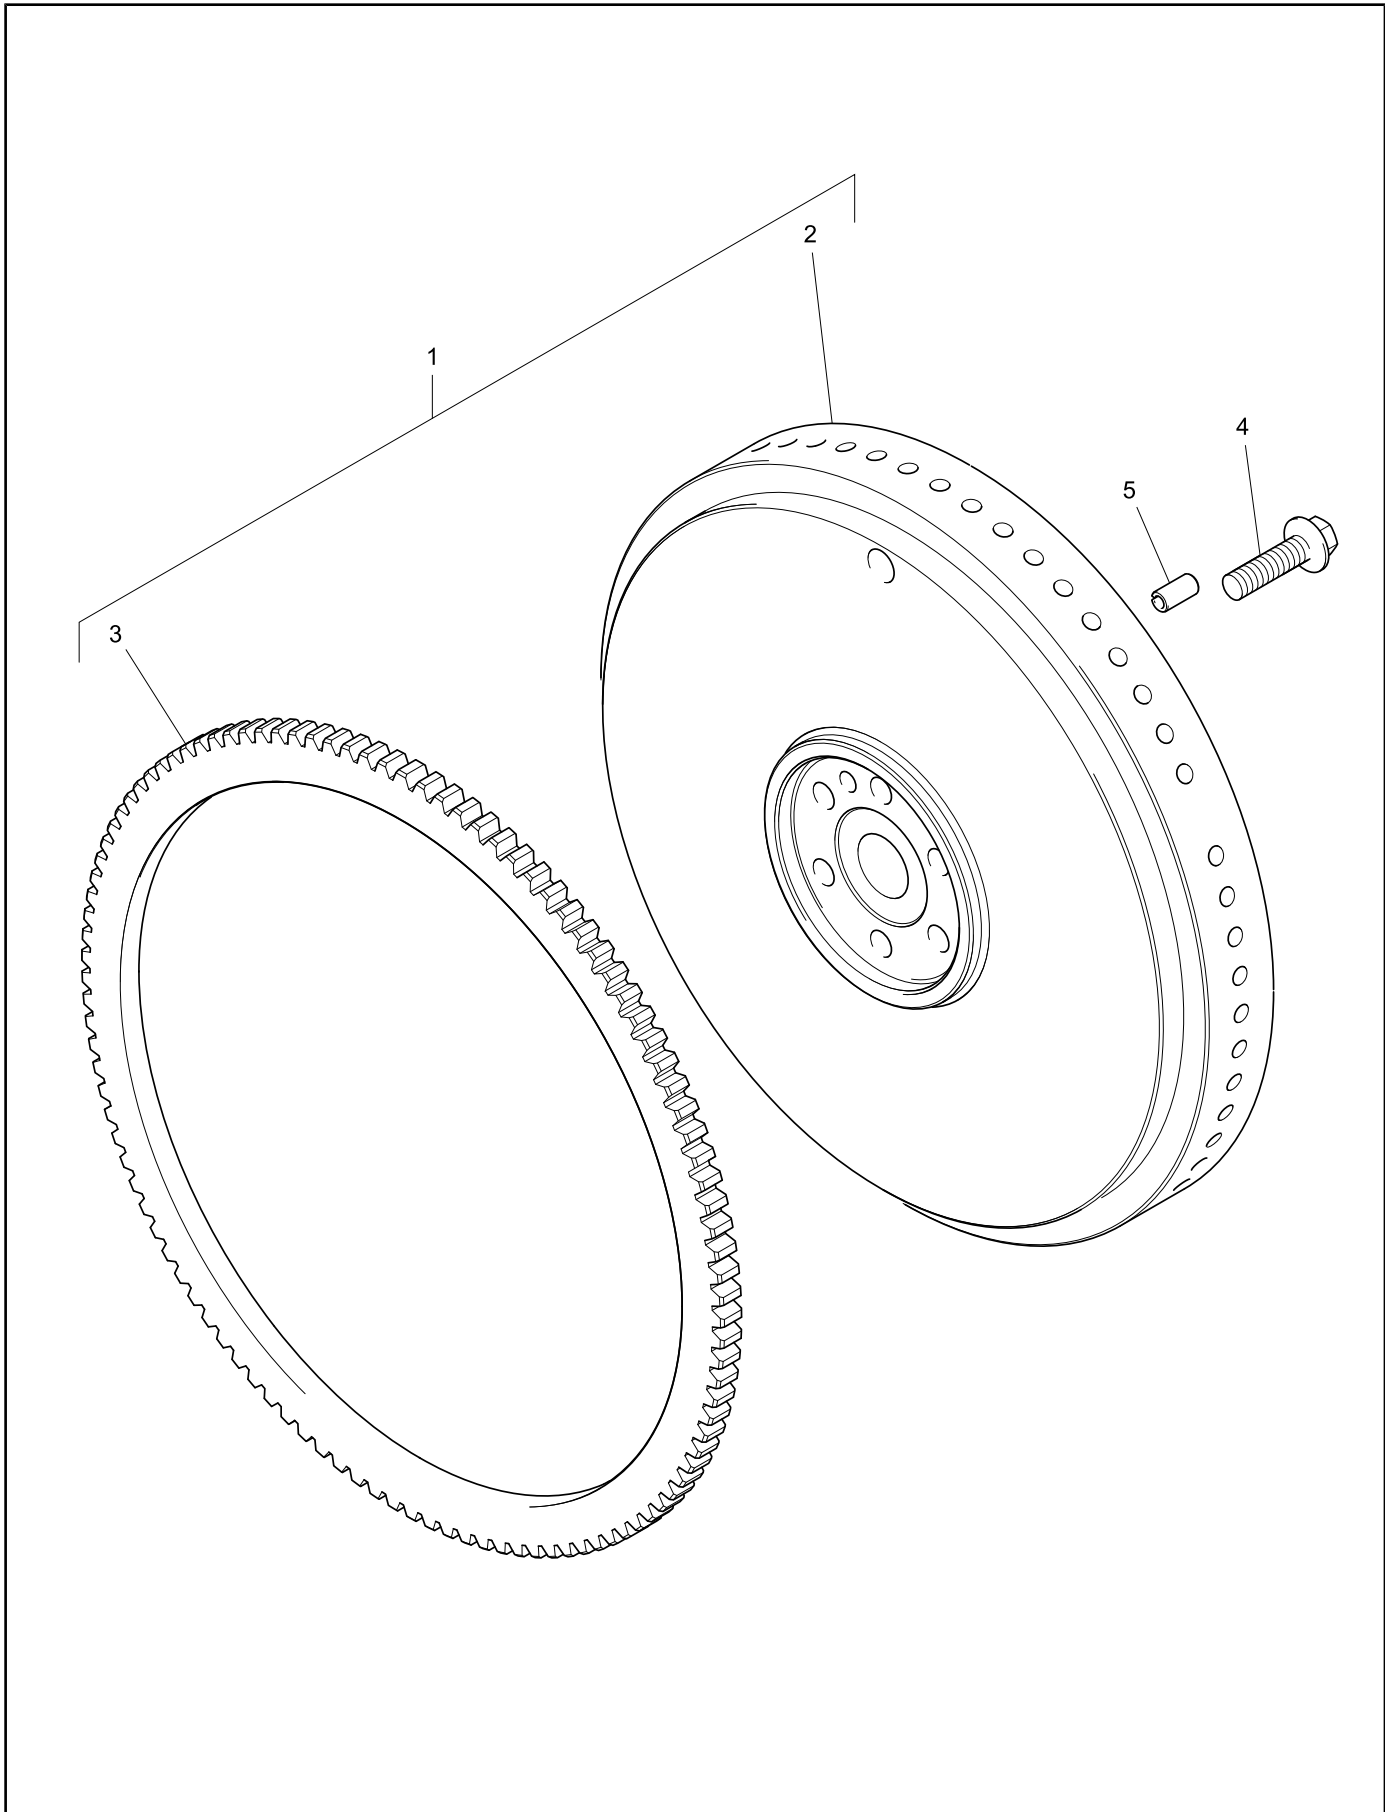 


Item	Part No.	References	Qty.	Description	Notes
1	T432100		1	FLYWHEEL ASSEMBLY	
2		⇒ T432100	1	FLYWHEEL	
3	U15376160		1	STARTER RING	
4	010109341		6	BOLT	
5	030300816		1	PIN	

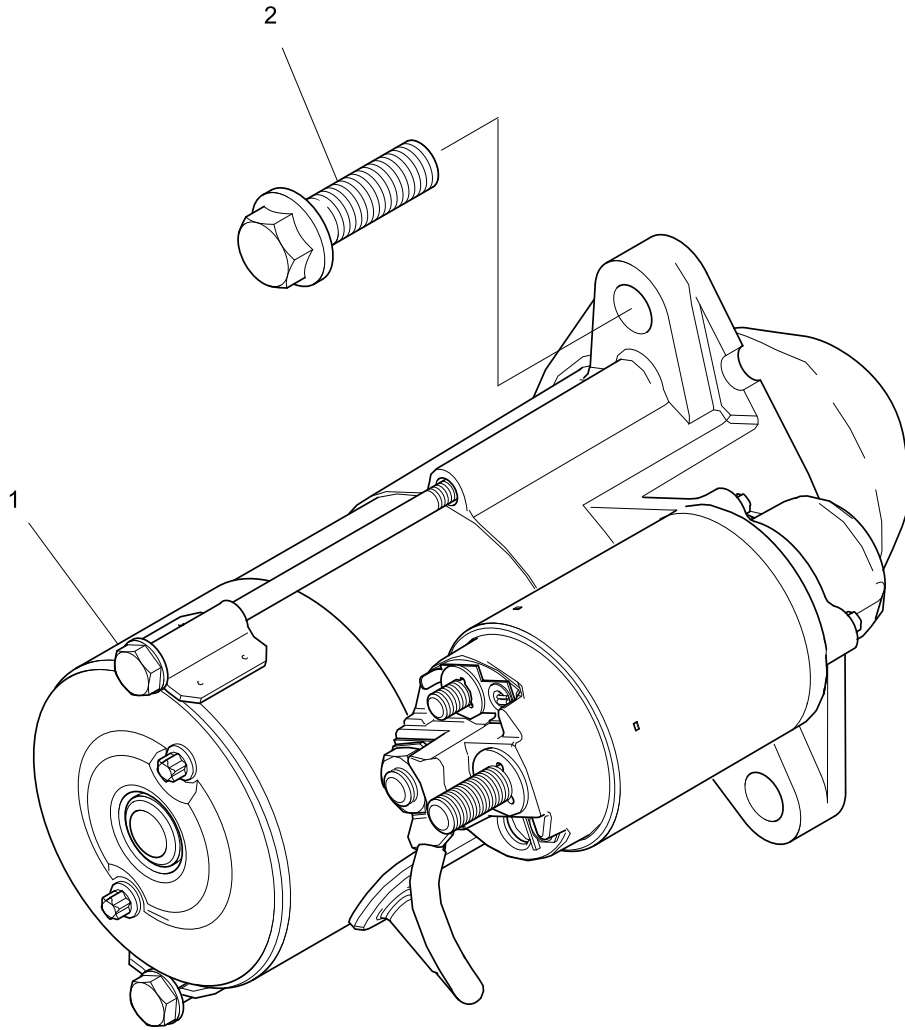 


Starter Motor	Plate A
	3984818

Item	Part No.	References	Qty.	Description	Notes
1			1	STARTER MOTOR	
2	2314J004		2	SCREW	

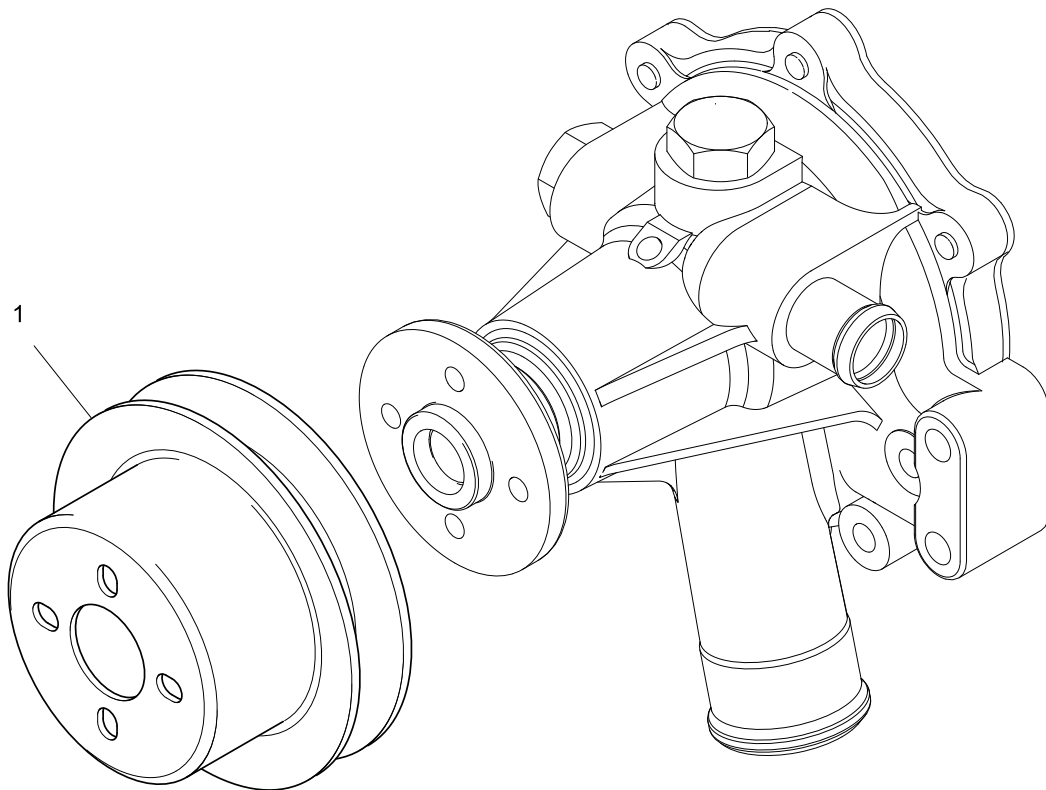 


Fan Drive Pulley	Plate A
	3984866

Item	Part No.	References	Qty.	Description	Notes
1	U45336620	● 145336620	1	FAN DRIVE PULLEY	

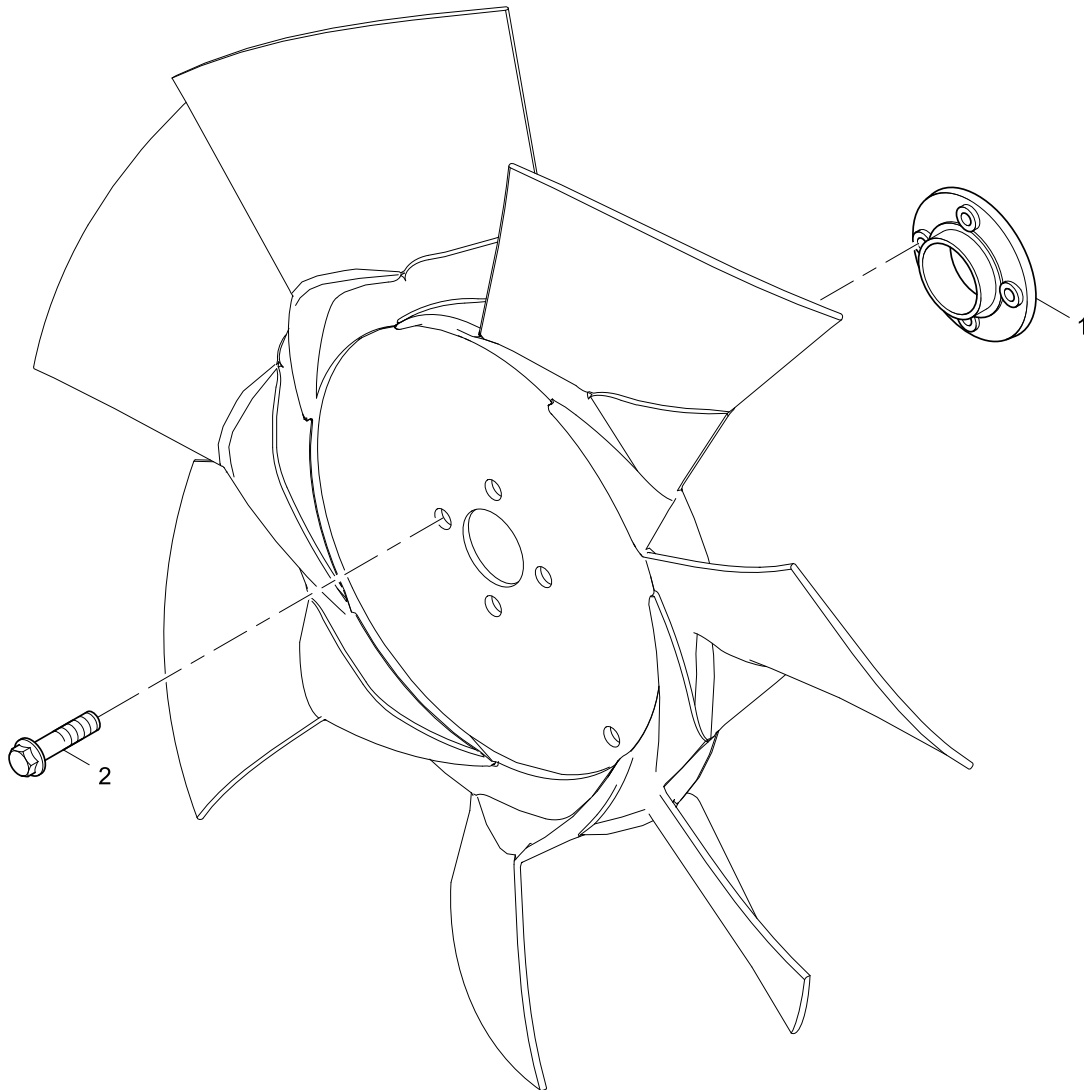 


Fan Drive Mounting	Plate A
	3989095

Item	Part No.	References	Qty.	Description	Notes
1	145386910		1	EXTENSION	
2	2314F006		4	SCREW	

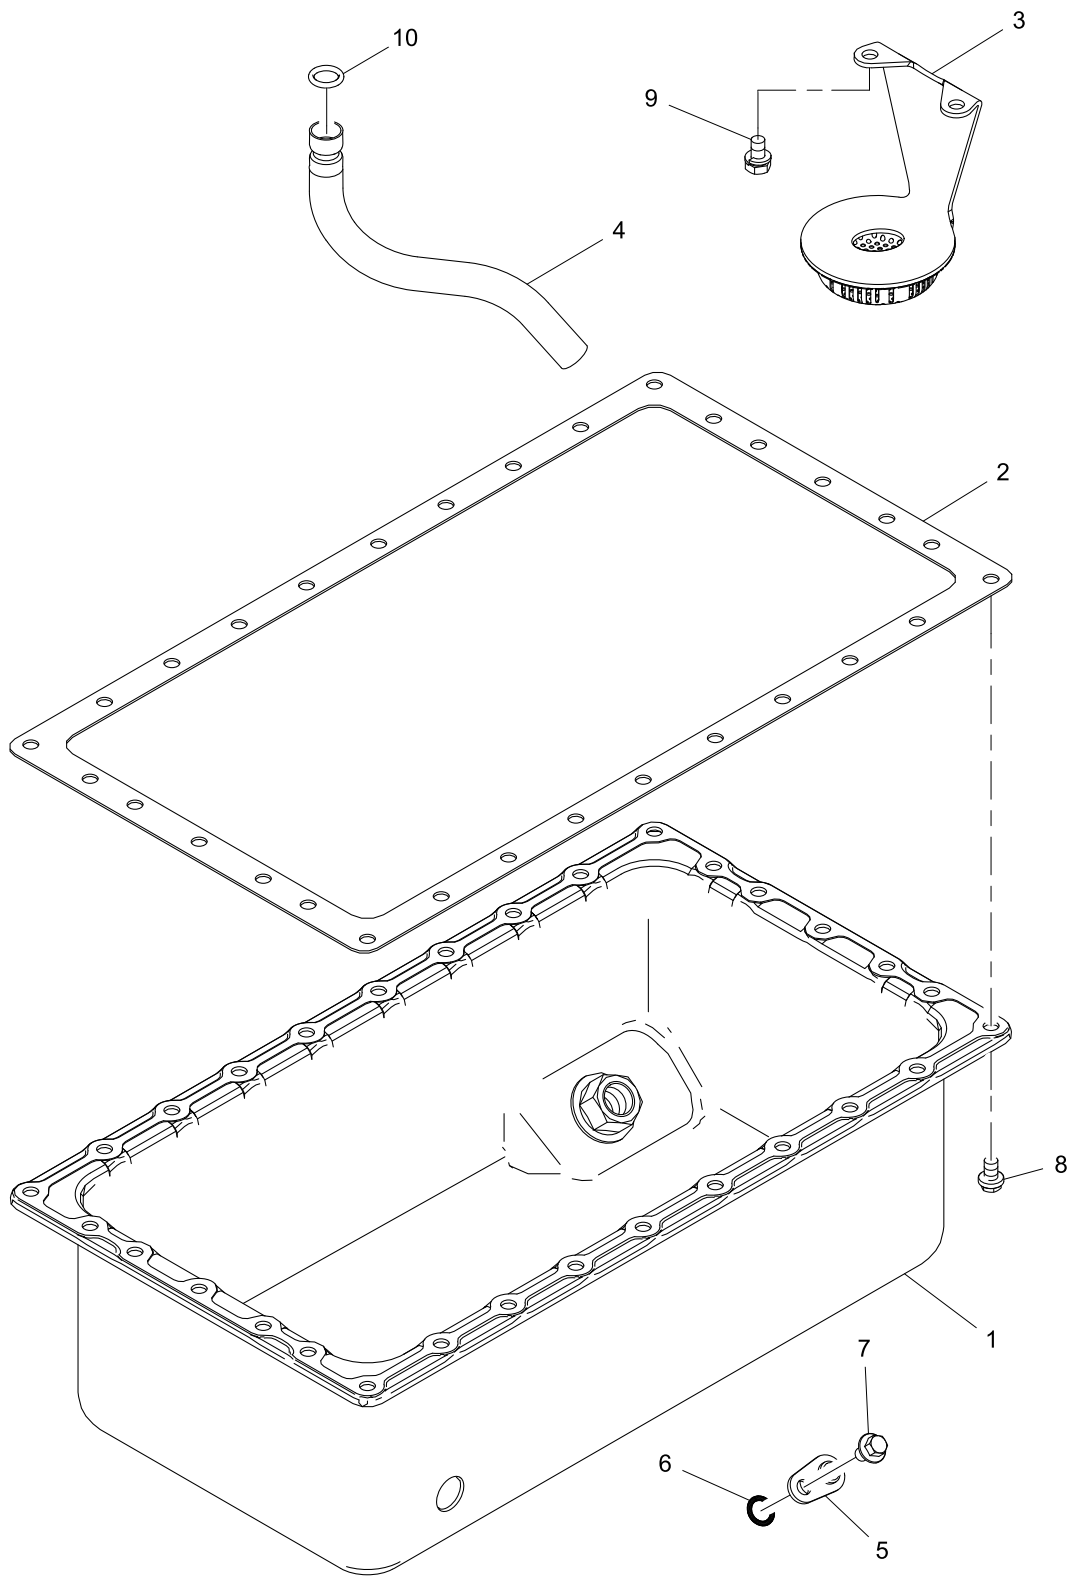 


Item	Part No.	References	Qty.	Description	Notes
1	U10701050	↔	1	SUMP	
2	110996860	↔	1	GASKET - SUMP	
3	U40406790		1	OIL SUCTION STRAINER	
4	140987090		1	PIPE - OIL SUCTION	
5	U98436290		1	PLATE	
6	052100100	↔	2	SEAL - O RING	
7	2314F001		1	SCREW	
8	T418686		30	SCREW	
9	011310612		2	SCREW	
10	052109076		1	SEAL - O RING	

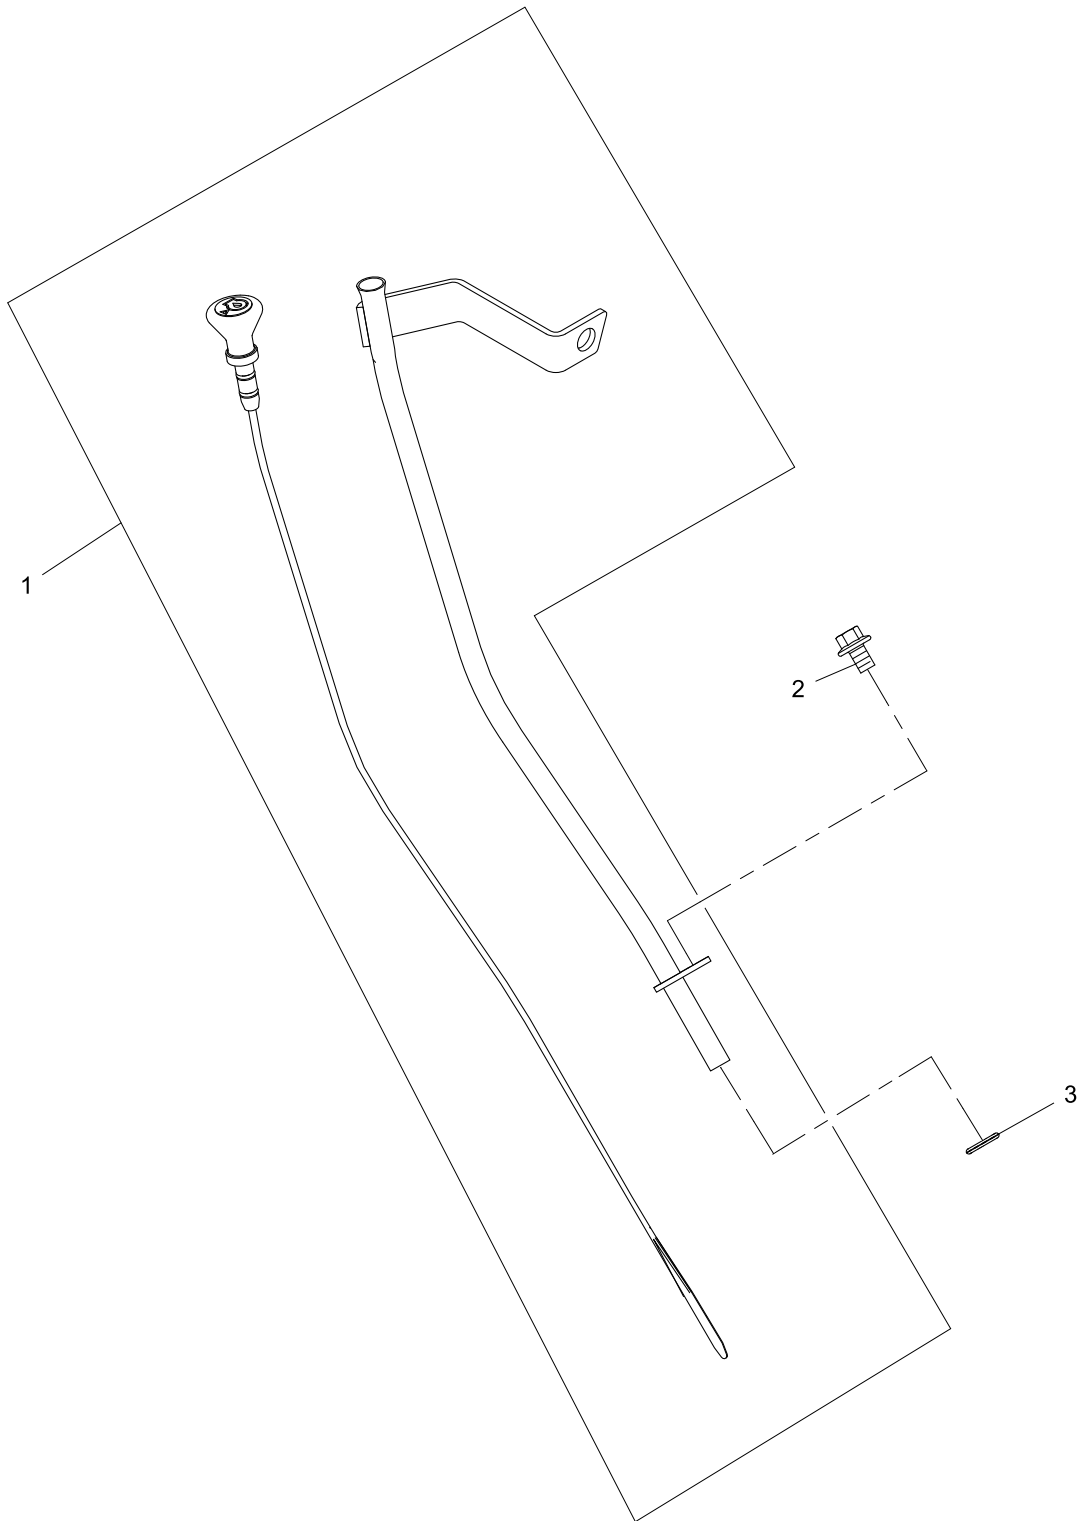 


Dipstick & Filler Tube	Plate B
	5787017

Item	Part No.	References	Qty.	Description	Notes
1	T430685		1	DIPSTICK TUBE	
2	2314F001		1	SCREW	
3	052100100	↔	2	SEAL - O RING	

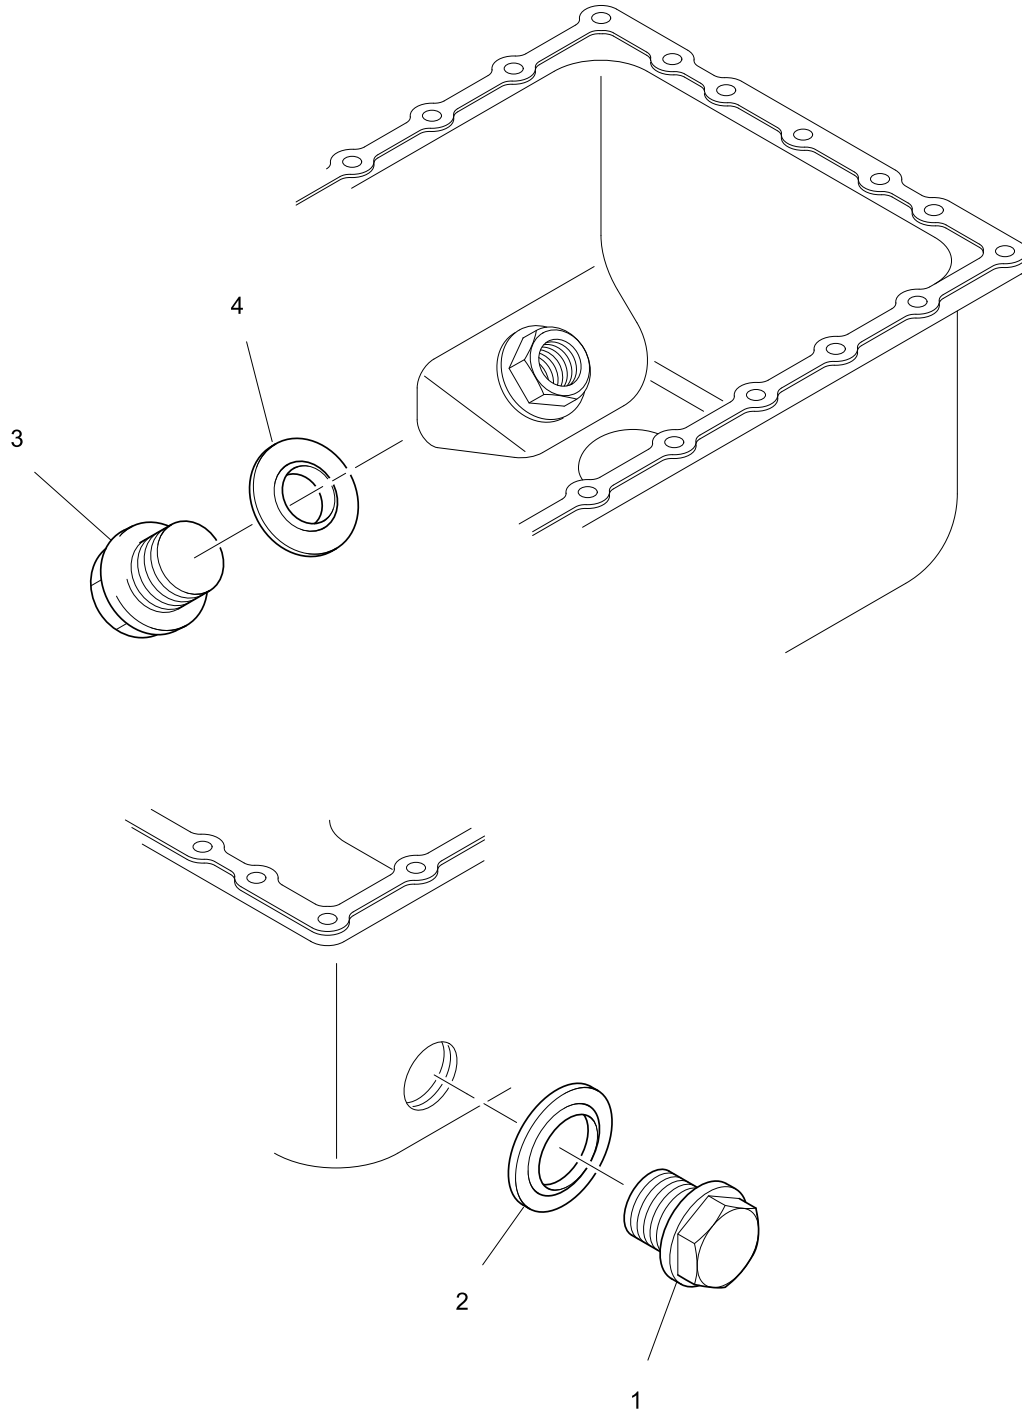 


Blanking Plug	Plate A
	3985865

Item	Part No.	References	Qty.	Description	Notes
1	T10109238		1	DRAIN PLUG	
2	025100016		1	WASHER	
3	T10109238		1	DRAIN PLUG	
4	025100016		1	WASHER	

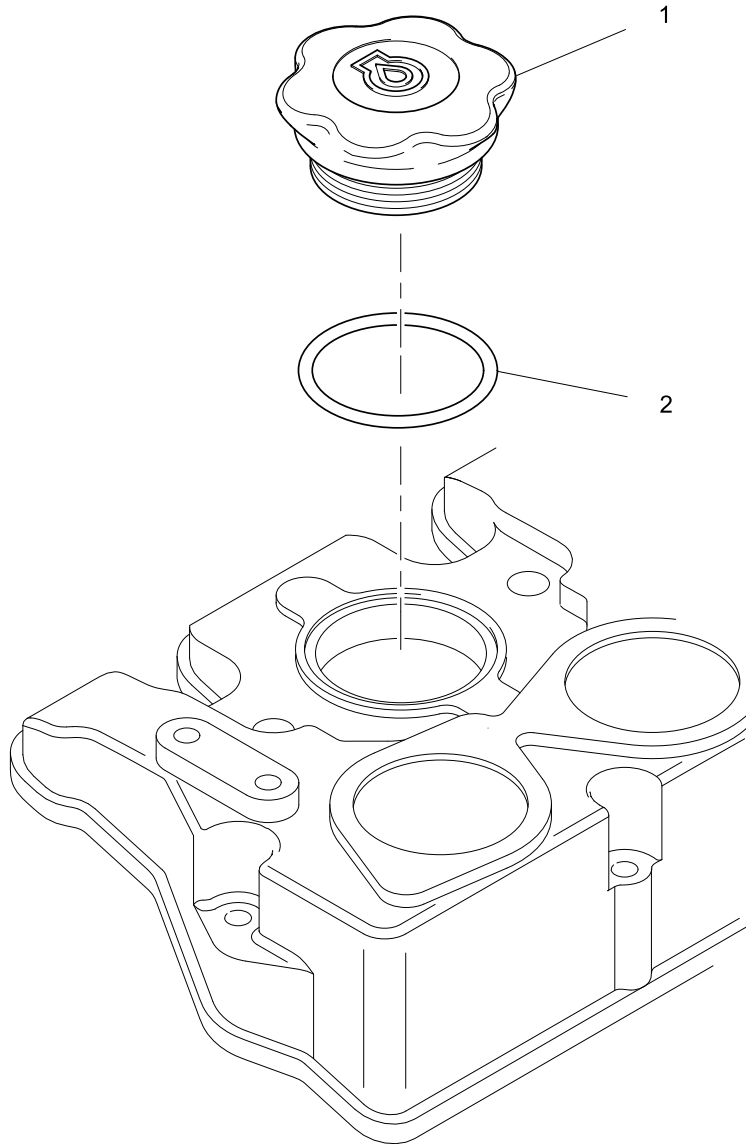 


Lubricating Oil Filler	Plate A
	3985867

Item	Part No.	References	Qty.	Description	Notes
1	U98436350	Ⓢ	1	OIL FILLER CAP	
2	052100400		1	SEAL - O RING	
Service Options					
1	T403274		1	OIL FILLER CAP BLUETOOTH®	

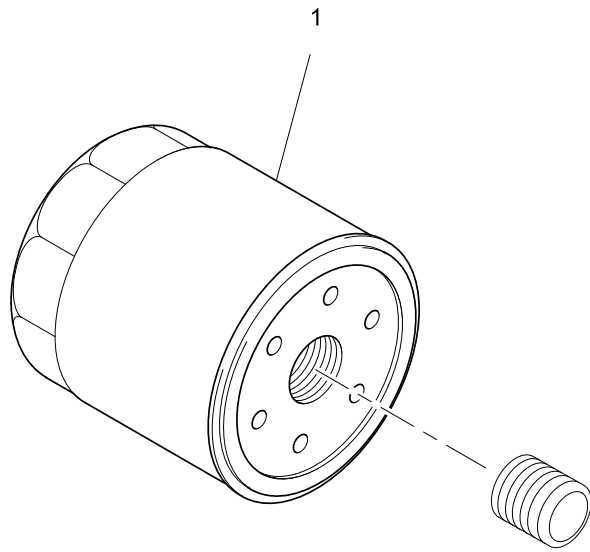 


Oil Filter	Plate A
	3988177

Item	Part No.	References	Qty.	Description	Notes
1	140517050		1	OIL FILTER	

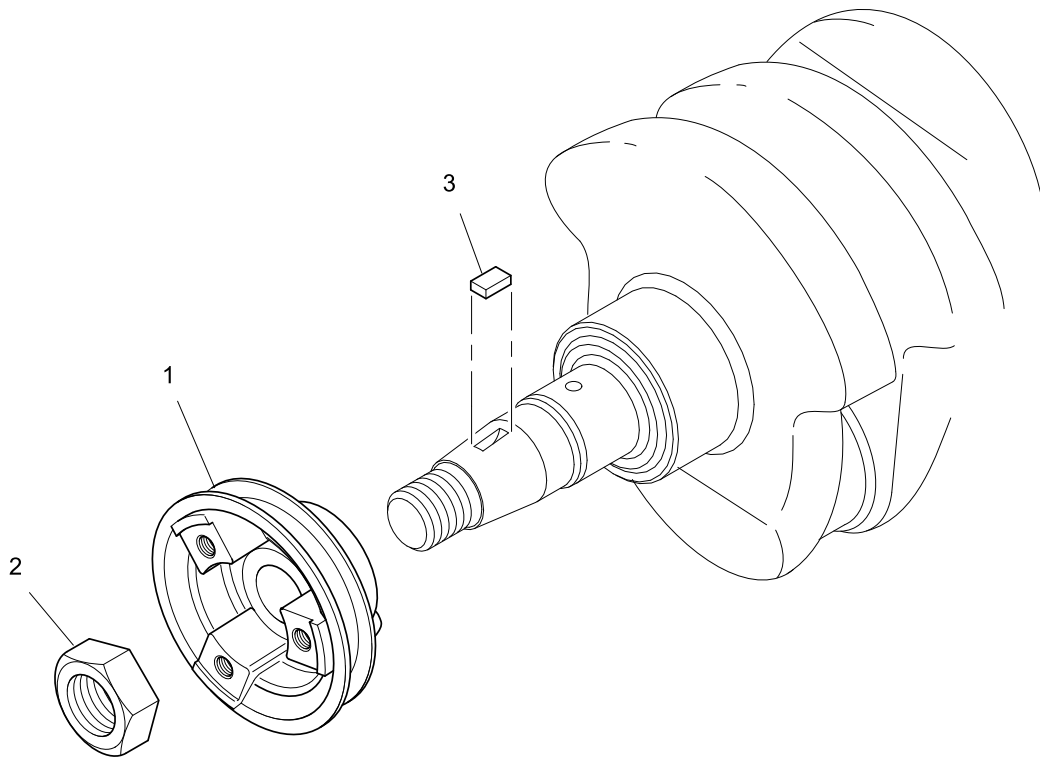 


Crankshaft Pulley	Plate A
	4459988

Item	Part No.	References	Qty.	Description	Notes
1	U15397401		1	CRANKSHAFT PULLEY	
2	020109086		1	NUT	
3	034100508		1	KEY	

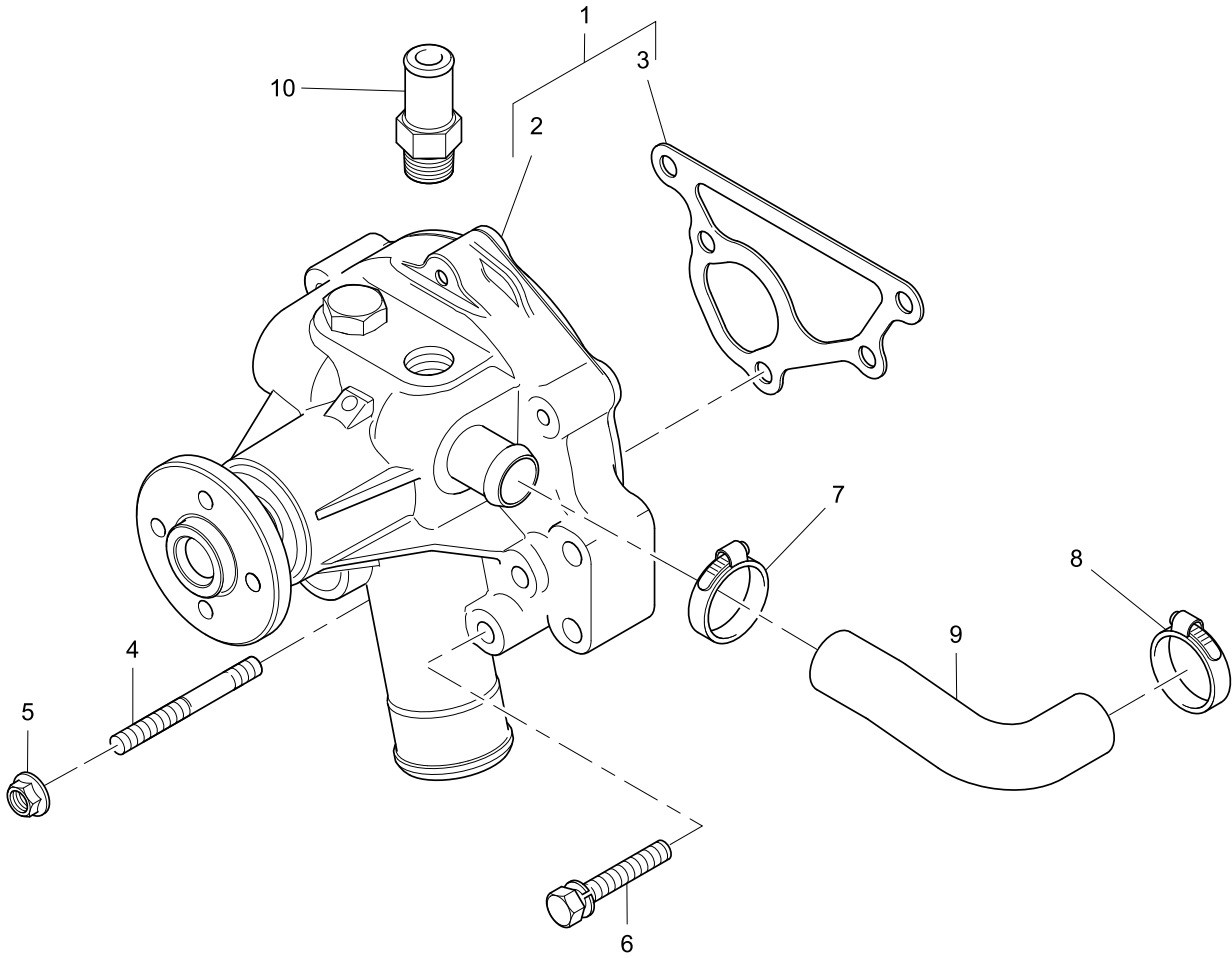 


Water Pump	Plate A
	5665994

Item	Part No.	References	Qty.	Description	Notes
1	T432009		1	WATER PUMP KIT	
2		⇒ T432009	1	WATER PUMP	
3	U45996990		1	GASKET - WATER PUMP	
4	012110635		1	STUD	
5	023100006		1	NUT	
6	011310645		4	SCREW	
7	T426675		1	HOSE CLIP	
8	T426675		1	HOSE CLIP	
9	145537300		1	HOSE	
10	198481280	↔	1	CONNECTOR	

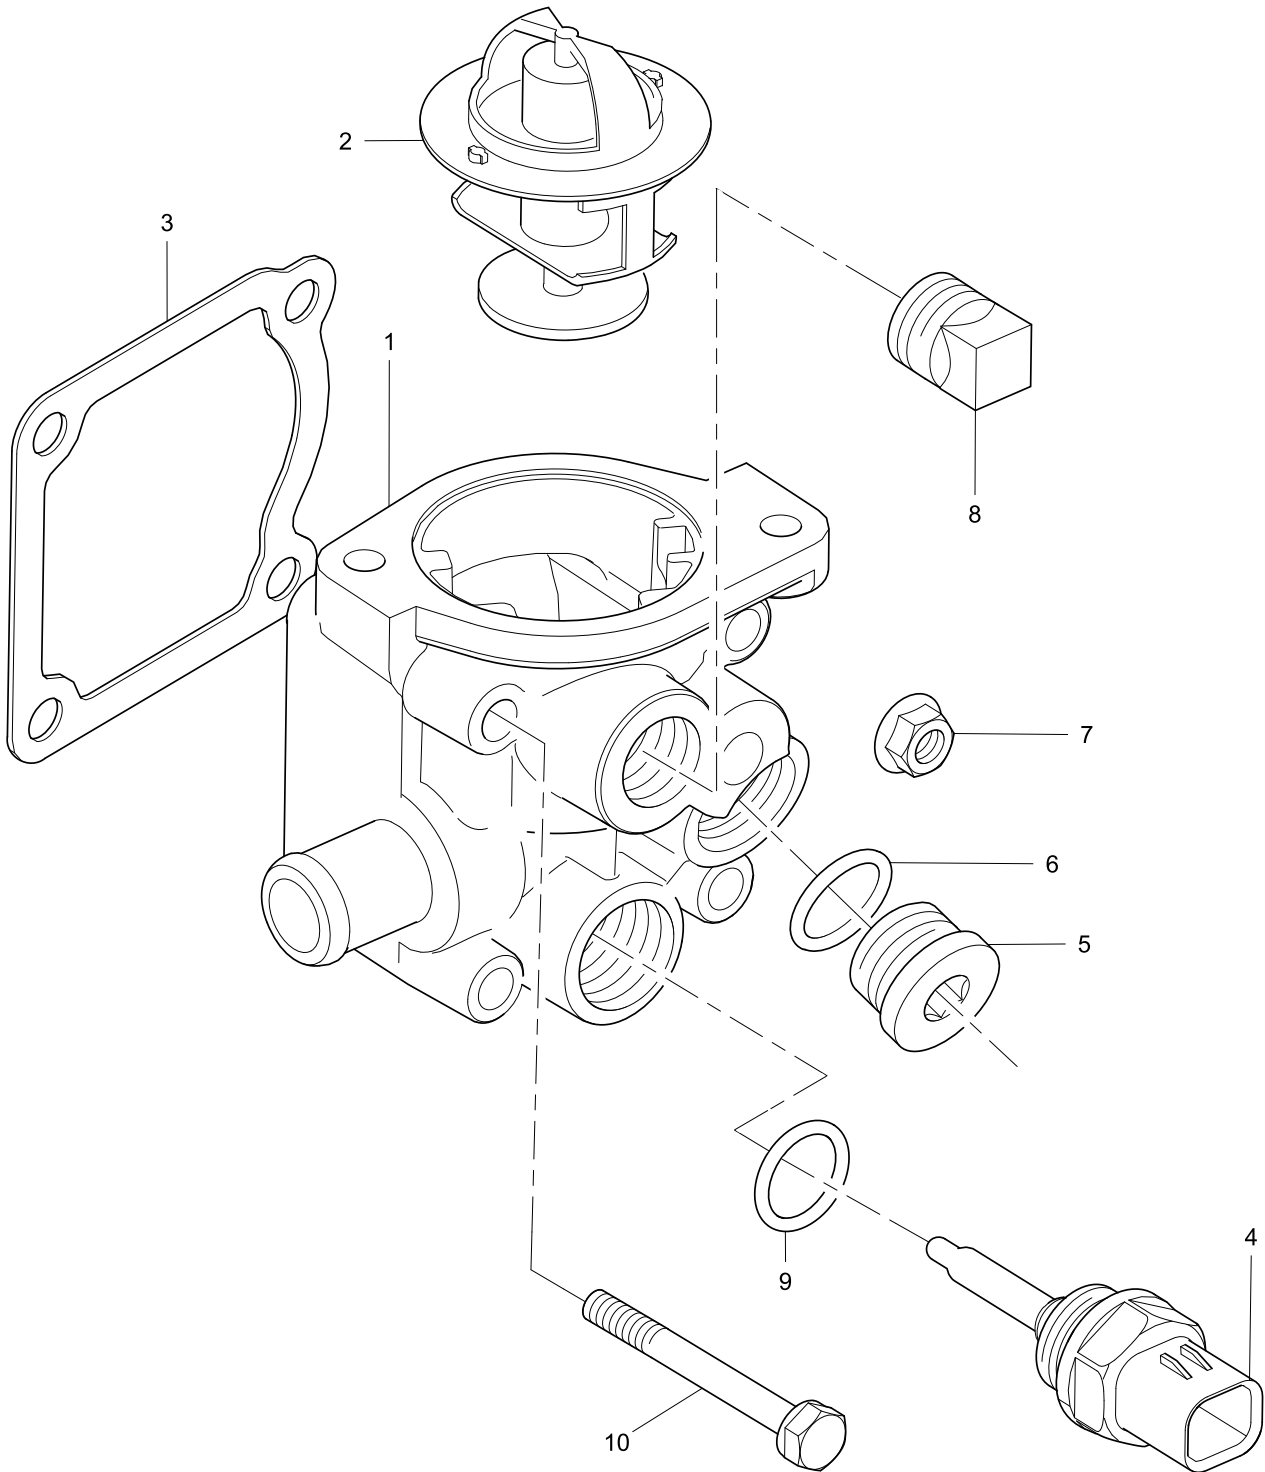 


Thermostat & Housing	Plate A
	5665994

Item	Part No.	References	Qty.	Description	Notes
1	T432011		1	LB - Thermostat	
2	145206230		1	THERMOSTAT	
3	U45996930		1	GASKET - THERMOSTAT HSG	
4	T407354		1	TEMPERATURE SENSOR	
5	CH10287		1	PLUG	
6	CH10146		1	SEAL - O RING	
7	023100006		2	NUT	
8	064510030	←	1	PLUG	
9	2415H003		1	SEAL - O RING	
10	011310655		2	BOLT	

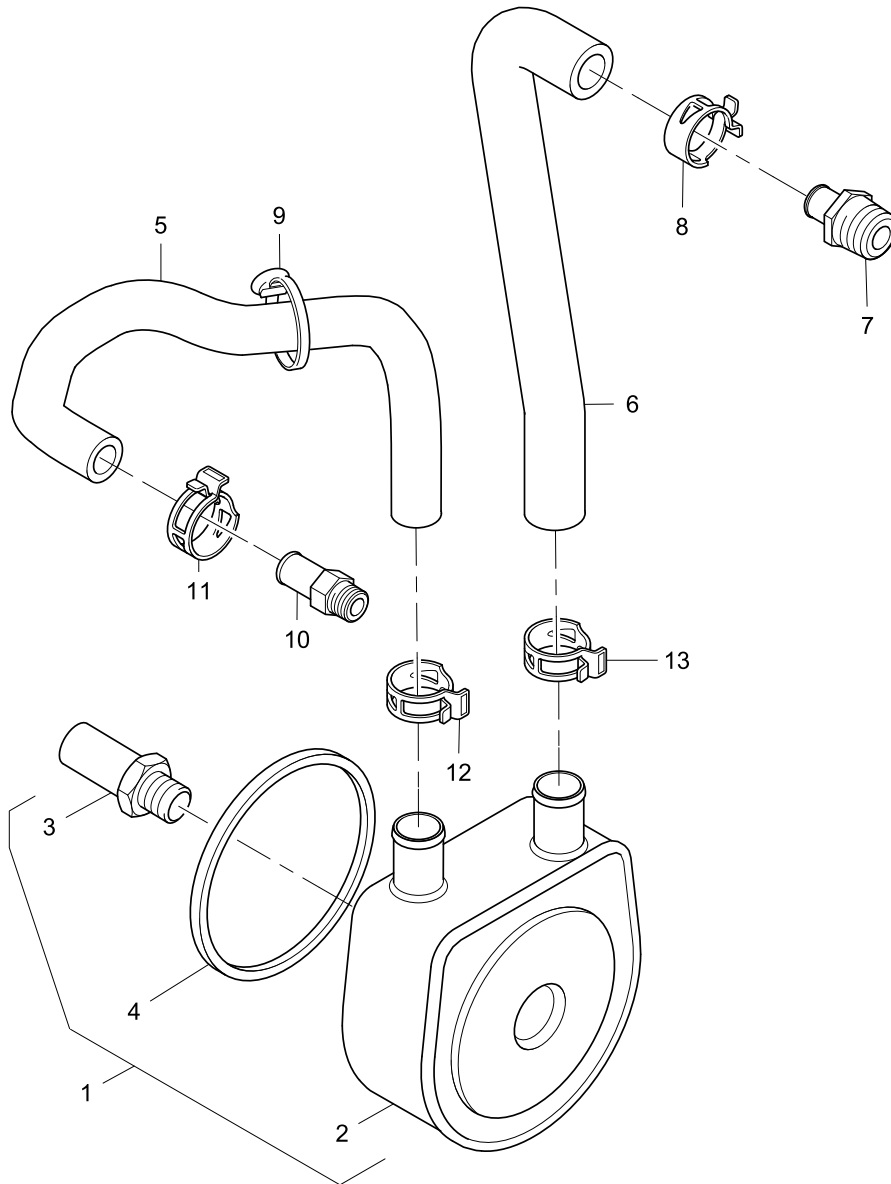 


Oil Cooler	Plate A
	5665994

Item	Part No.	References	Qty.	Description	Notes
1	2486A218		1	OIL COOLER	
2		⇒ 2486A218	1	OIL COOLER	
3	2486A225		1	ADAPTOR	
4	2486A223		1	SEAL - O RING	
5	068209648		1	HOSE	
6	T68209268		1	HOSE	
7	T420245		1	CONNECTOR	
8	T424438		1	HOSE CLIP	
9	T409240		1	CABLE TIE	
10	198481280	↔	1	CONNECTOR	
11	T424438		1	HOSE CLIP	
12	T424438		1	HOSE CLIP	
13	T424438		1	HOSE CLIP	

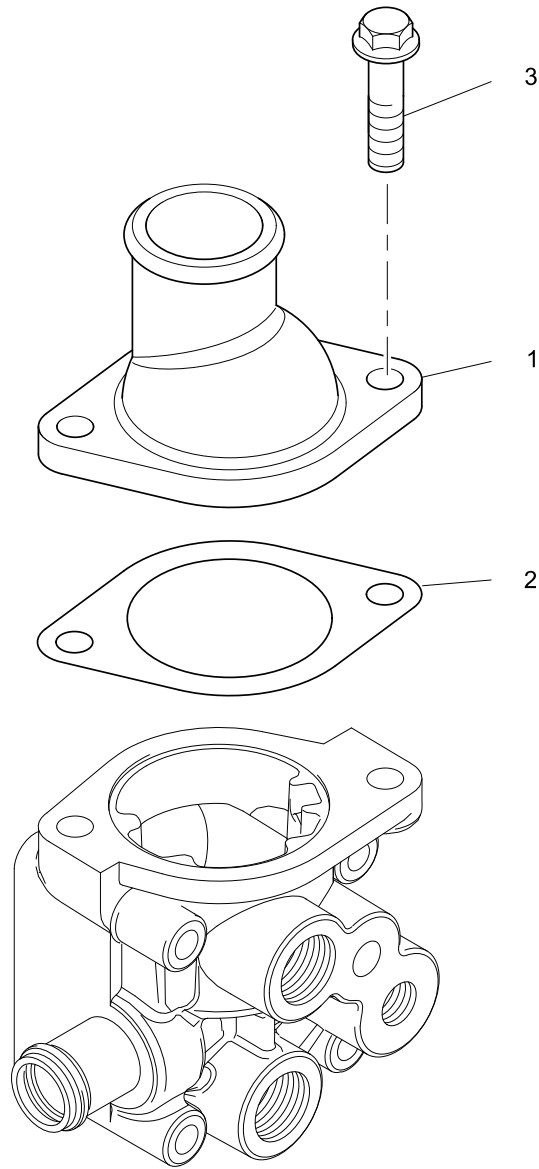 


Water Outlet Housing	Plate A
	3985884

Item	Part No.	References	Qty.	Description	Notes
1	145226320	↔	1	CONNECTION	
2	U45996051		1	GASKET - THERMOSTAT HSG	
3	011510825		2	SCREW	

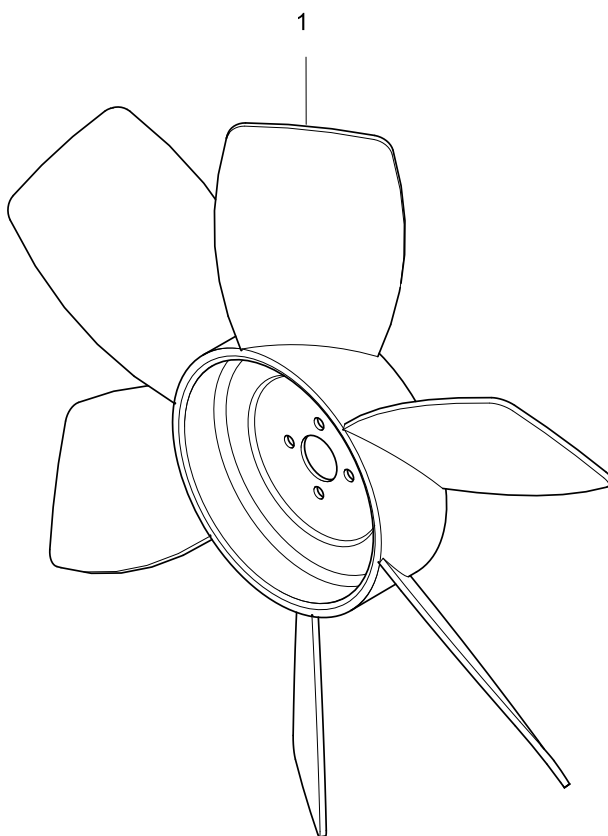 


Fan	Plate A
	3989093


Item	Part No.	References	Qty.	Description	Notes
1	145306730		1	FAN	

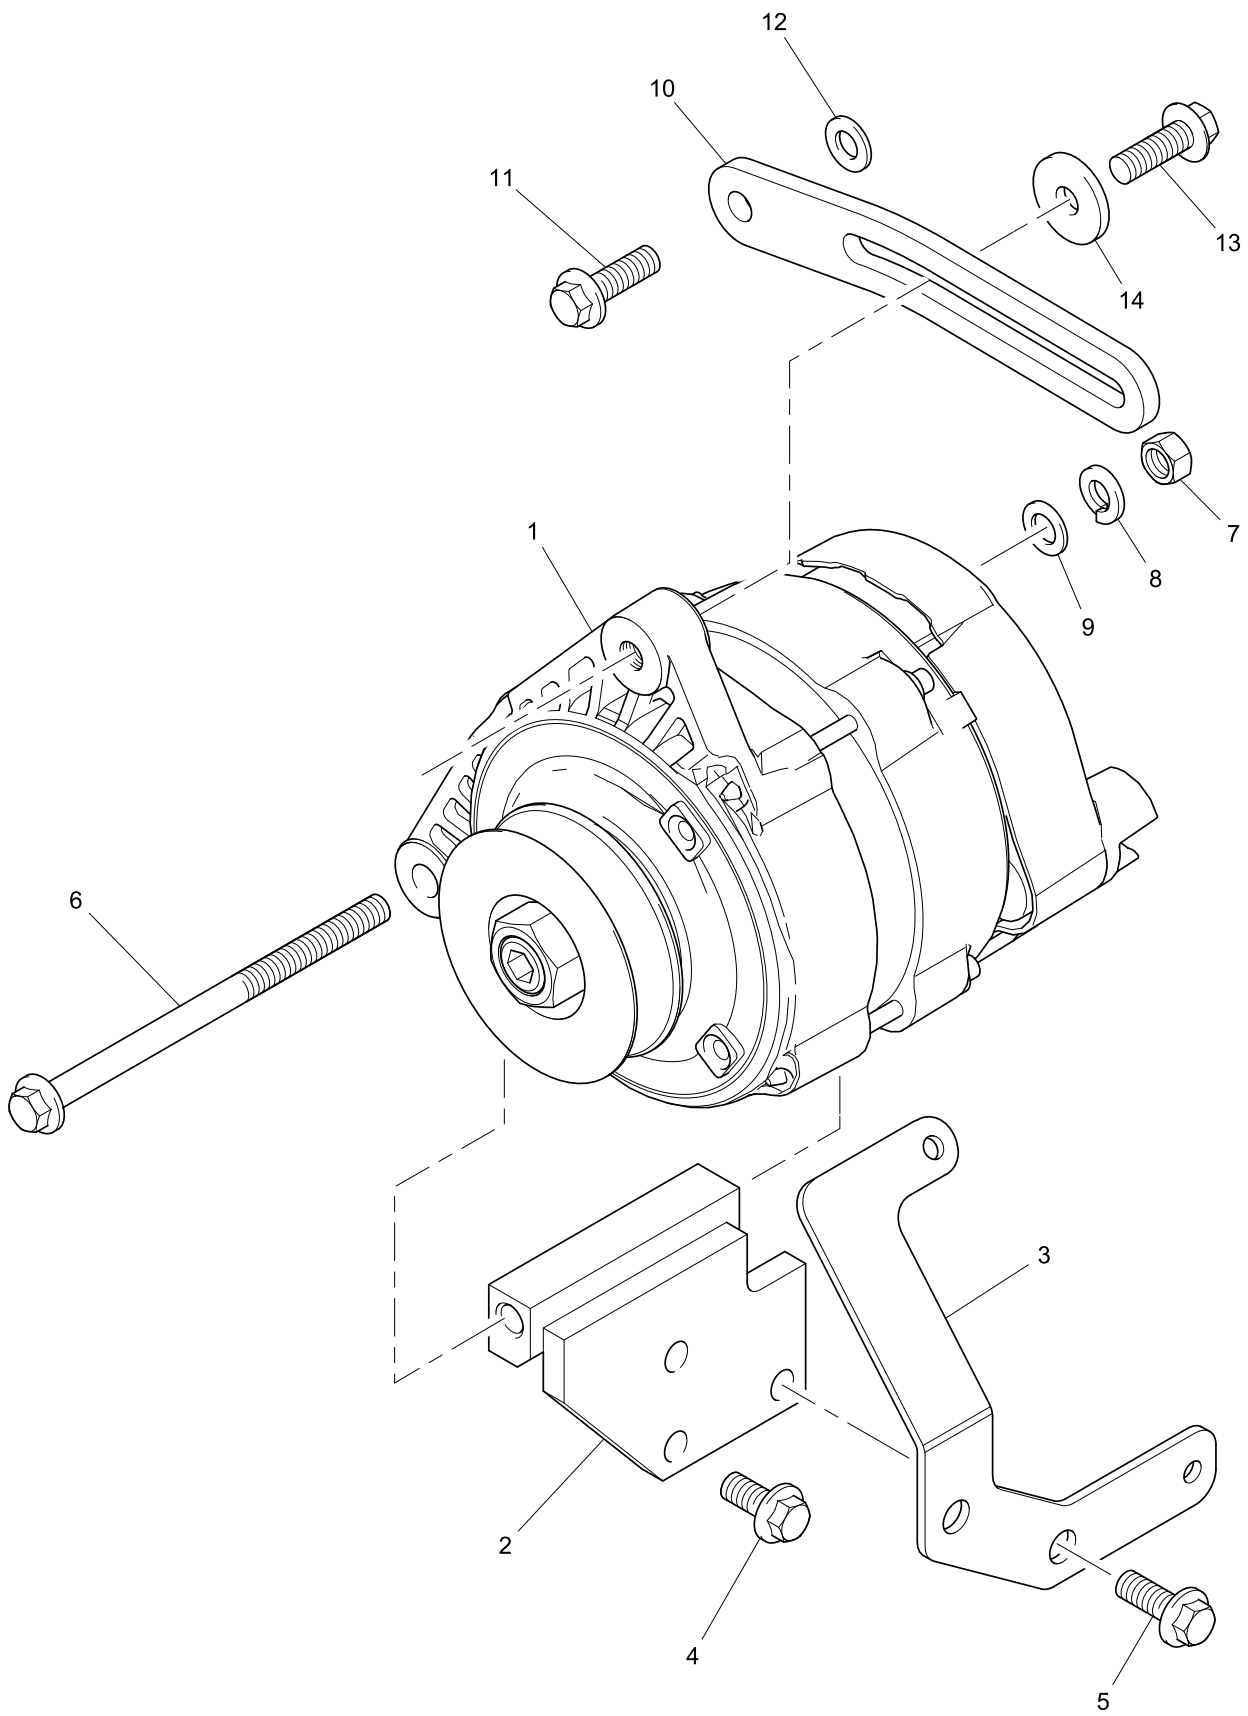 


Item	Part No.	References	Qty.	Description	Notes
1	T423270		1	ALTERNATOR	
2	T423492		1	ALTERNATOR BRACKET	
3	T432102		1	BRACKET	
4	2314H002		1	SCREW	
5	2314H003		2	SCREW	
6	2314H022		1	SCREW	
7	020900008		1	NUT	
8	027100008		1	WASHER	
9	T432440		1	WASHER	
10	T432106		1	LEVER	
11	2314H004		2	SCREW	
12	T432440		1	WASHER	
13	2314H004		1	SCREW	
14	T432437		1	WASHER	

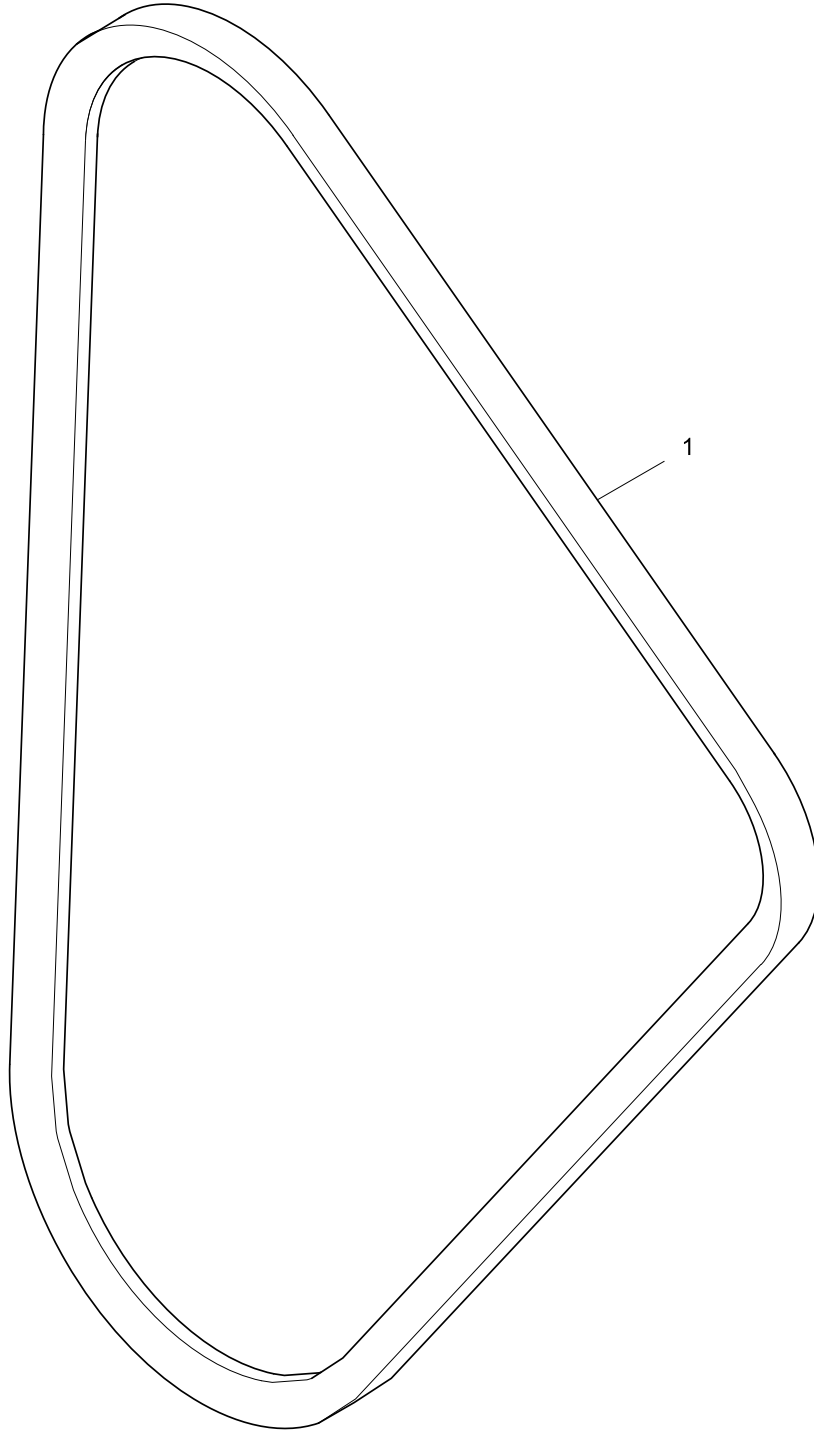 

Alternator Belt	Plate A
	4770812


Item	Part No.	References	Qty.	Description	Notes
1	5138591	 a. ↳ C83002303	1	BELT	

History					
a.					
1	T418022	↳ C83002302	1	BELT	

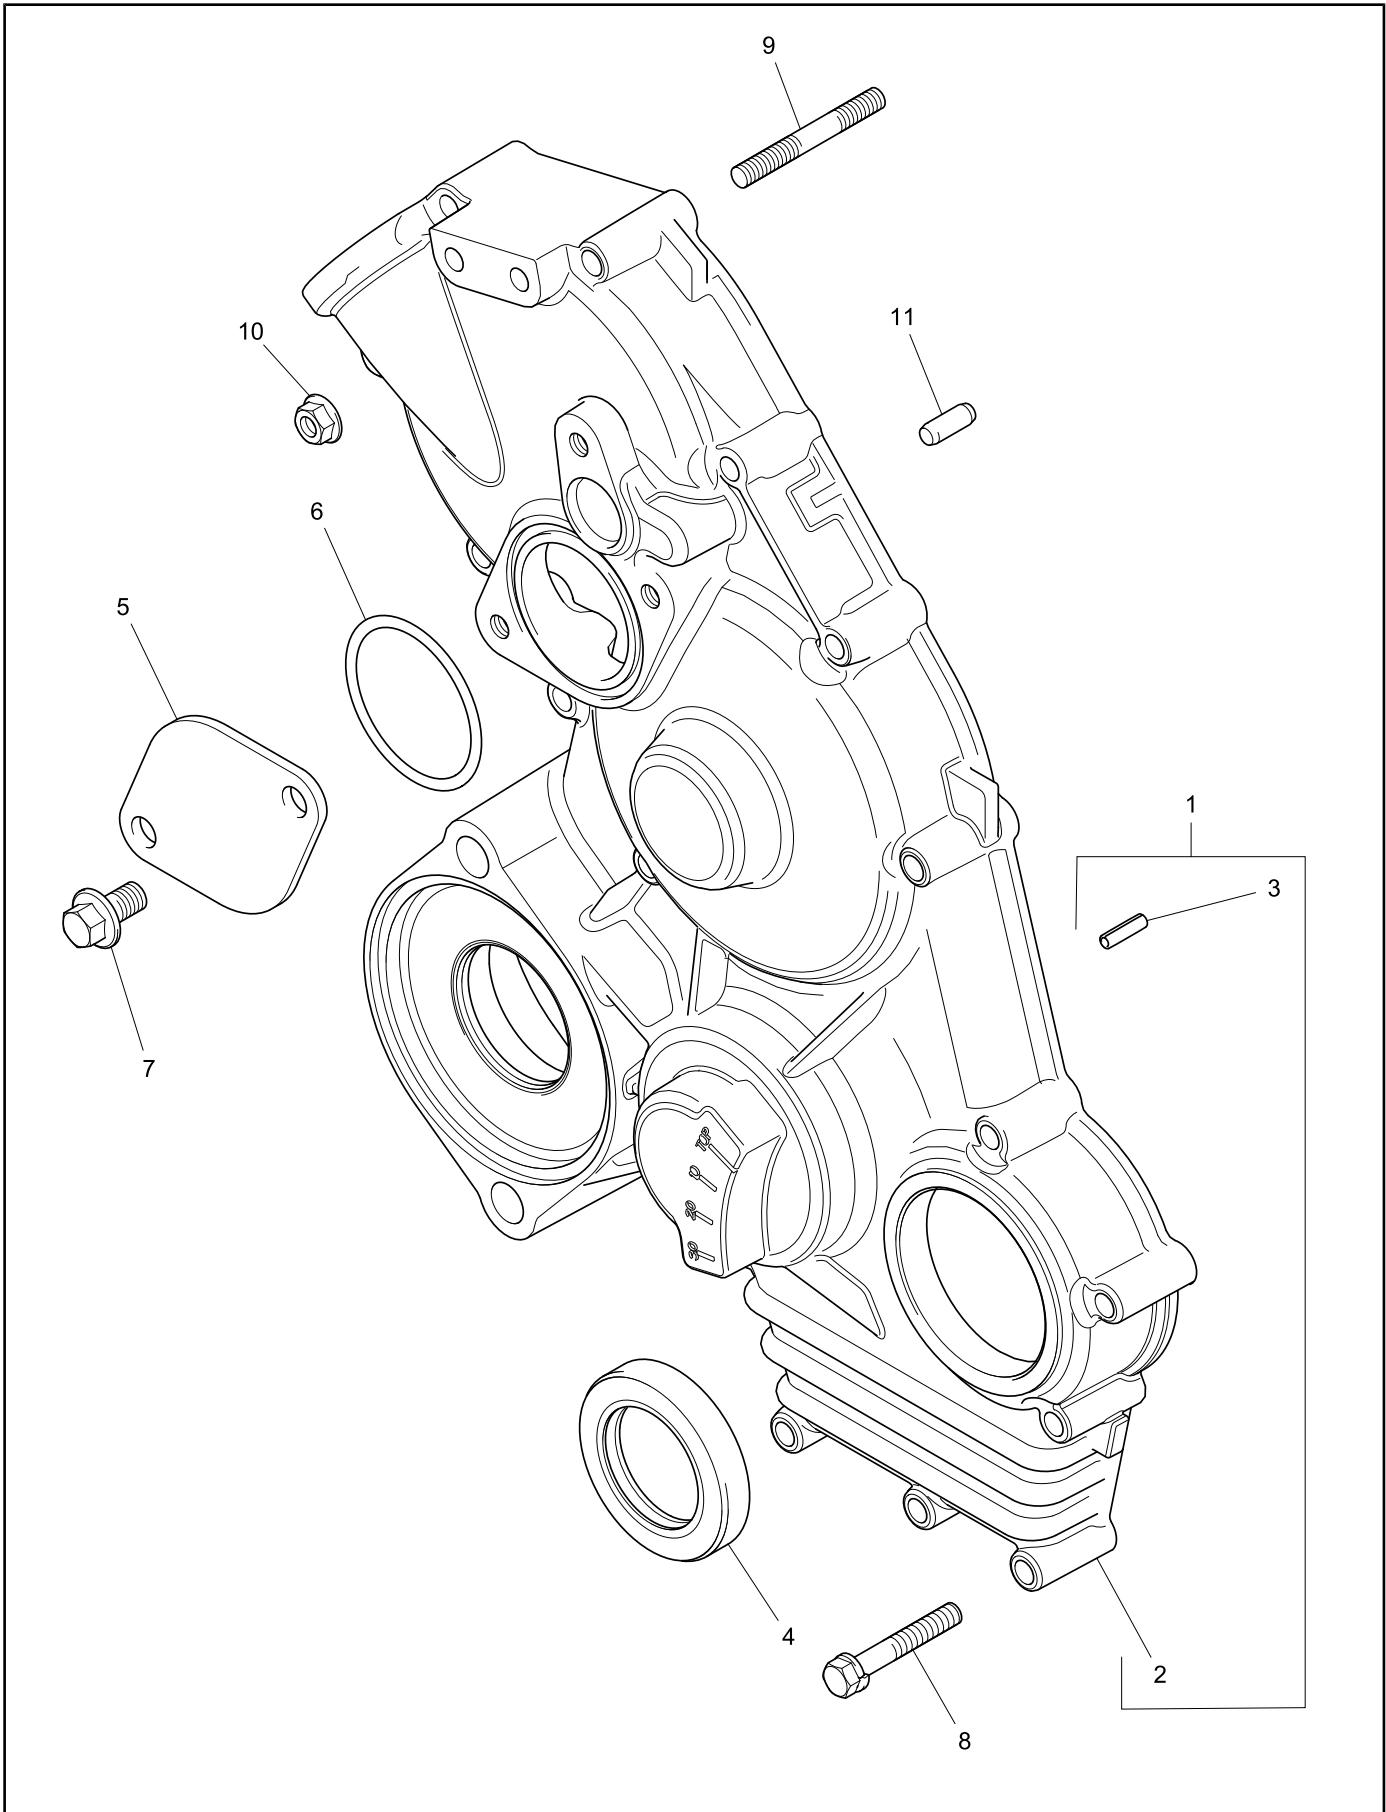 


Timing Case	Plate A
	5242311

Item	Part No.	References	Qty.	Description	Notes
1	T432679		1	TIMING CASE	
2		⇒ T432679	1	TIMING CASE	
3	030300414		1	PIN	
4	198636160		1	SEAL - FRONT END OIL	
5	165206740		1	COVER	
6	052400480		1	SEAL - O RING	
7	2314H001		2	SCREW	
8	011310640		14	SCREW	
9	012110645		2	STUD	
10	023100006		2	NUT	
11	030500616		2	DOWEL	

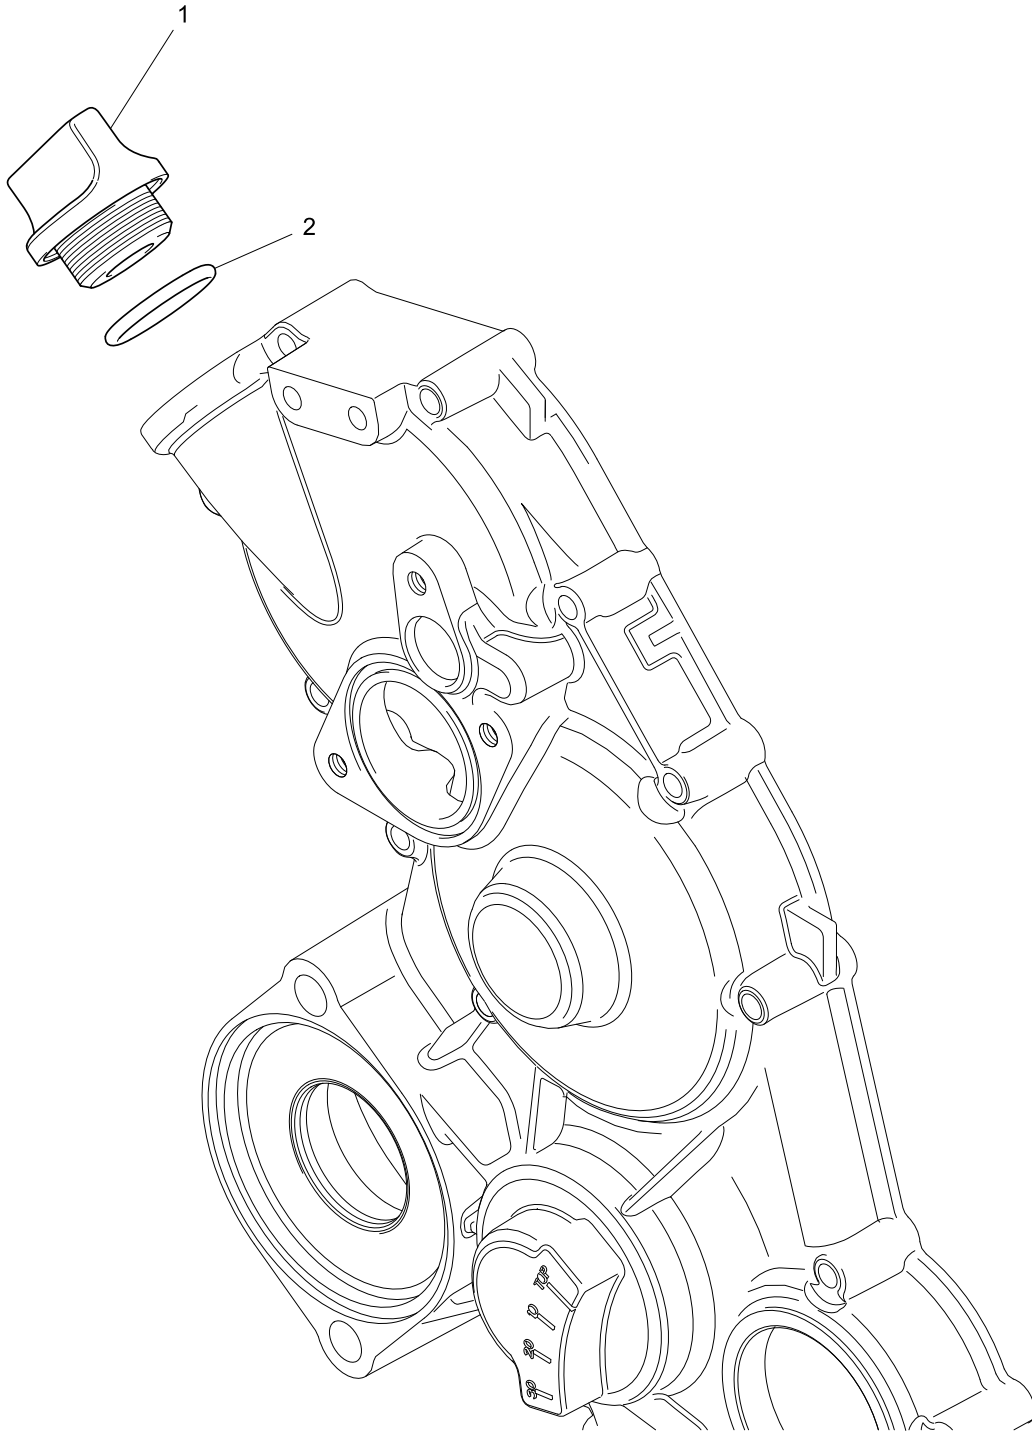 


Front Cover	Plate B
	5242311

Item	Part No.	References	Qty.	Description	Notes
1	198436390		1	OIL FILLER CAP	
2	T432689		1	O RING	

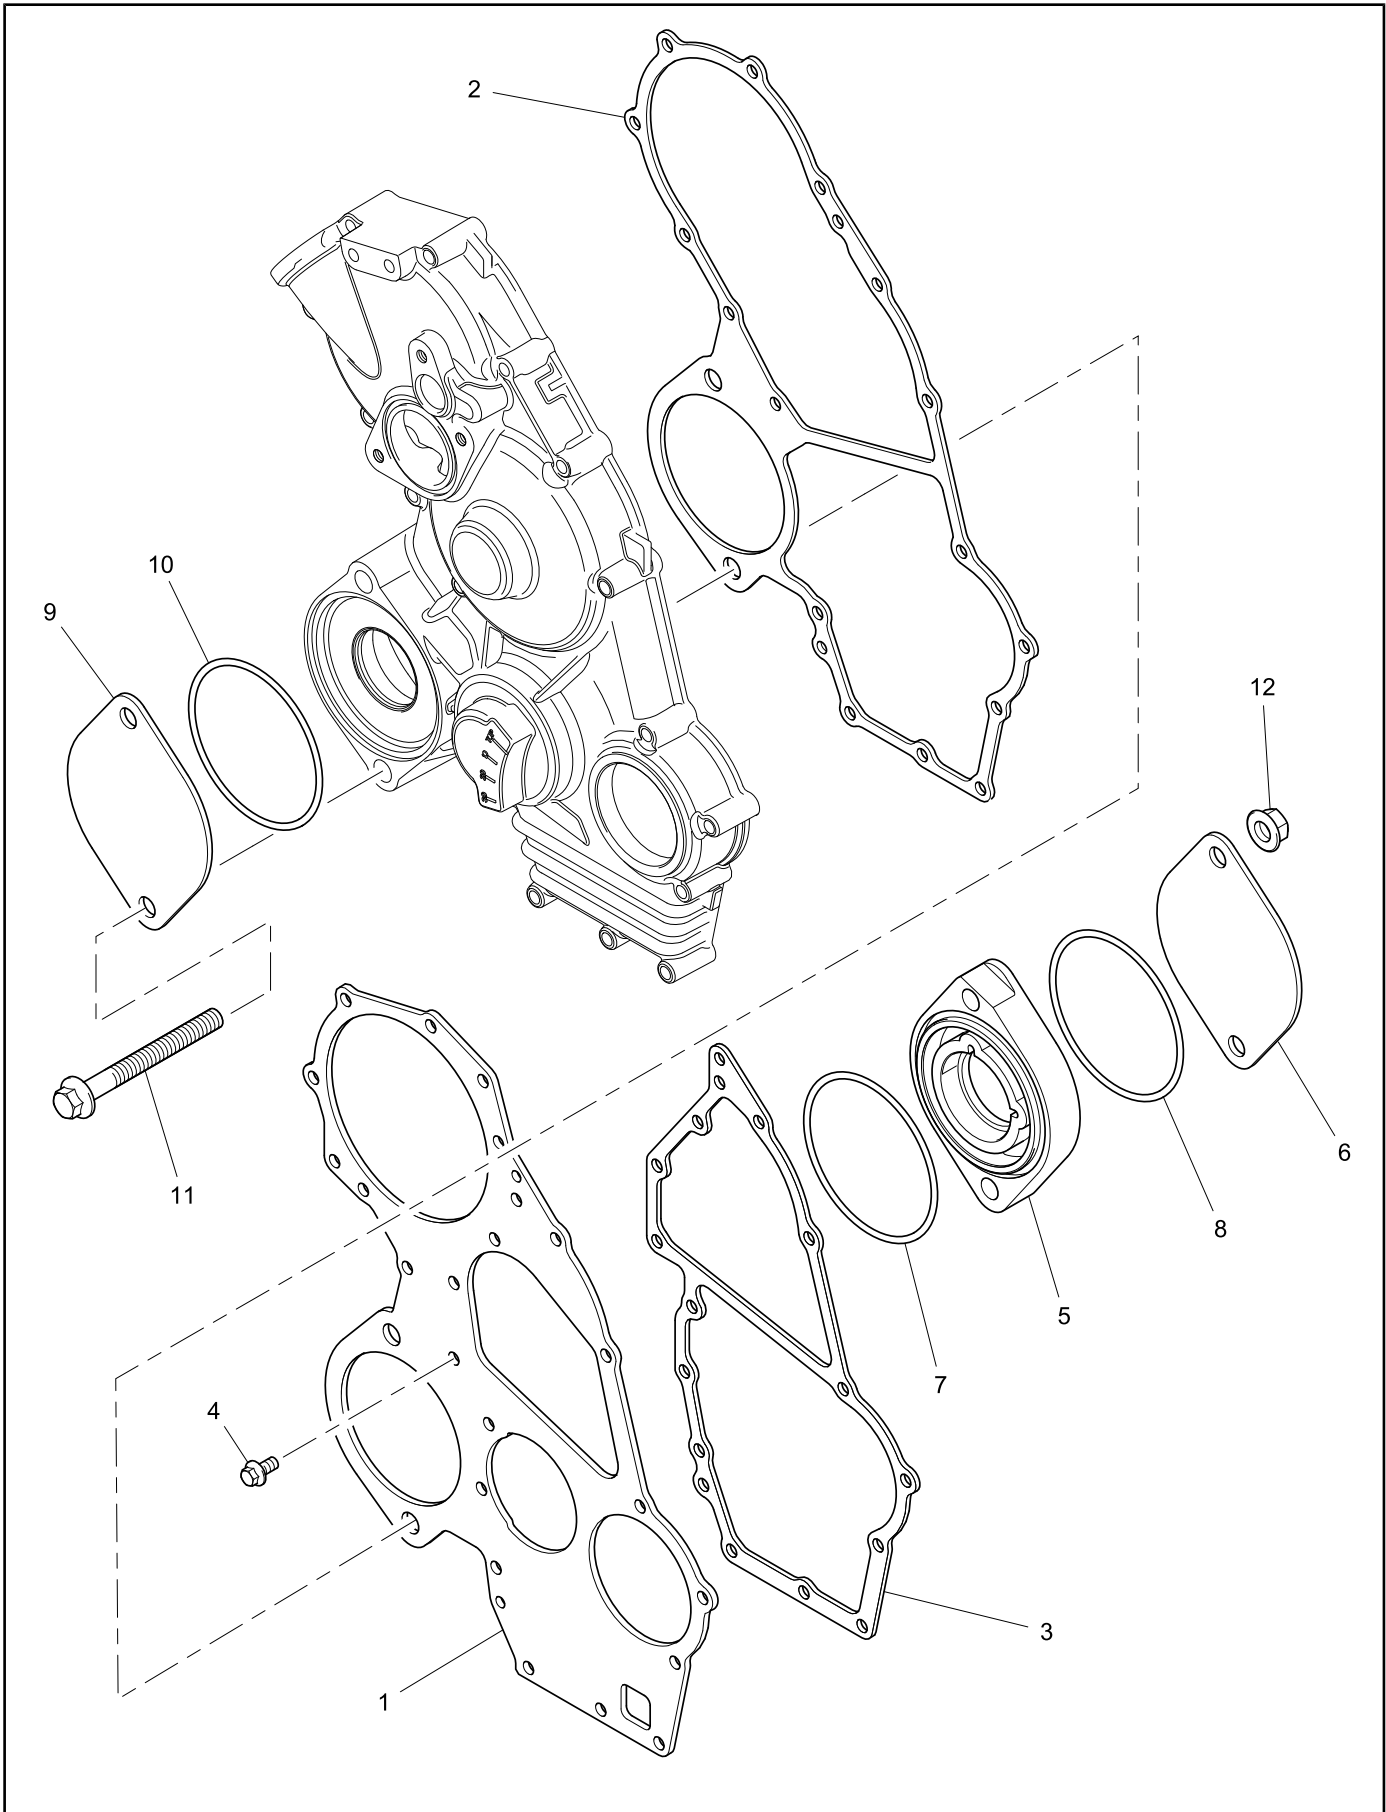 

Front Plate	Plate A
	5242311


Item	Part No.	References	Qty.	Description	Notes
1	165166860	↔	1	PLATE	
2	165996780		1	GASKET - TIMING CASE	
3	165996750		1	GASKET	
4	2314F001		5	SCREW	
5	110416290		1	BEARING HOLDER ASSEMBLY	
6	U65206791		1	COVER	
7	052300850		1	SEAL - O RING	
8	052300850		1	SEAL - O RING	
9	U65206791		1	COVER	
10	052300850		1	SEAL - O RING	
11	2314J017		2	SCREW	
12	2318A604		2	NUT	

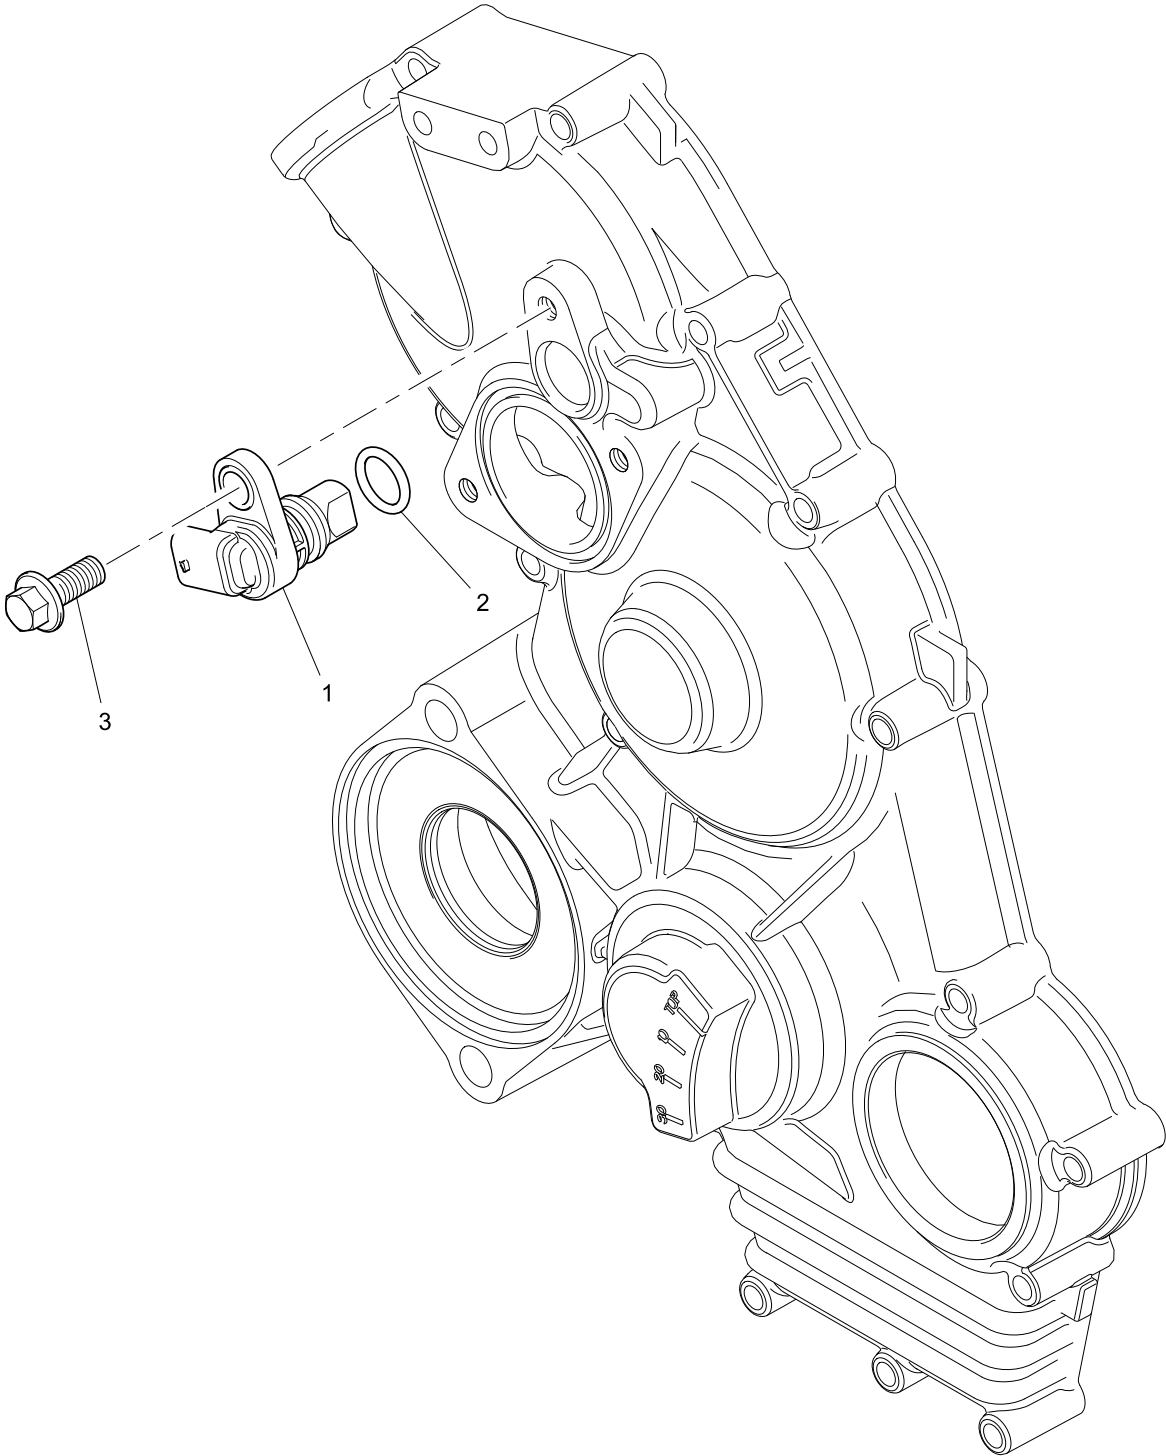 

Sensors	Plate A
	5242311


Item	Part No.	References	Qty.	Description	Notes
1	T431201		1	SPEED SENSOR	
2	2415H014		1	SEAL - O RING	(1)
3	2314H003		1	SCREW	

Footnotes	
(1)	DO NOT RE-USE ONCE REMOVED

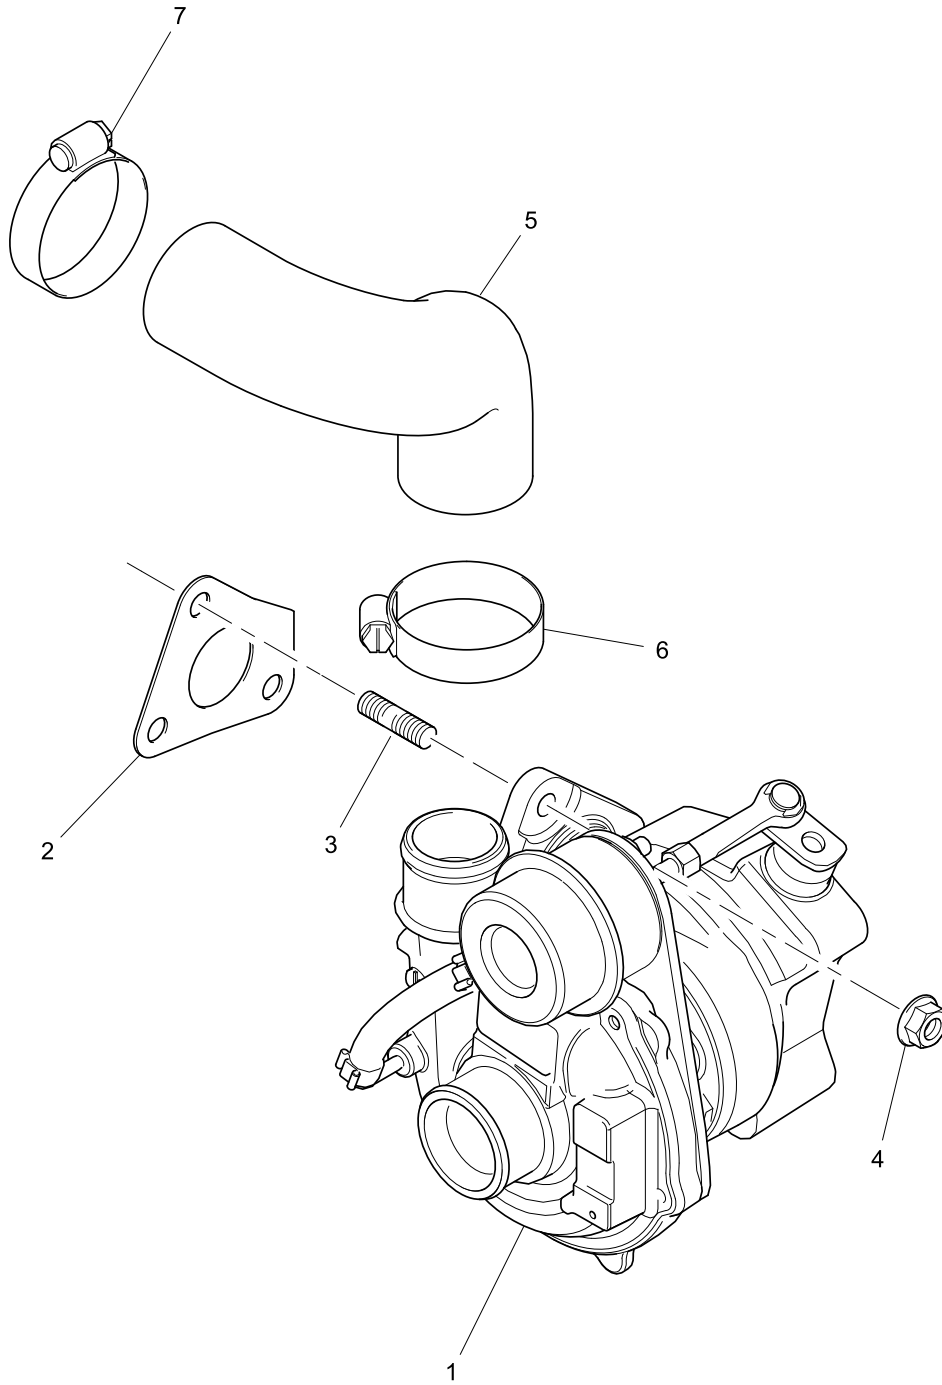 



Turbocharger	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T432501		1	TURBOCHARGER	
2	135997240		1	GASKET - TURBOCHARGER	
3	012109235		3	STUD	
4	T401456		3	NUT	
5	T432098		1	HOSE	
6	0180067		1	CLAMP	
7	0180067		1	CLAMP	

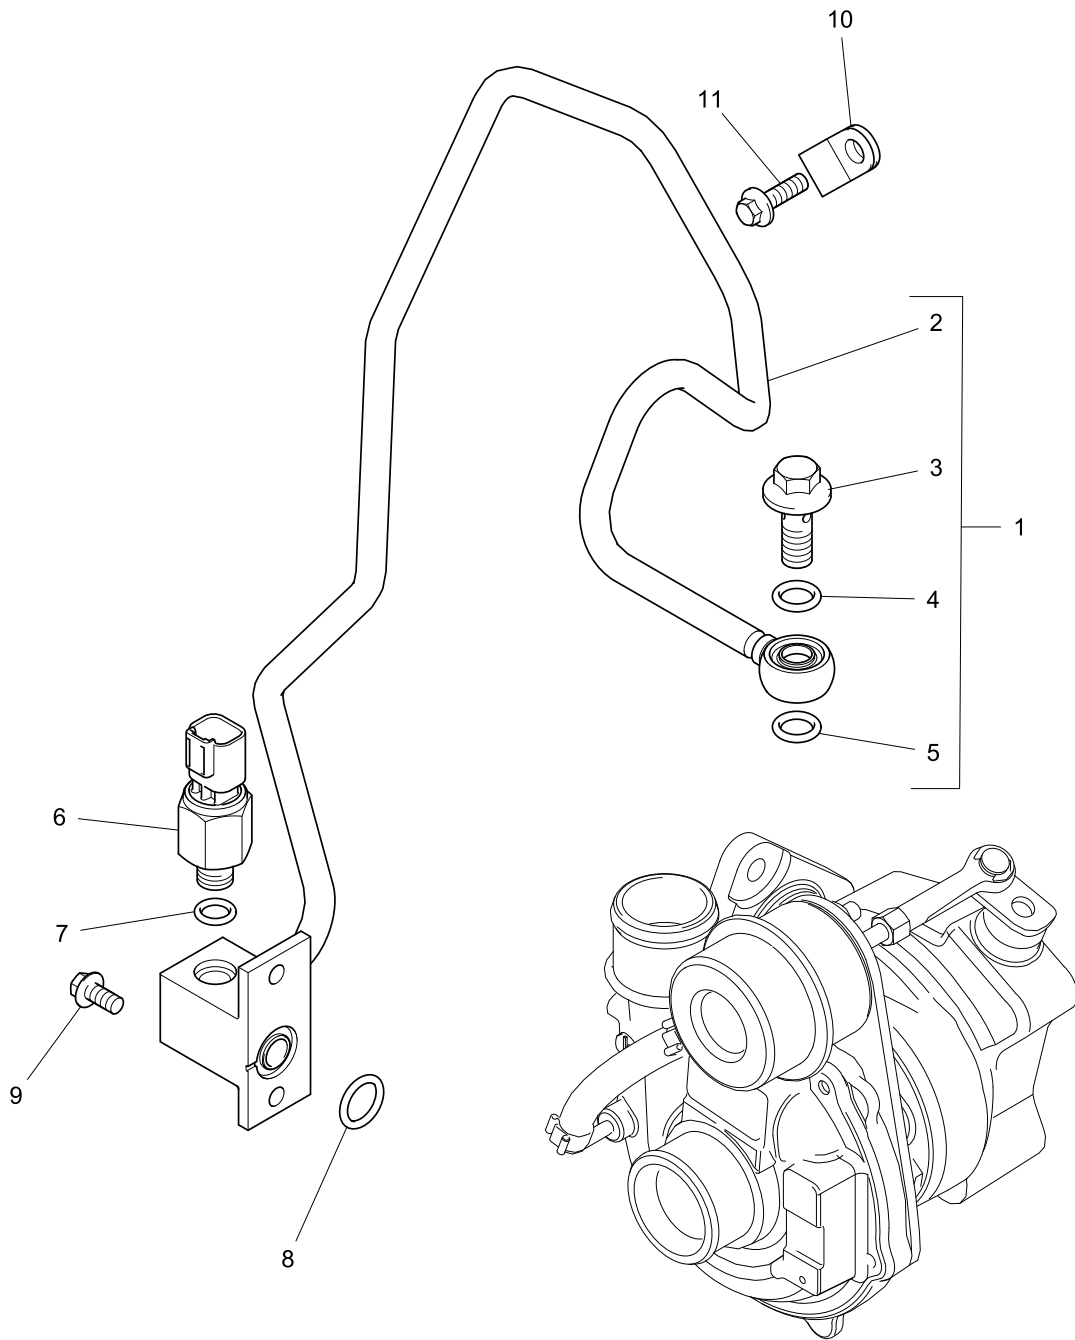 


Turbo Oil Feed Pipe	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T432122		1	PIPE - TURBO OIL FEED	
2		⇒ T432122	1	PIPE - TURBO OIL FEED	
3	T423366		1	BANJO BOLT	
4	CH10229		1	SEAL - O RING	
5	CH10229		1	SEAL - O RING	
6	T431758		1	OIL PRESSURE SENSOR	
7	2415H002		1	SEAL - O RING	
8	052109078		1	SEAL - O RING	
9	2314F002		2	SCREW	
10	T432502		1	PIPE CLIP	
11	2314F002		1	SCREW	

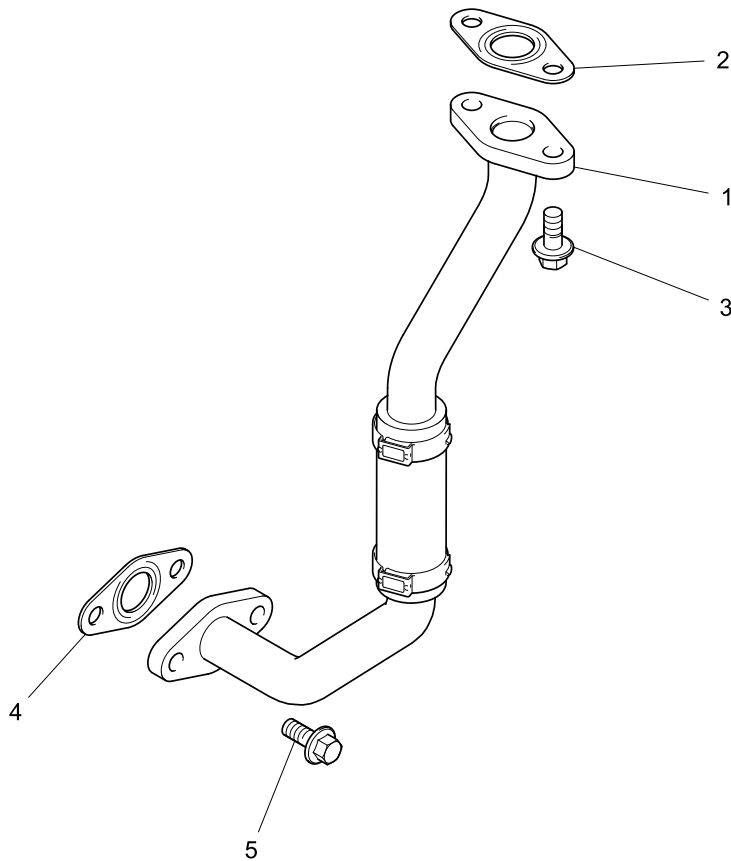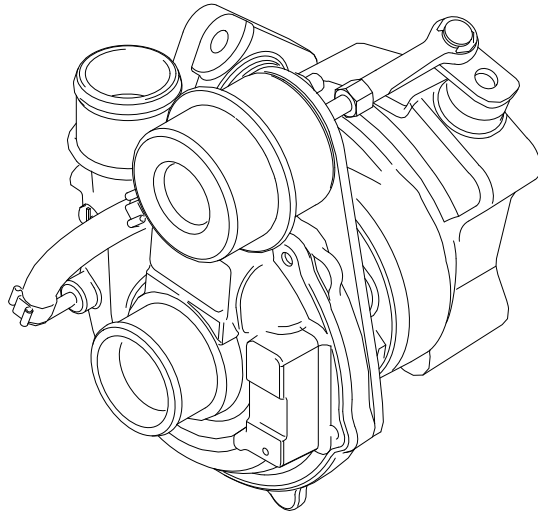  


Turbo Oil Drain Pipe	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T432127		1	PIPE - TURBO OIL DRAIN	
2	3688A035	↔	1	GASKET	
3	2314F003		2	SCREW	
4	3688A035	↔	1	GASKET	
5	2314F003		2	SCREW	

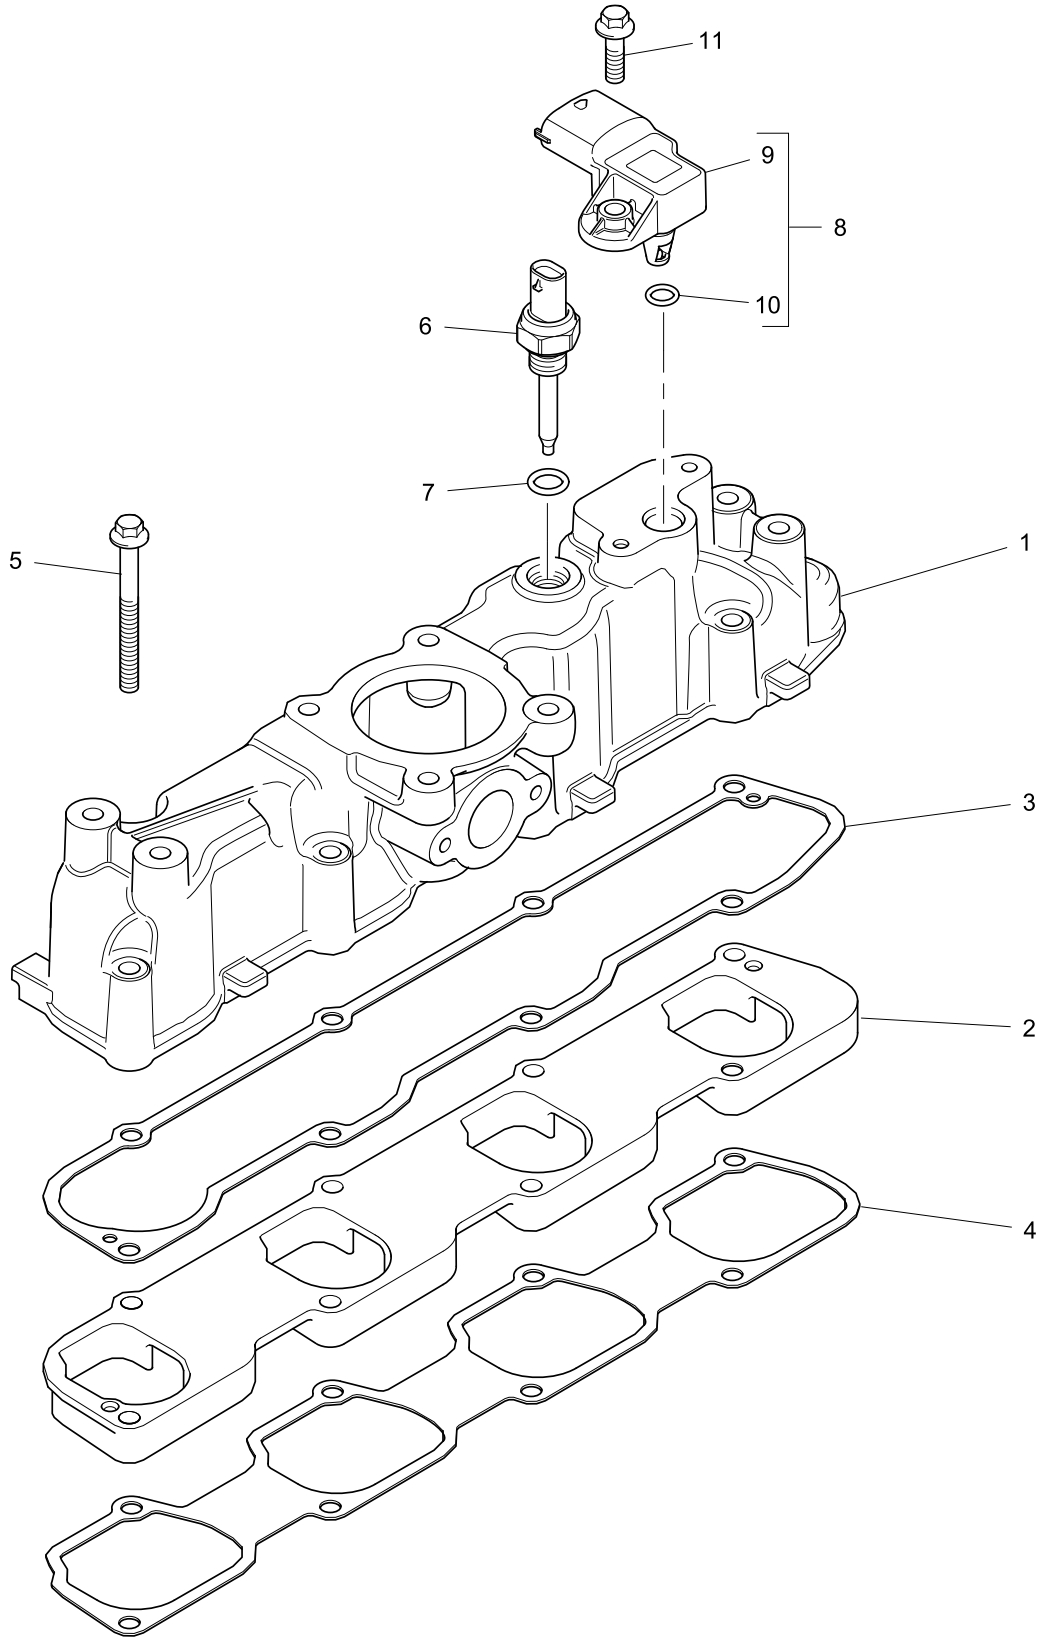 


Inlet Manifold	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T432092		1	INDUCTION MANIFOLD	
2	135596911	↖	1	SPACER	
3	U35997180		1	GASKET - IND MANIFOLD	
4	U35997170		1	GASKET - IND MANIFOLD	
5	2314F013		8	SCREW	
6	T432195		1	SENSOR	
7	2415H011		1	O RING	
8	T431796		1	SENSOR	
9		⇒ T431796	1	SENSOR	
10	T432194		1	O RING	
11	2314F005		1	SCREW	

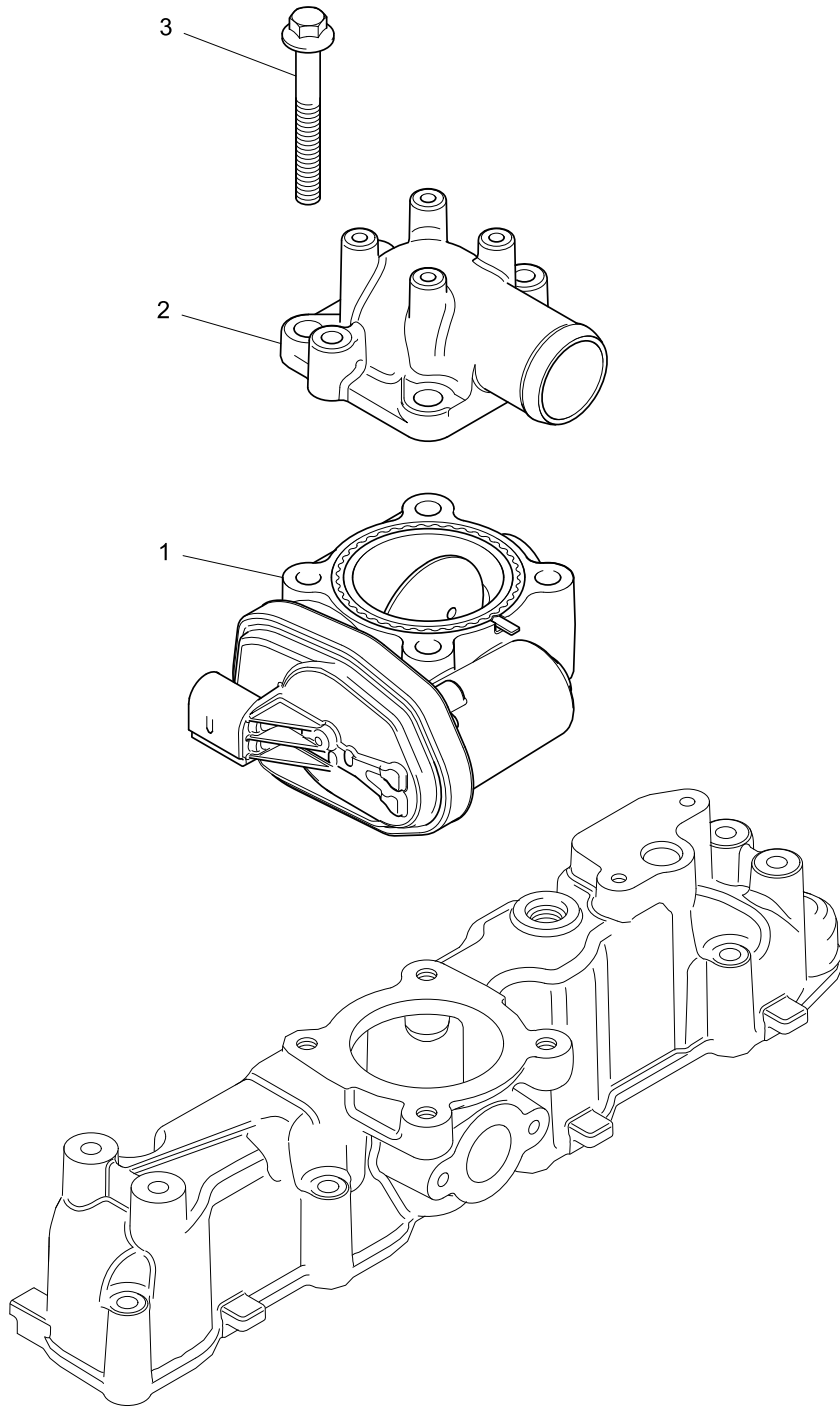 


Inlet Manifold	Plate B
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T431847	↔	1	THROTTLE	
2	T432105		1	ADAPTOR	
3	2314H012		4	SCREW	

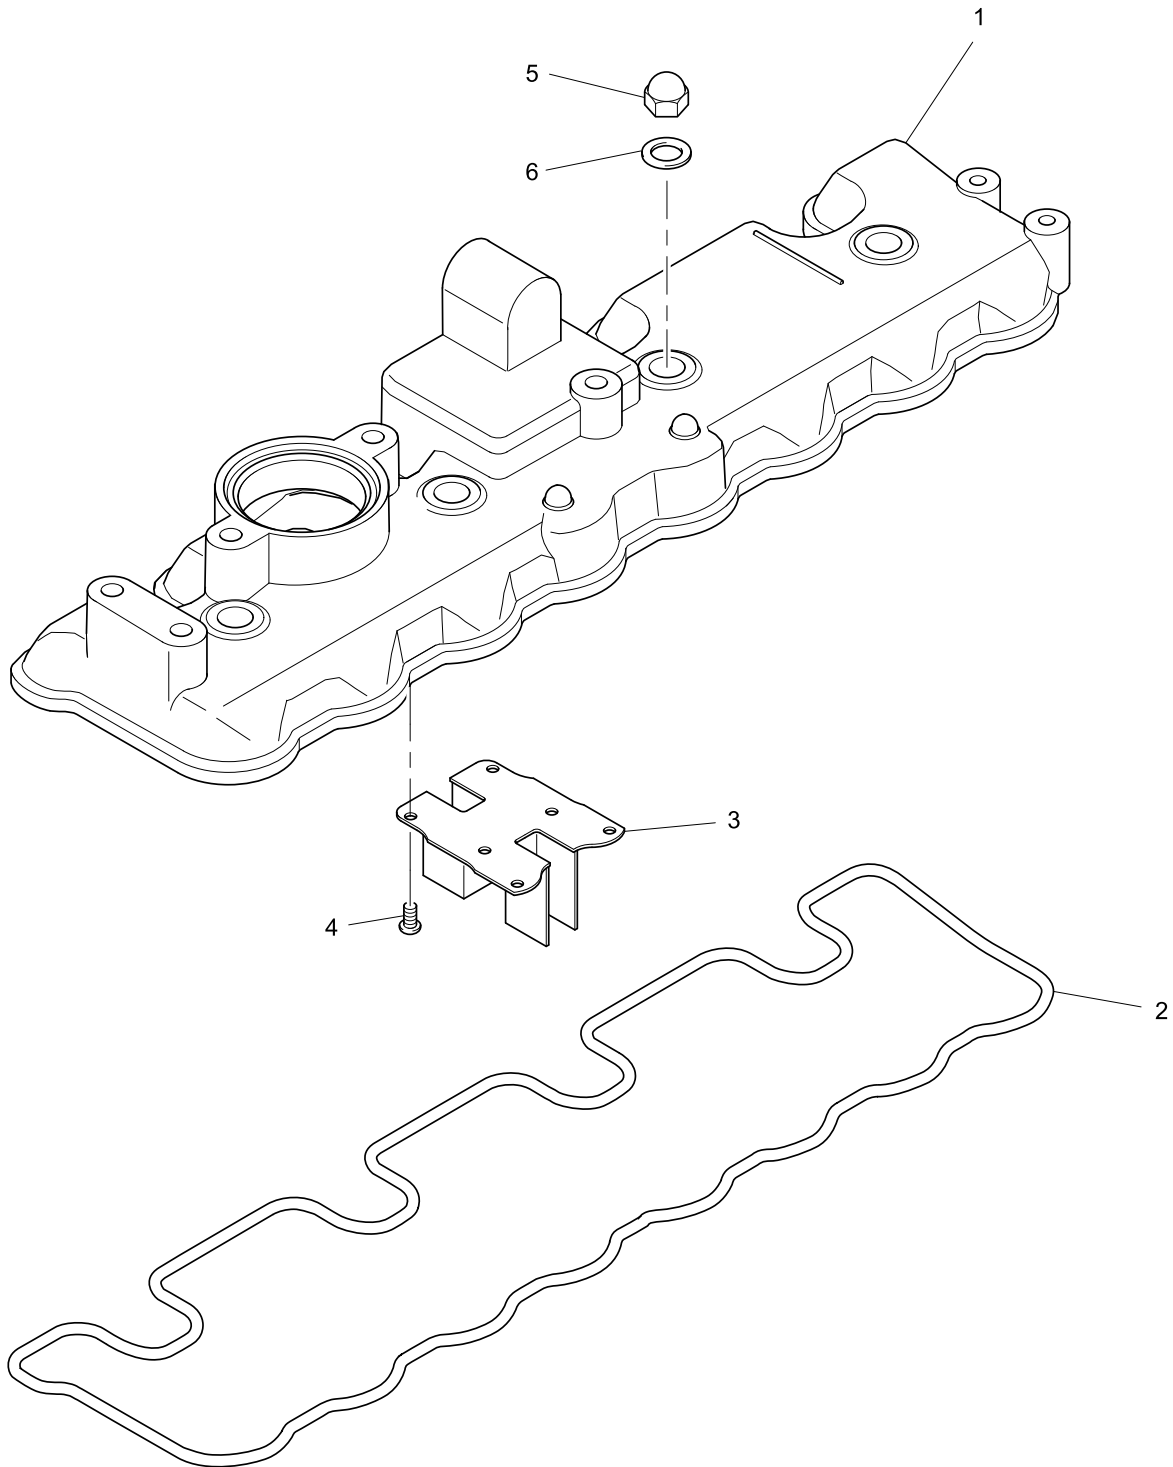 


Cylinder Head Cover	Plate C
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	U11211490		1	CYLINDER HEAD COVER	
2	U11996520		1	GASKET - CYL. HEAD COVER	
3	110666280		1	PLATE	
4	015600406		6	SCREW	
5	T428481		4	NUT	
6	2411D010		4	WASHER	

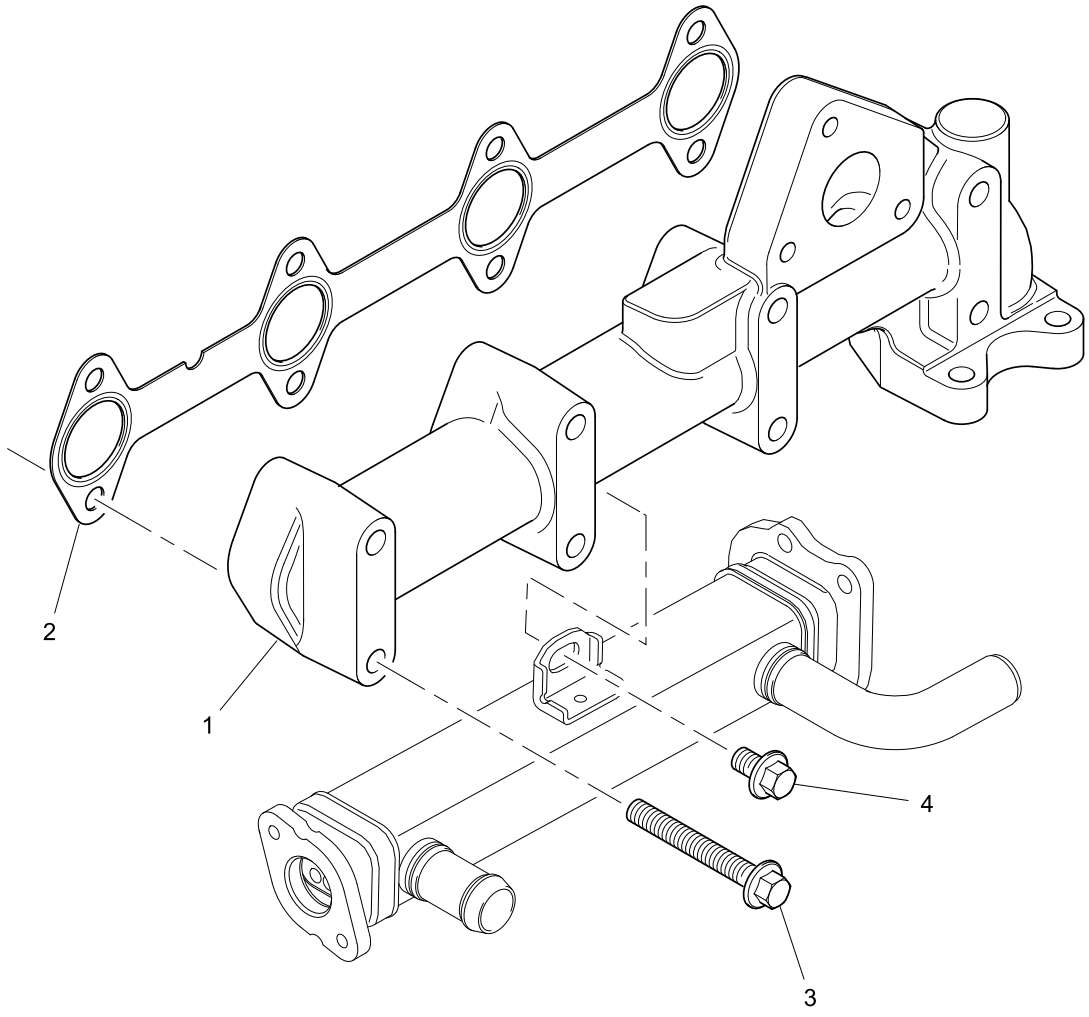 


Exhaust Manifold	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T432093	↔	1	EXHAUST MANIFOLD	
2	U35997200		1	GASKET - EXHAUST MANIFOLD	
3	T432212		8	BOLT	
4	2314H102		1	SCREW	

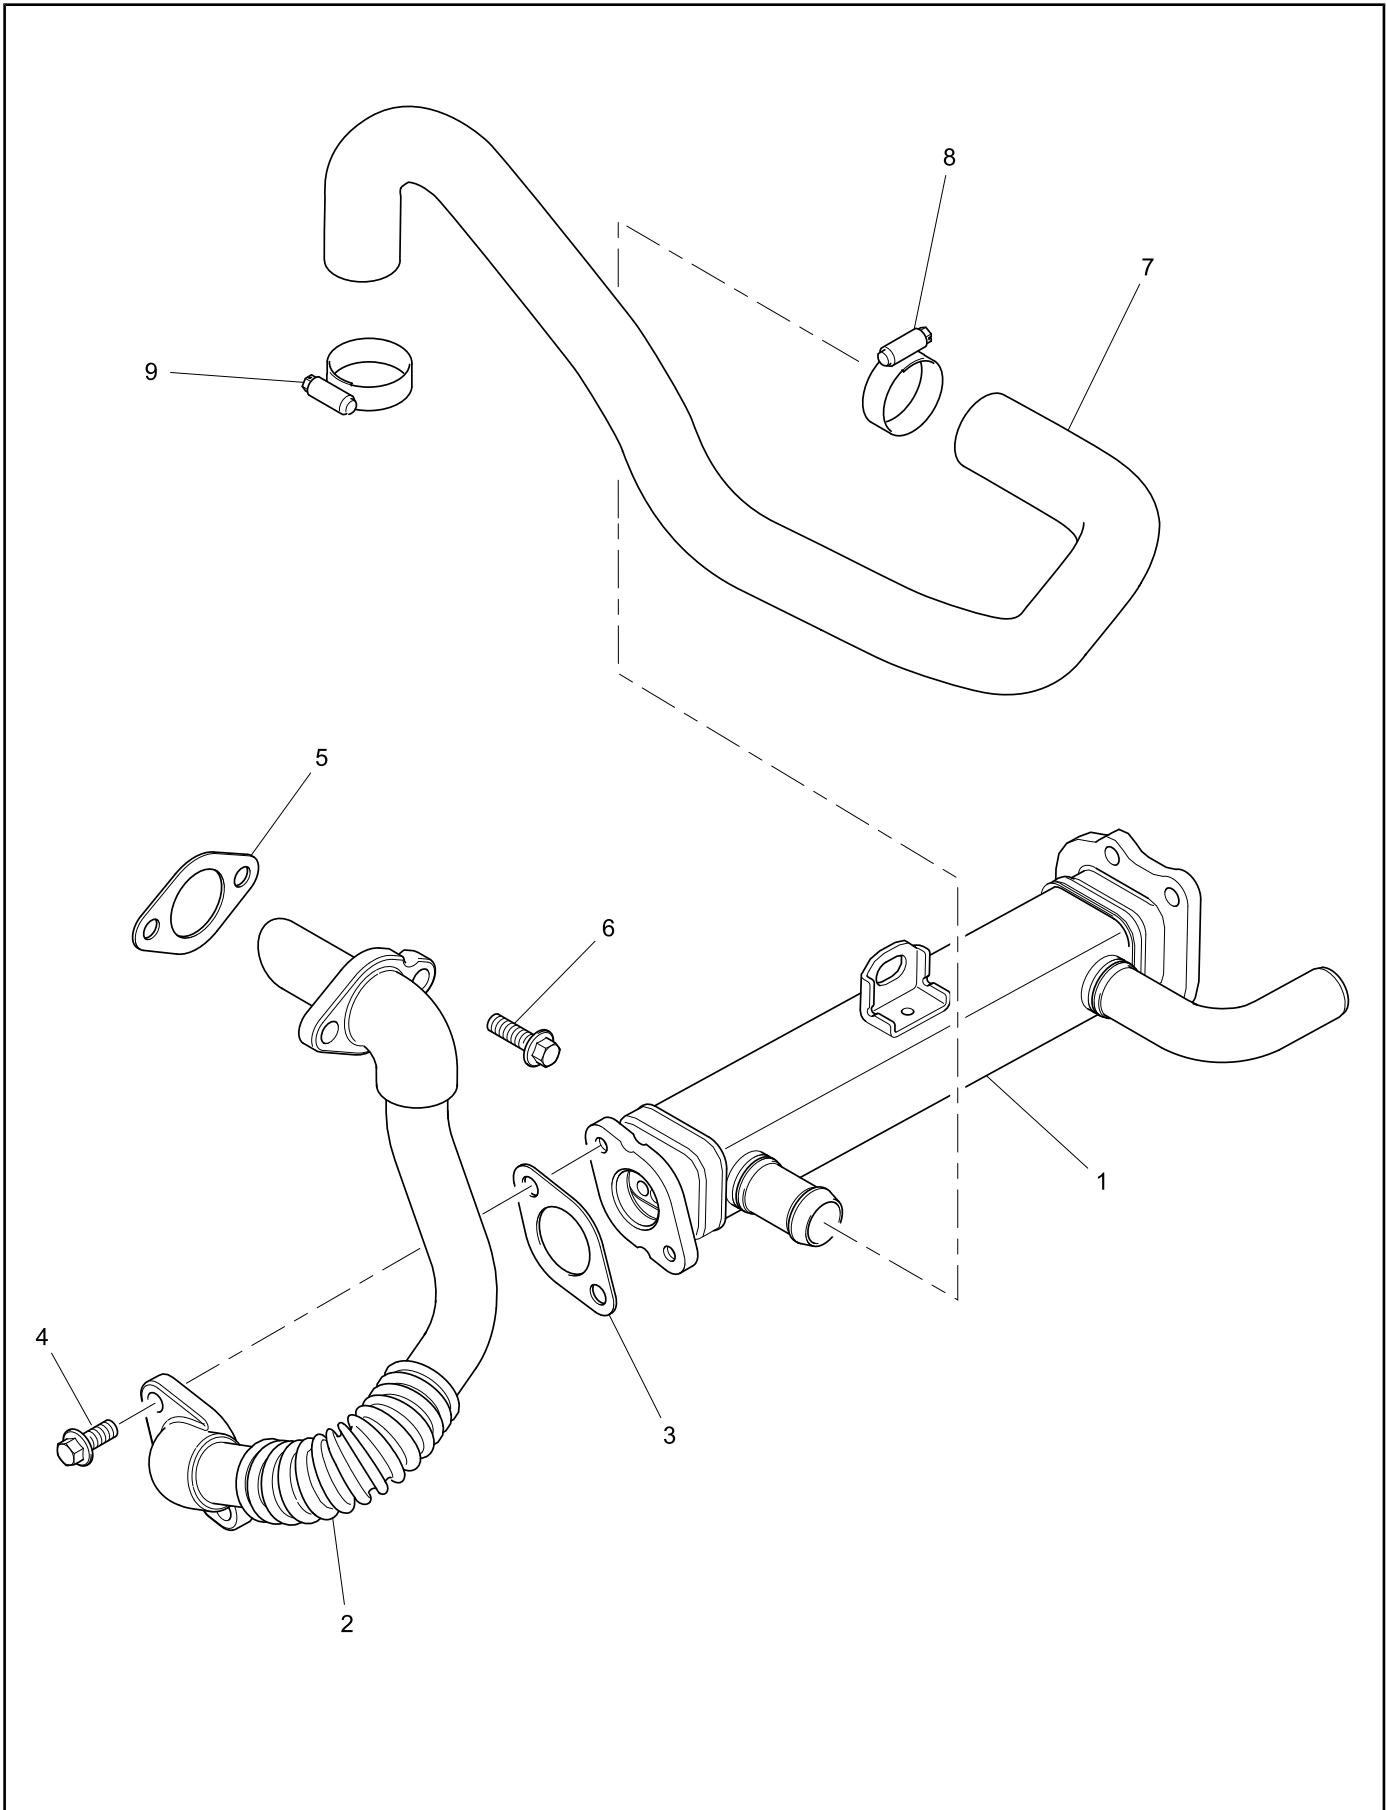 


NOx Reduction System	Plate A
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	T433904		1	COOLER	
2	T432113		1	PIPE - COOLER TO MANIFOLD	
3	T432095		1	GASKET	
4	2314F003		2	SCREW	
5	T432095		1	GASKET	
6	2314F005		2	SCREW	
7	T432131		1	HOSE	
8	2481863		1	HOSE CLIP	
9	2481863		1	HOSE CLIP	


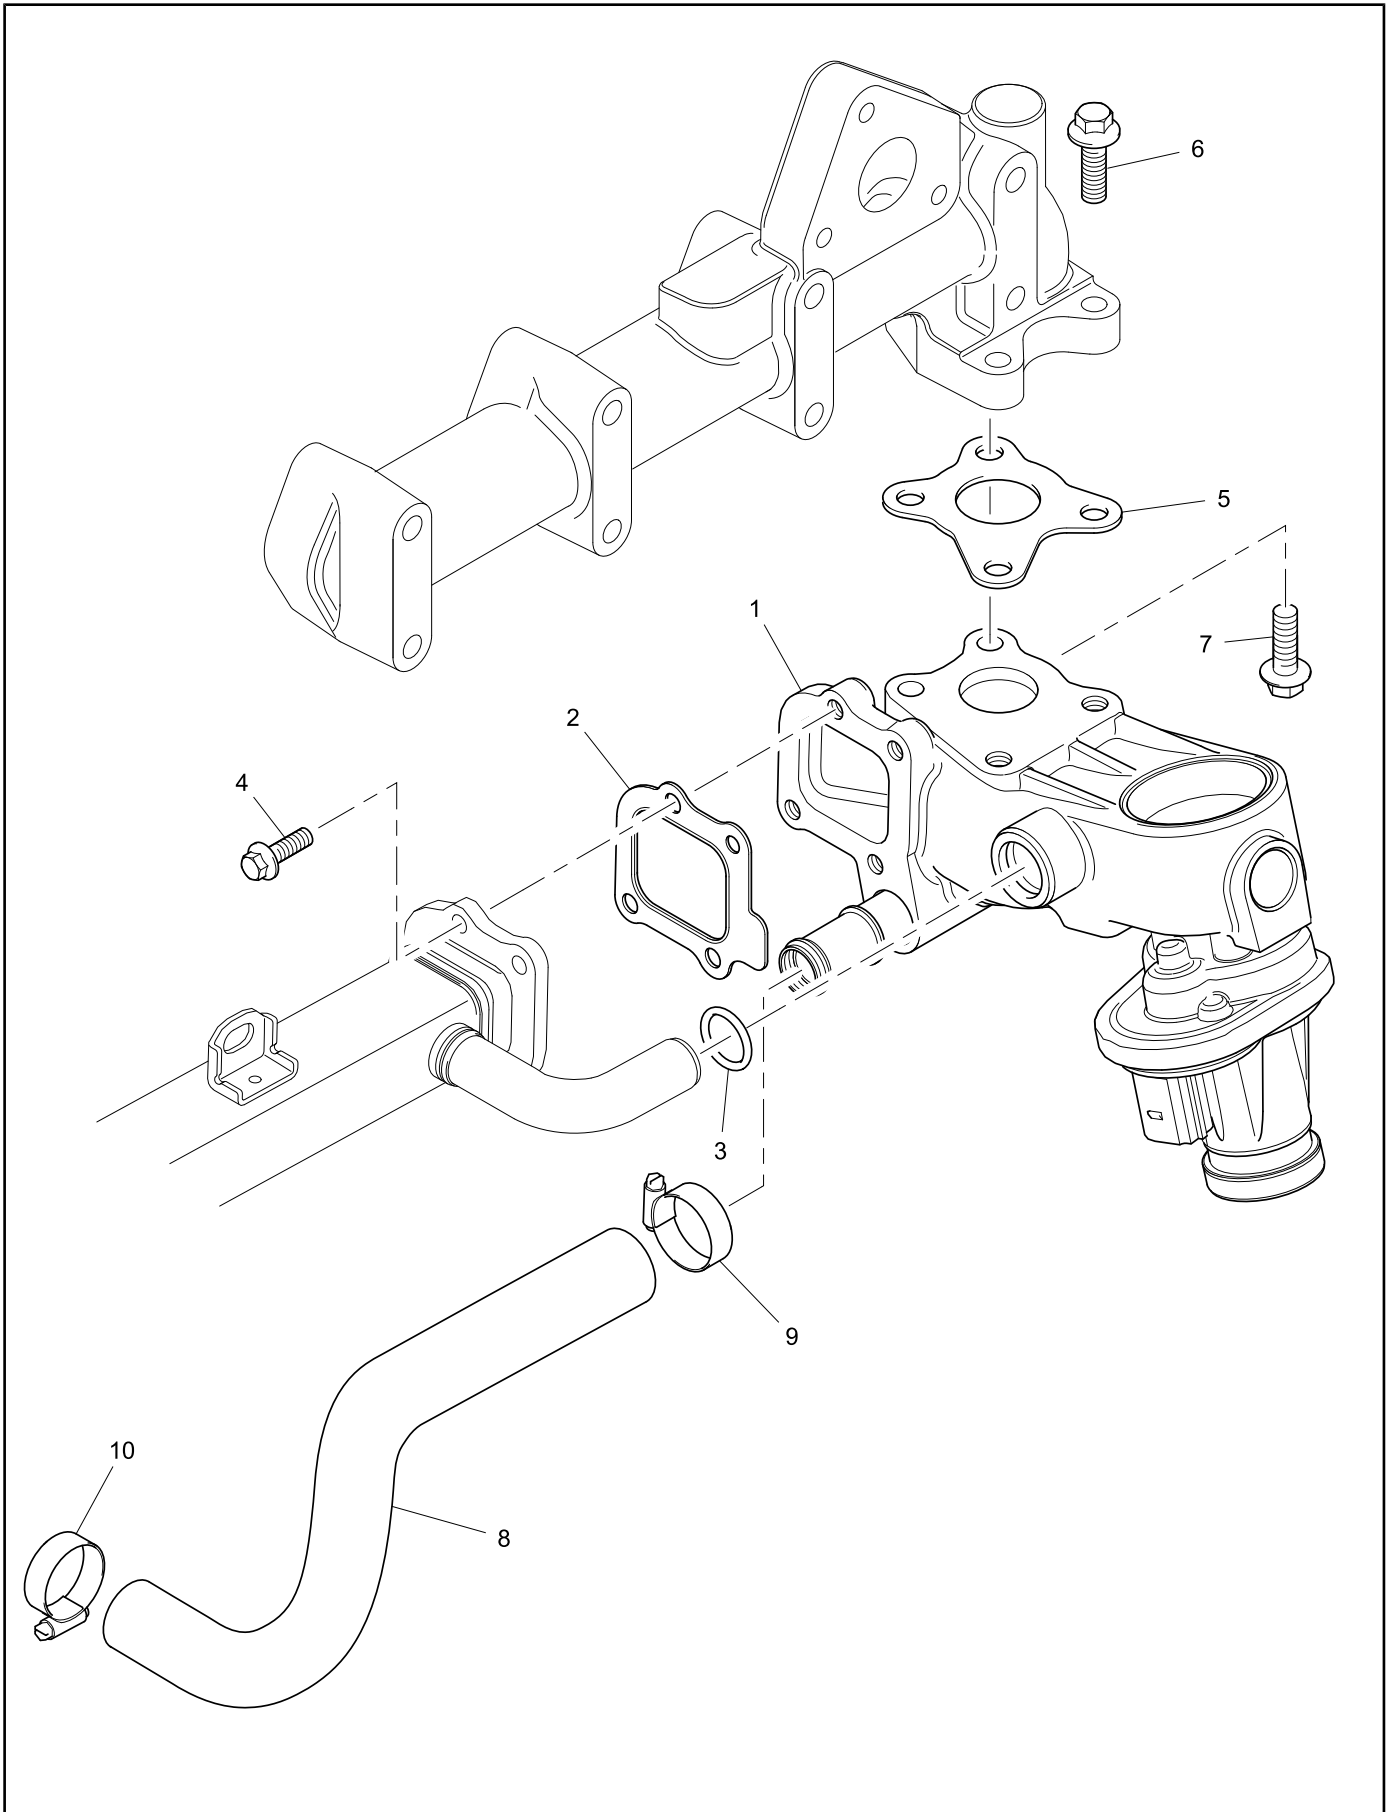 


NOx Reduction System	Plate B
	5412249


Item	Part No.	References	Qty.	Description	Notes
1	T433908		1	VALVE ASSEMBLY	
2	T432843		1	GASKET	
3	T431846		1	SEAL - O RING	
4	2314F005		4	SCREW	
5	T432094		1	GASKET	
6	2314H004		2	SCREW	
7	2314H004		2	SCREW	
8	T432130		1	HOSE	
9	2481863		1	HOSE CLIP	
10	2481863		1	HOSE CLIP	

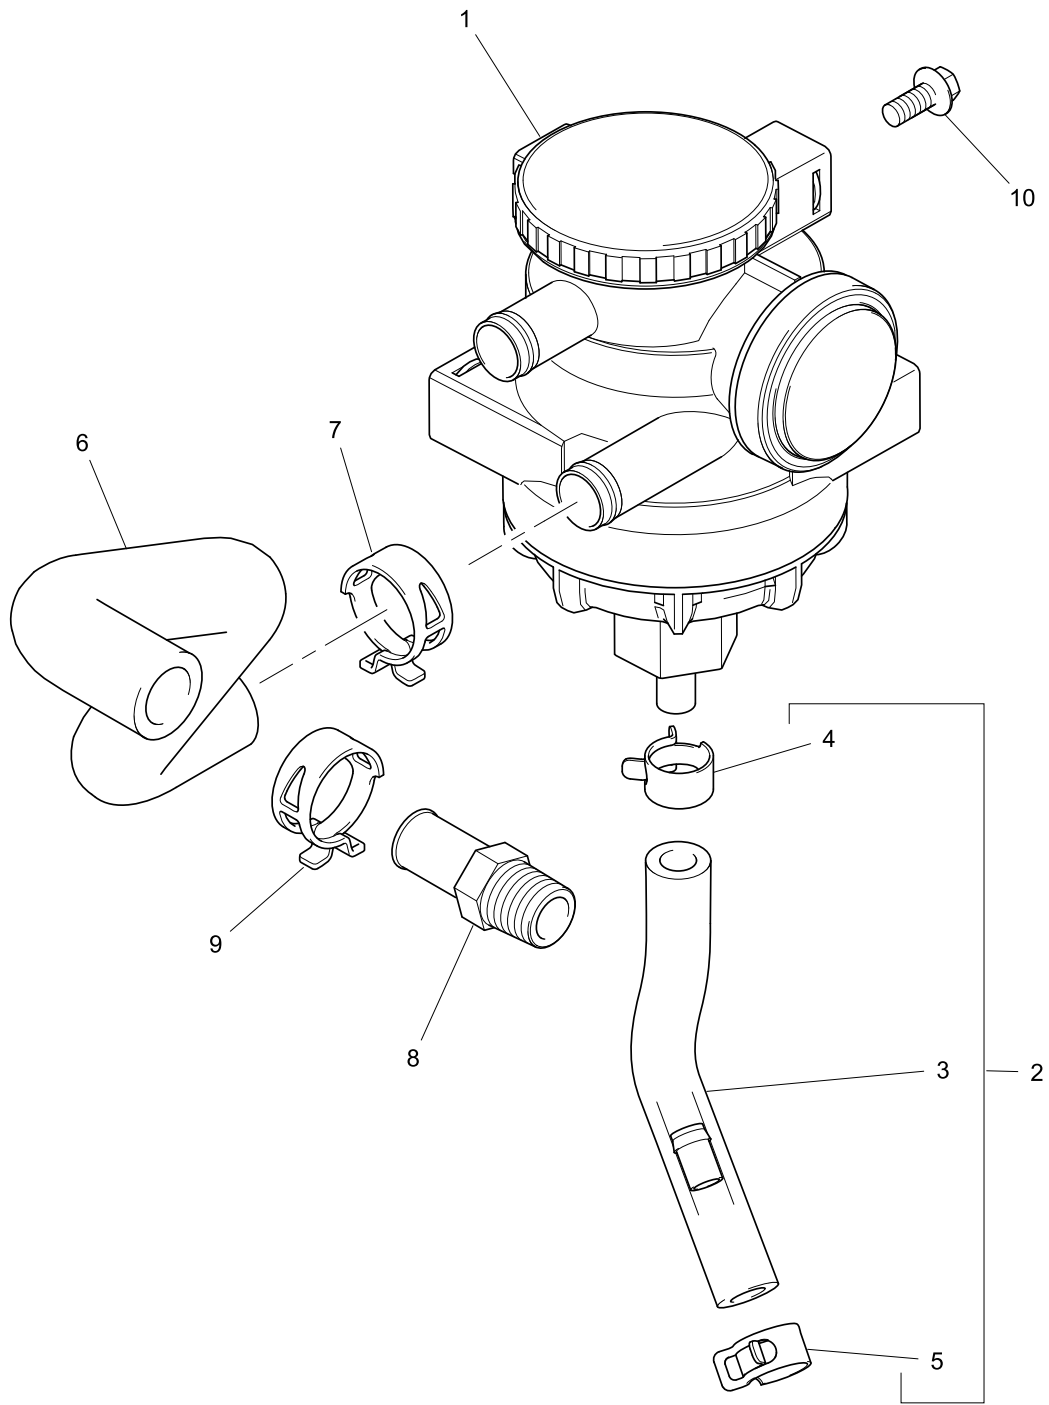 


Item	Part No.	References	Qty.	Description	Notes
1	110056060		1	BREATHER	
2	130806250		1	HOSE	
3		⇒ 130806250	1	HOSE	
4	067200150		1	CLIP	
5	067200150		1	CLIP	
6	T432084		1	HOSE	
7	T426675		1	HOSE CLIP	
8	198487890		1	CONNECTION	
9	T426675		1	HOSE CLIP	
10	2314F003		3	SCREW	

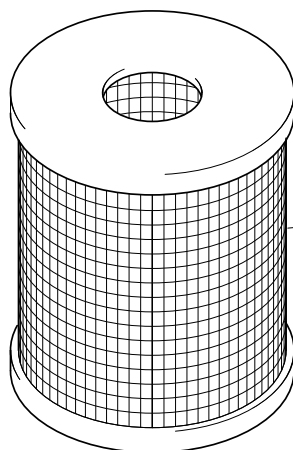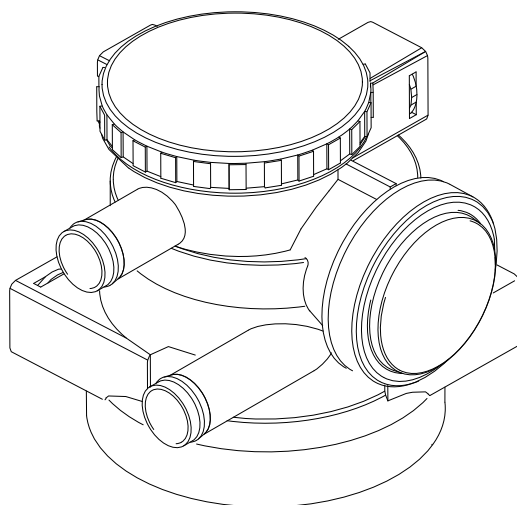  

1

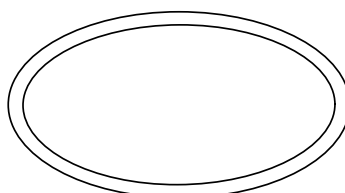 


2

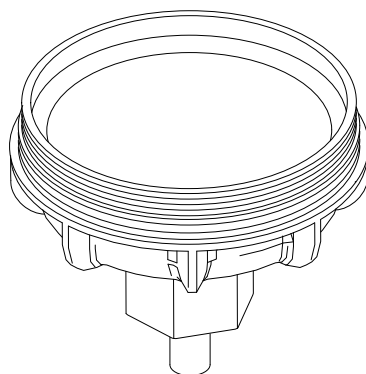 


NOx Reduction System	Plate D
	5412249

Item	Part No.	References	Qty.	Description	Notes
1	110536010		1	BREATHER ELEMENT	
2	052109136		1	SEAL - O RING	

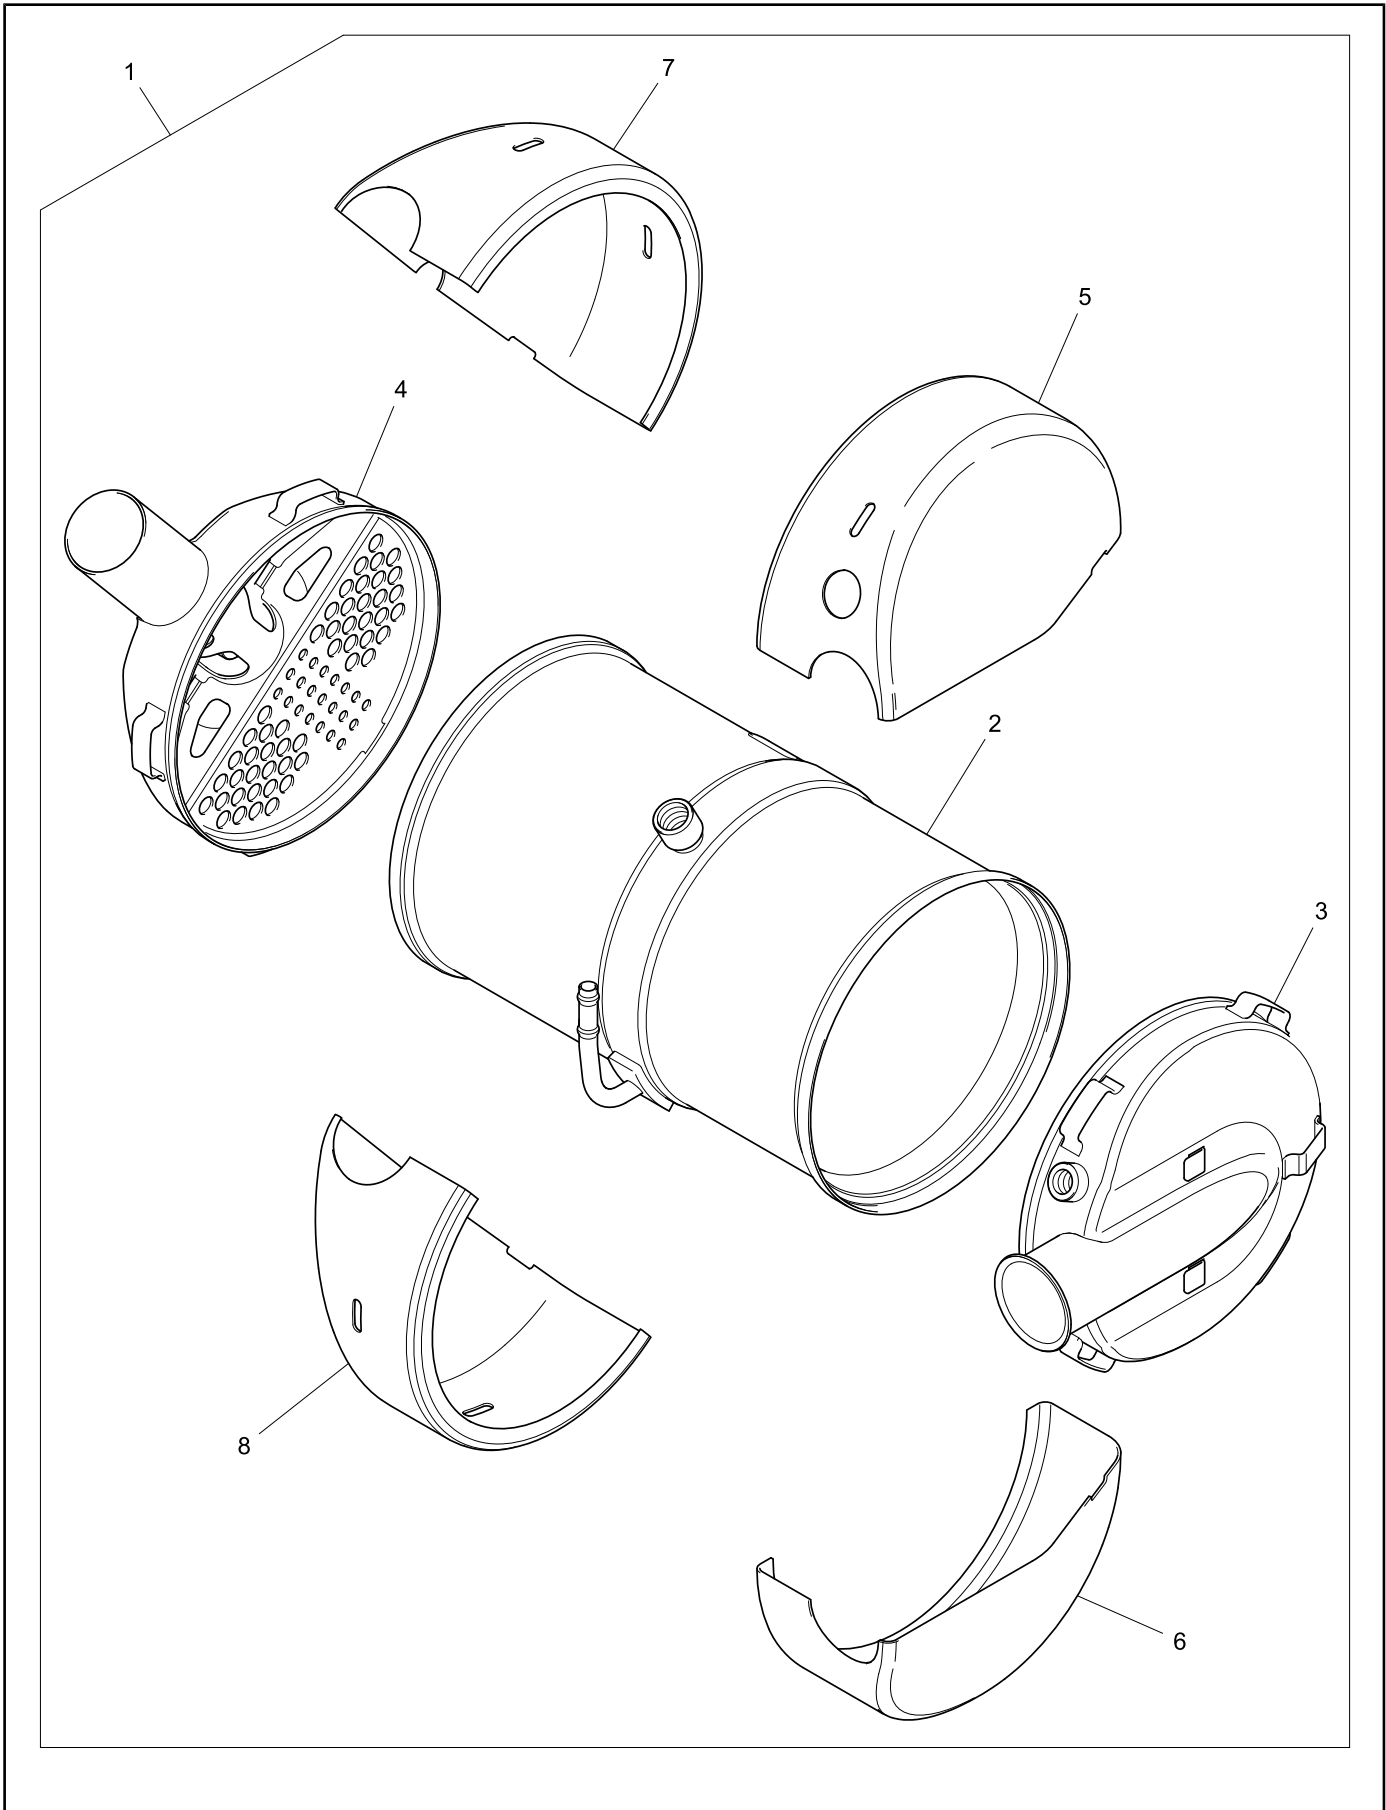 


NOx Reduction System	Plate A
	5242331

Item	Part No.	References	Qty.	Description	Notes
1	T432377		1	AIR FILTER ASSEMBLY	
2		⇒ T432377	1	FILTER	
3		⇒ T432377	1	INLET	
4		⇒ T432377	1	OUTLET	
5		⇒ T432377	1	HEATSHIELD	
6		⇒ T432377	1	HEATSHIELD	
7		⇒ T432377	1	HEATSHIELD	
8		⇒ T432377	1	HEATSHIELD	

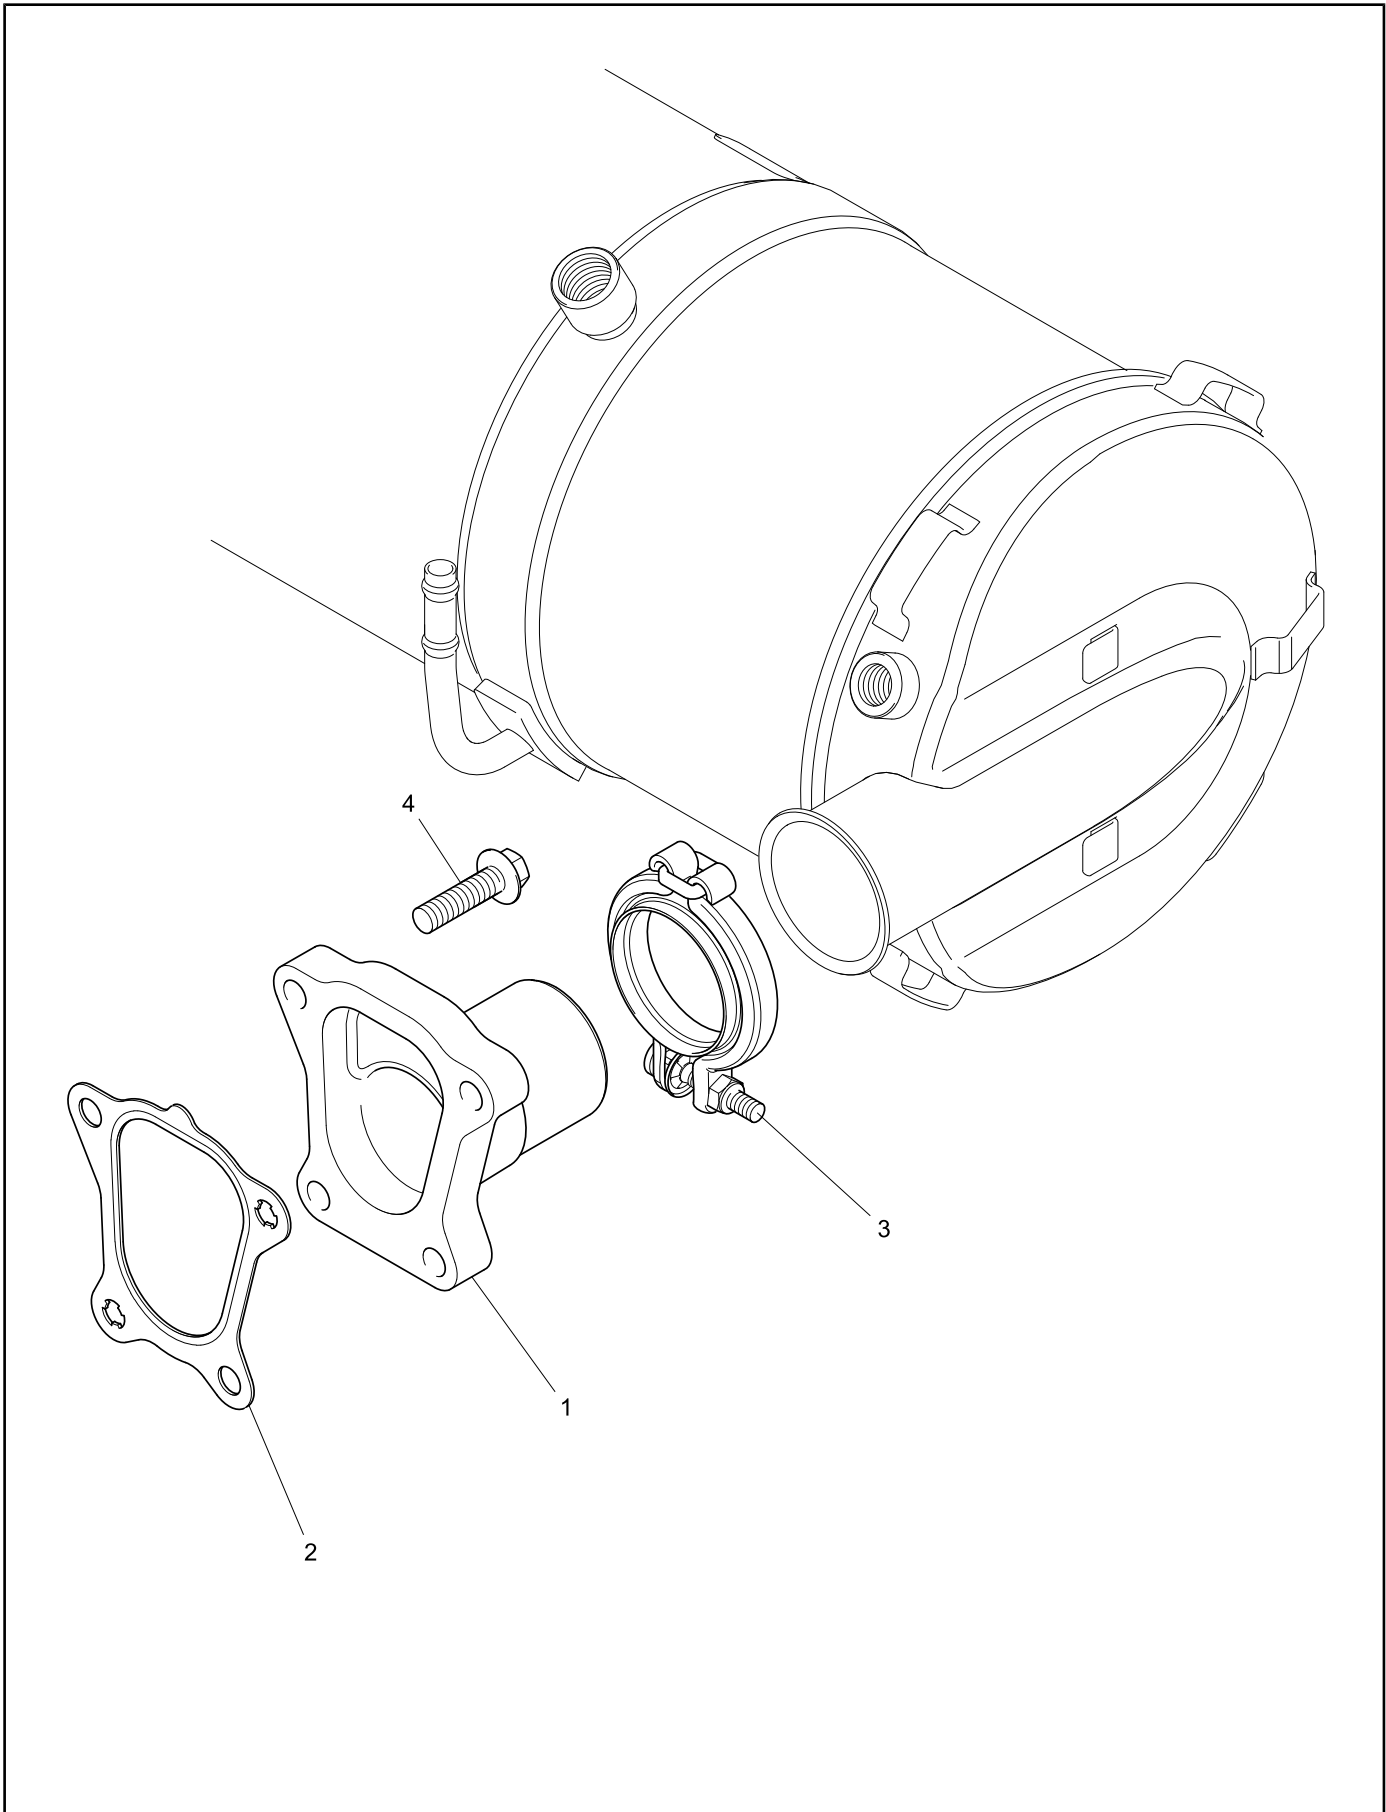 


Exhaust Outlet	Plate A
	5242331

Item	Part No.	References	Qty.	Description	Notes
1	T432398		1	EXHAUST OUTLET	
2	T432096		1	GASKET - EXHAUST	
3	T432101		1	CLAMP	
4	2314H005		4	SCREW	

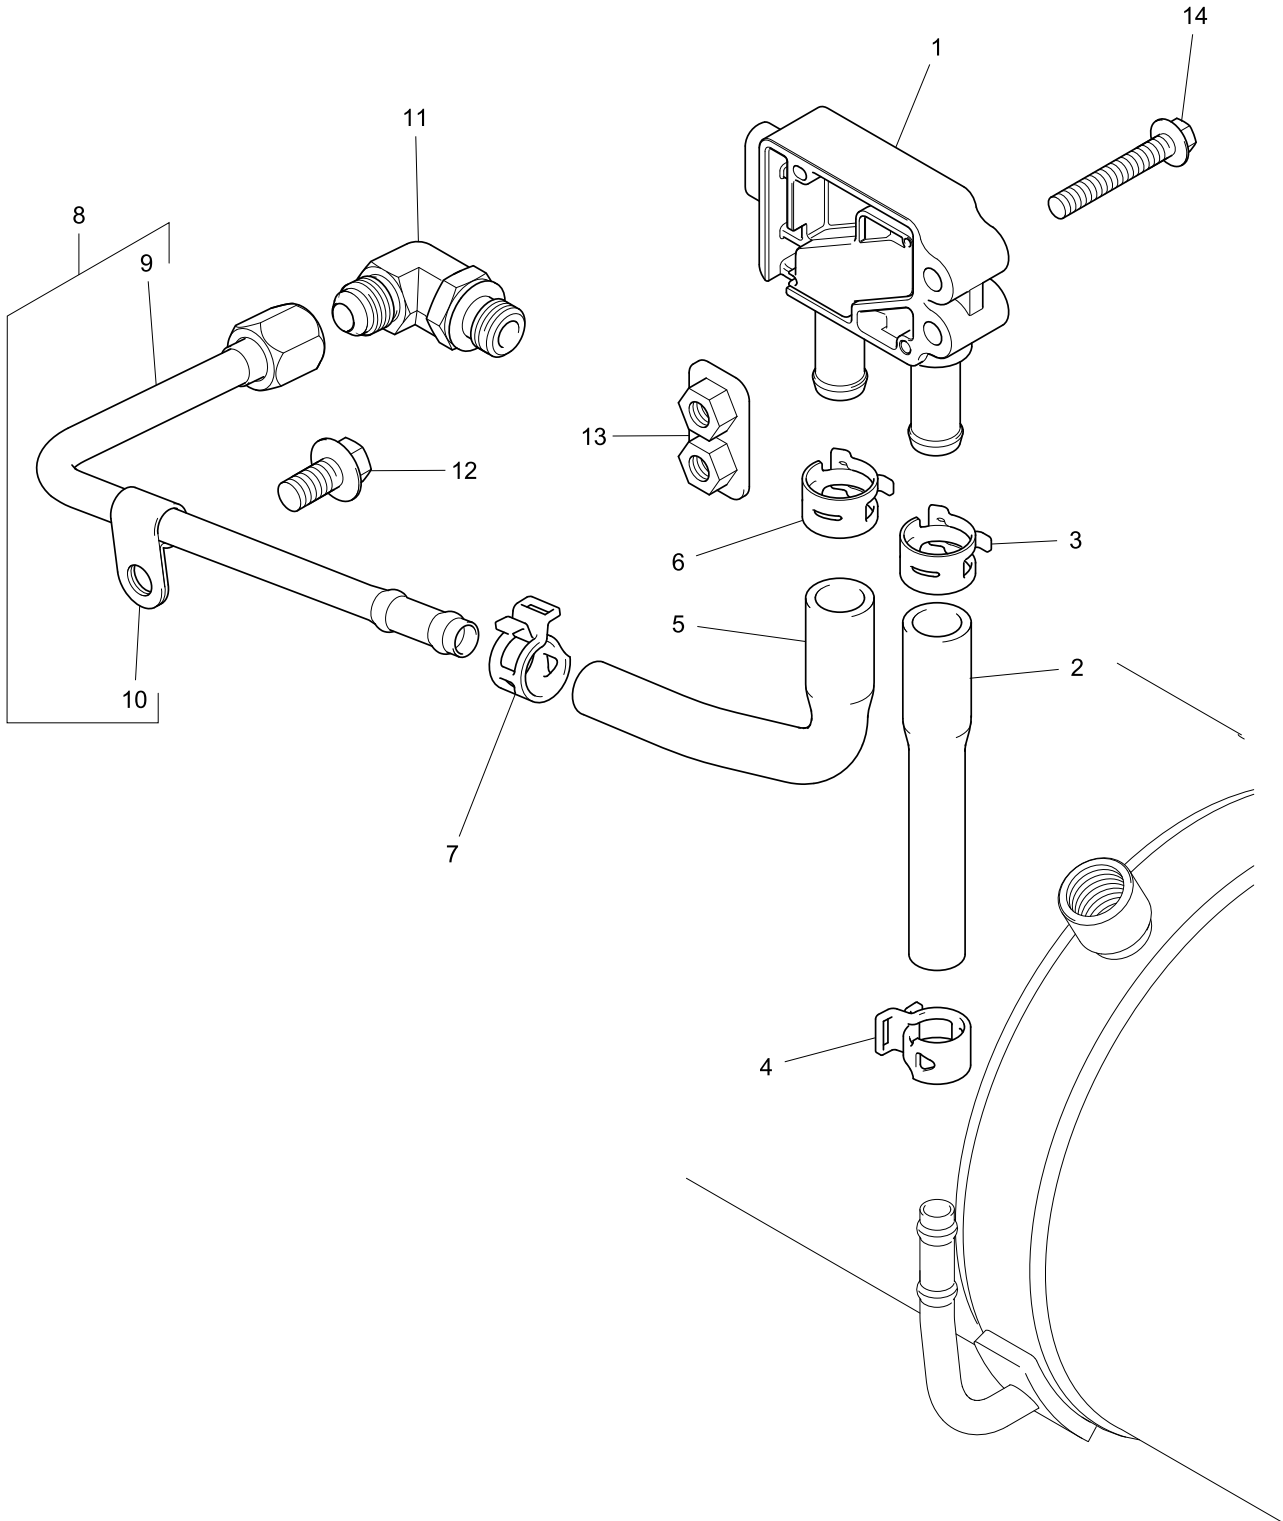 


CEM - Sensors	Plate B
	5242331

Item	Part No.	References	Qty.	Description	Notes
1	T430823		1	SENSOR	
2	T432081		1	HOSE	
3	T432422		1	CLAMP	
4	T424437		1	CLAMP	
5	T432080		1	HOSE	
6	T432422		1	CLAMP	
7	T424437		1	CLAMP	
8	T432120		1	PIPE - AIR BALANCE	
9		⇒ T432120	1	PIPE - AIR BALANCE	
10	36565517		1	CLIP	
11	T402565		1	ADAPTOR	
12	2314H002		1	SCREW	
13	T432088		1	PLATE CLAMPING	
14	2314F009		2	SCREW	

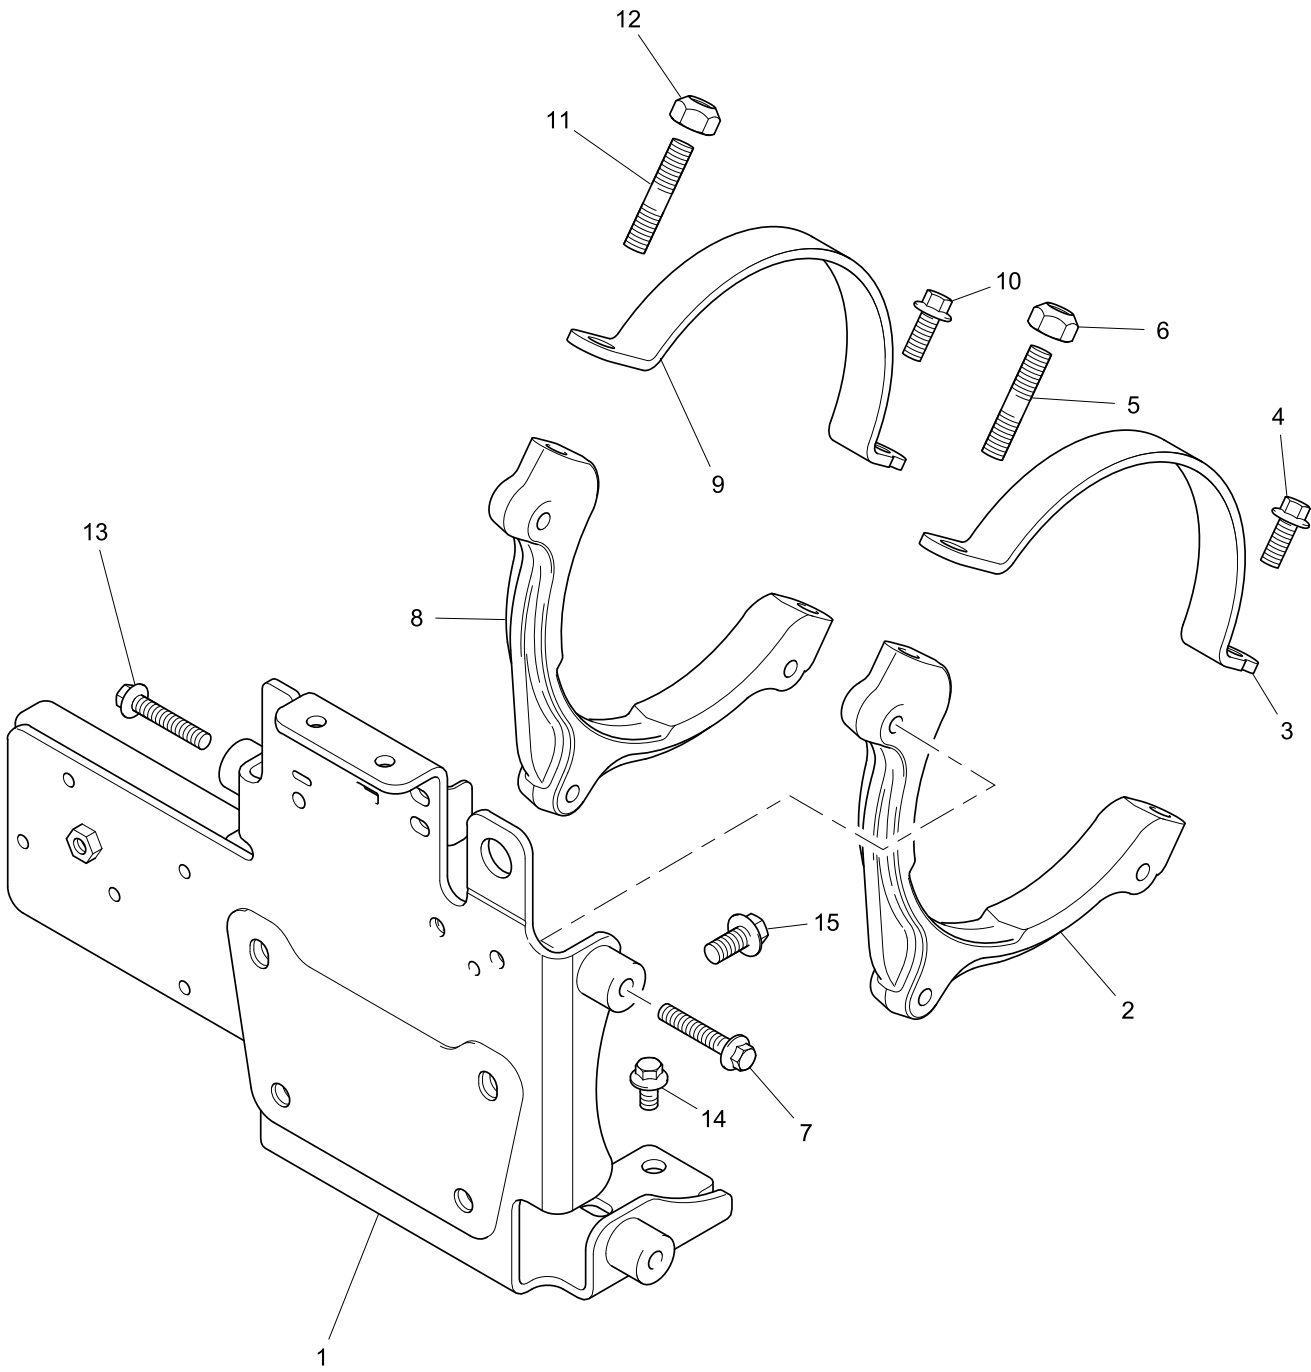 


Item	Part No.	References	Qty.	Description	Notes
1	T432118		1	BRACKET ASSEMBLY	
2	T432119		1	CLAMP	
3	T432078		1	CLAMP	
4	2314H003		1	SCREW	
5	T432038		1	STUD	
6	2318D240		1	NUT	
7	2314H008		2	SCREW	
8	T432119		1	CLAMP	
9	T432078		1	CLAMP	
10	2314H003		1	SCREW	
11	T432038		1	STUD	
12	2318D240		1	NUT	
13	2314H008		2	SCREW	
14	2314H001		2	SCREW	
15	2314J002		4	SCREW	

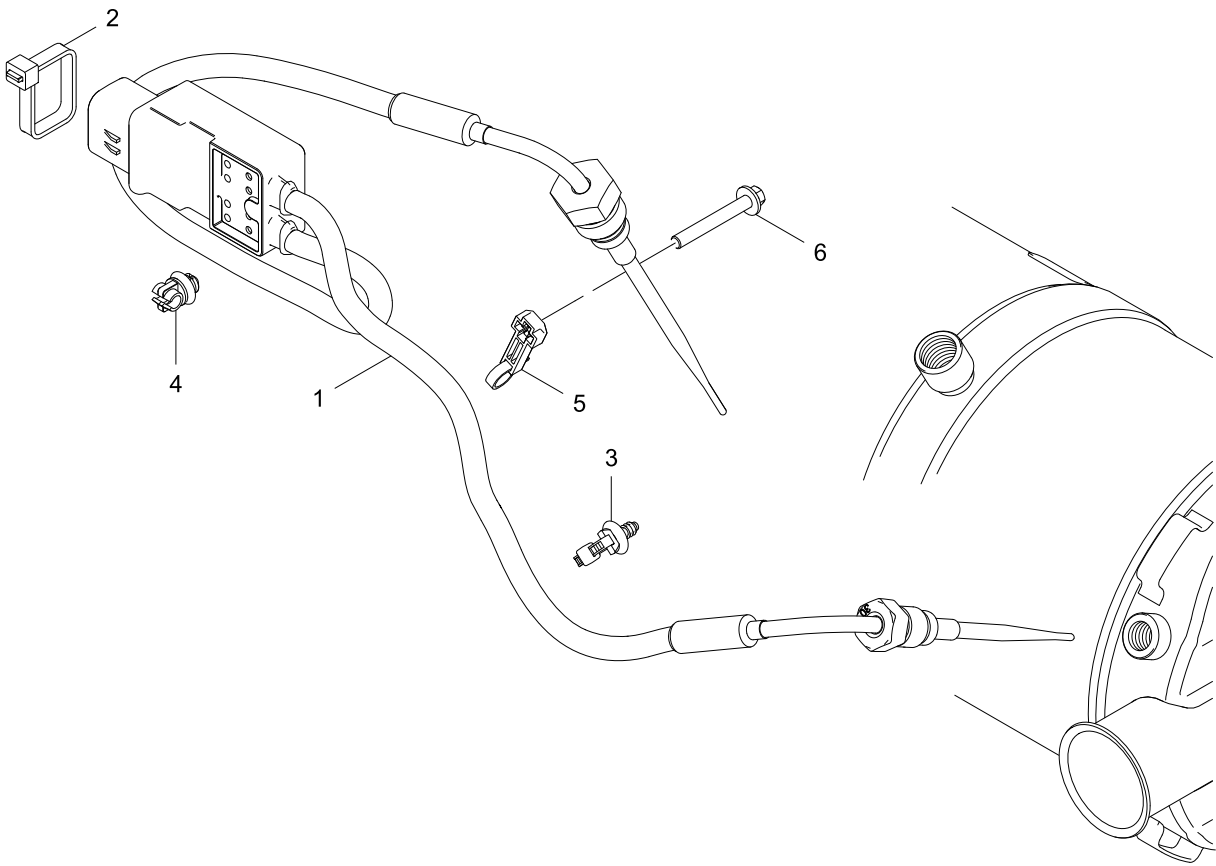 


CEM - Sensors	Plate A
	5242331

Item	Part No.	References	Qty.	Description	Notes
1	T433897		1	TEMPERATURE SENSOR	
2	T406992		1	CABLE TIE	
3	T409240		1	CABLE TIE	
4	2481D454		1	CLIP	
5	T434378		1	CABLE TIE	
6	2314F010		2	SCREW	

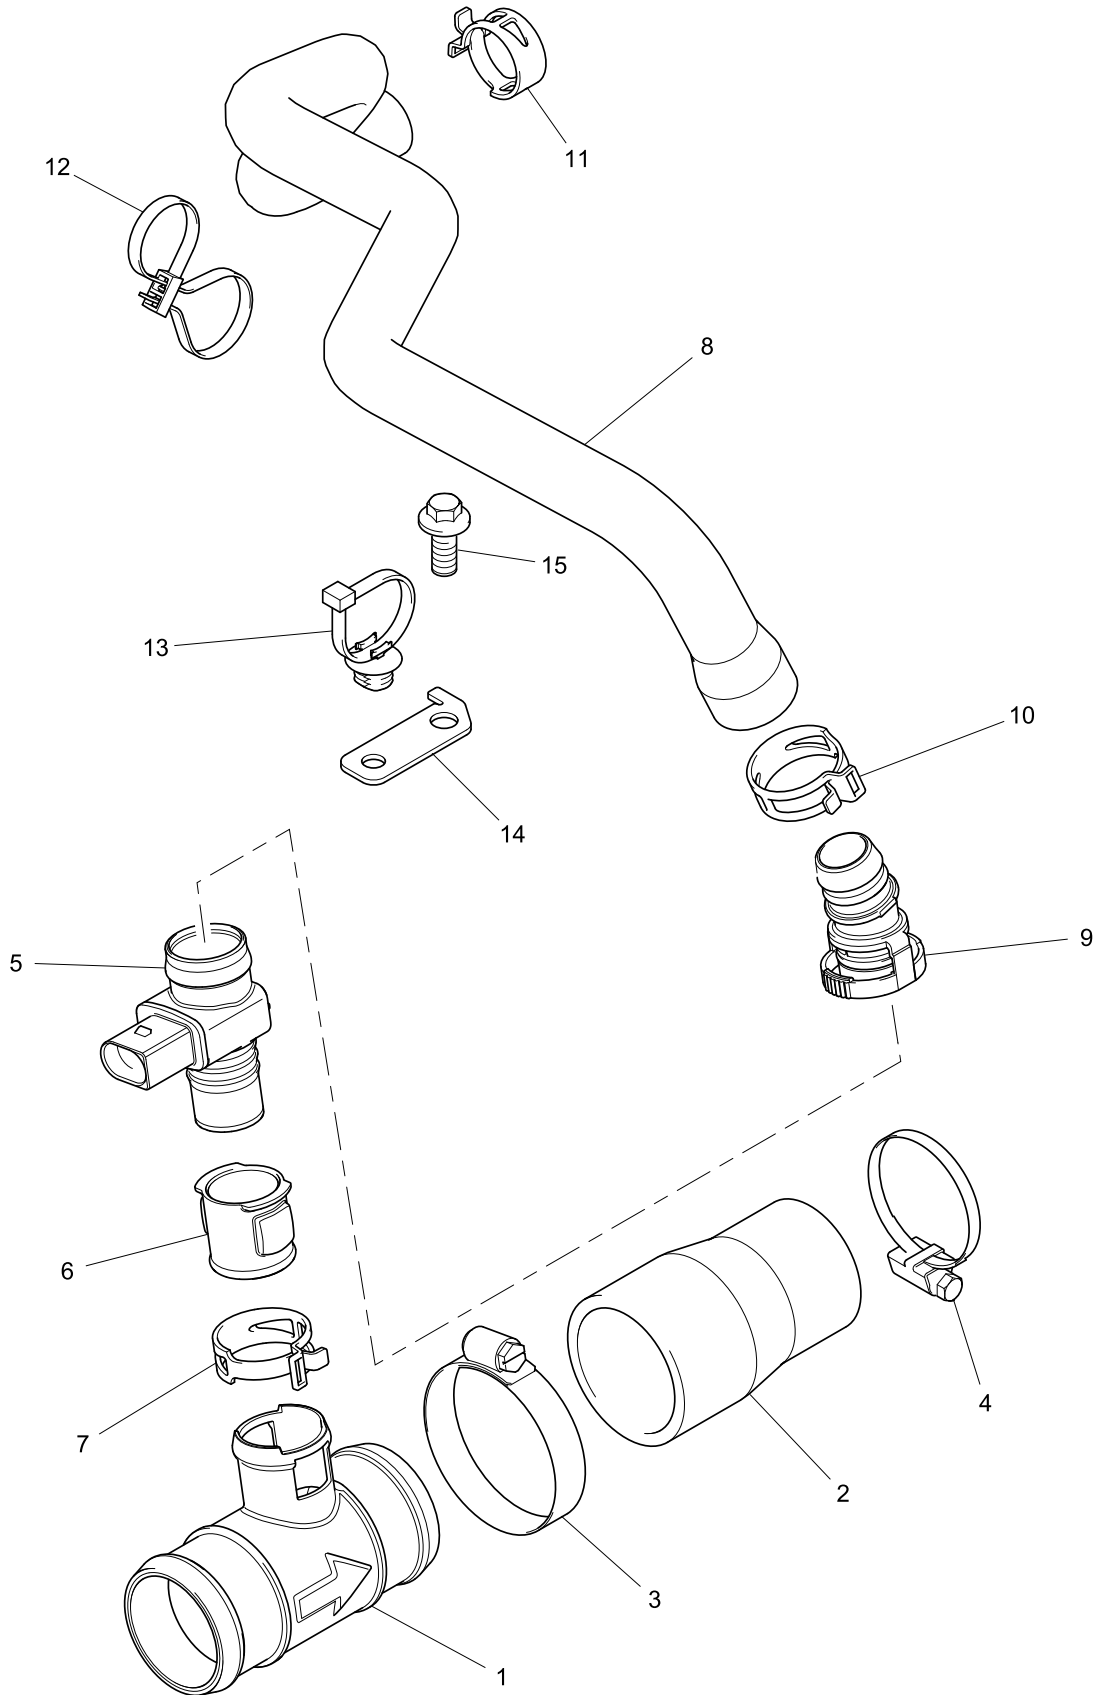 


Item	Part No.	References	Qty.	Description	Notes
1	T422319		1	PIPE - AIR	
2	135591220		1	HOSE - AIR	
3	0180069	→	1	CLIP	
4	398750450		1	HOSE CLIP	
5	T412087		1	HEATER	
6	135591250		1	BUSH	
7	T428346		1	HOSE CLIP	
8	T432091		1	HOSE	
9	T412089		1	CONNECTOR	
10	T424439		1	HOSE CLIP	
11	T426675		1	HOSE CLIP	
12	T401687		1	CABLE TIE	
13	T409393		1	CABLE TIE	
14	T432124		1	BRACKET	
15	2314H002		1	SCREW	

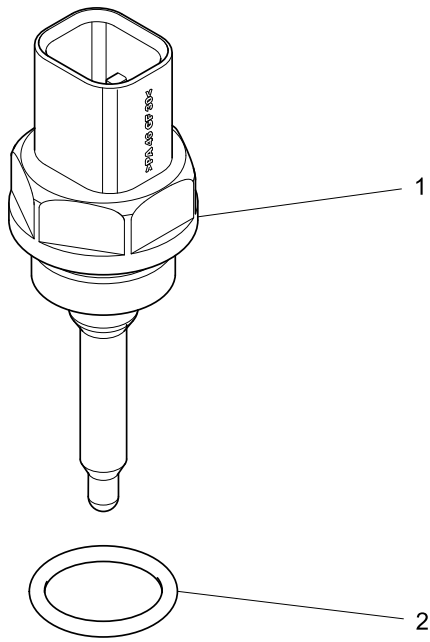 

Temperature Sensor	Plate A
	5667563


Item	Part No.	References	Qty.	Description	Notes
1	T407354		1	TEMPERATURE SENSOR	
2	2415H003		1	SEAL - O RING	

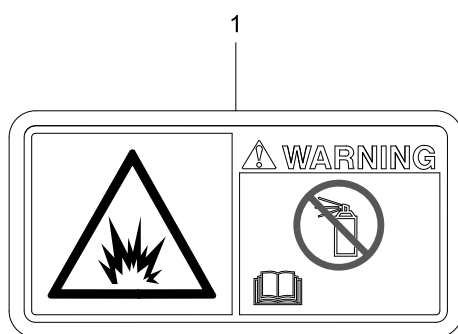 

Warning Labels	Plate A
	5667563


Item	Part No.	References	Qty.	Description	Notes
1	2638C245		1	LABEL	(1)(2)

Footnotes	
(1)	REFER TO SERVICE BULLETIN NO.81 (1100 SERIES)
(2)	ETHER WARNING LABEL

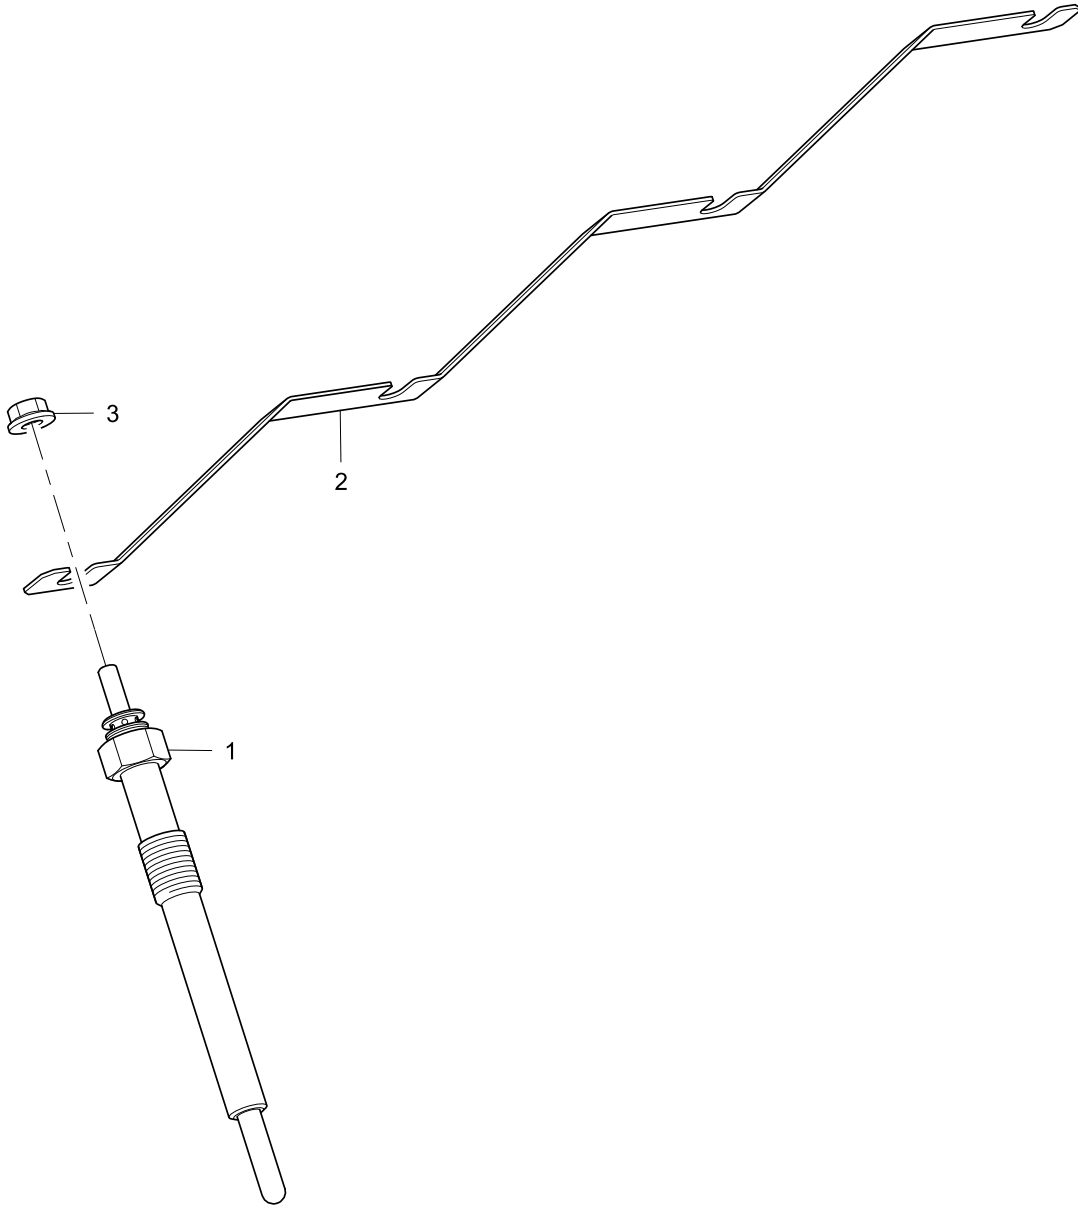 


Cold Start System	Plate A
	5285605

Item	Part No.	References	Qty.	Description	Notes
1	T431257		4	GLOWPLUG	
2	185376180		1	CONNECTION	
3	023100004		4	NUT	

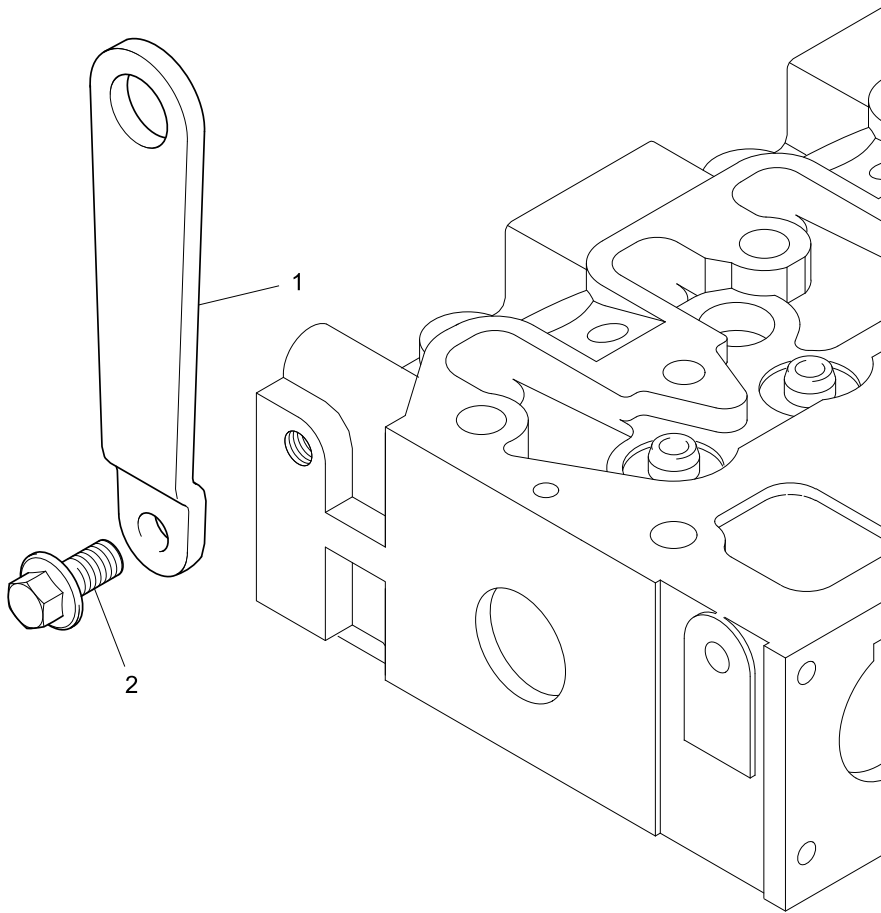 


Engine Lifting Eyes	Plate A
	5285607

Item	Part No.	References	Qty.	Description	Notes
1	195816941		1	LIFTING EYE	
2	T425405		1	BOLT	





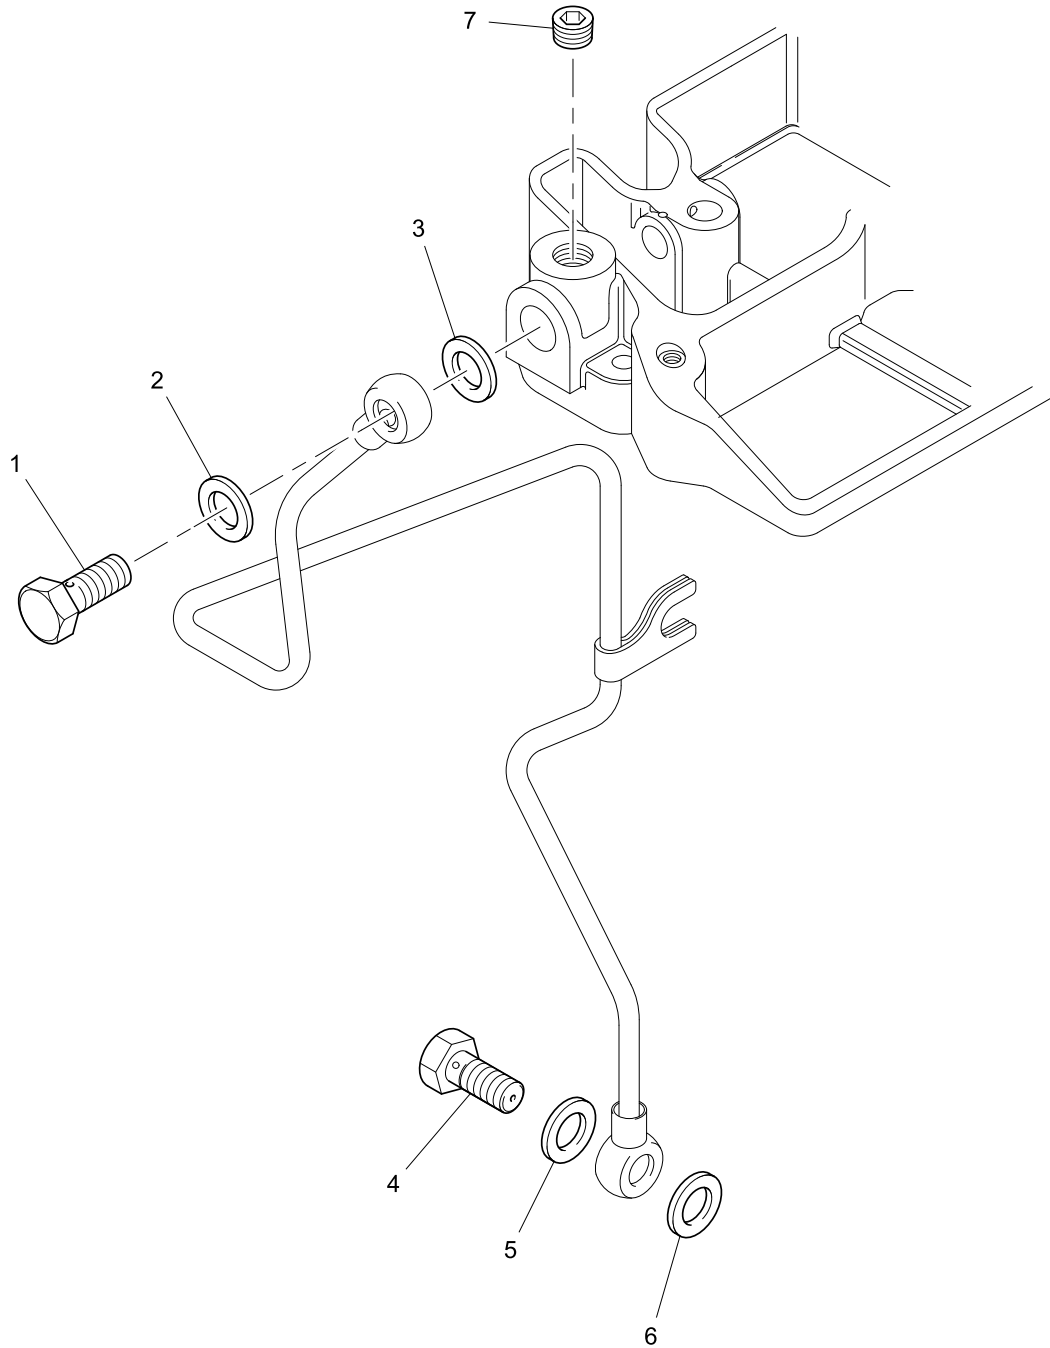 


Item	Part No.	References	Qty.	Description	Notes
1	198486780		1	BANJO BOLT	
2	140996260		1	WASHER	
3	140996260		1	WASHER	
4	198486780		1	BANJO BOLT	
5	140996260		1	WASHER	
6	140996260		1	WASHER	
7	064400010	↔	1	PLUG	

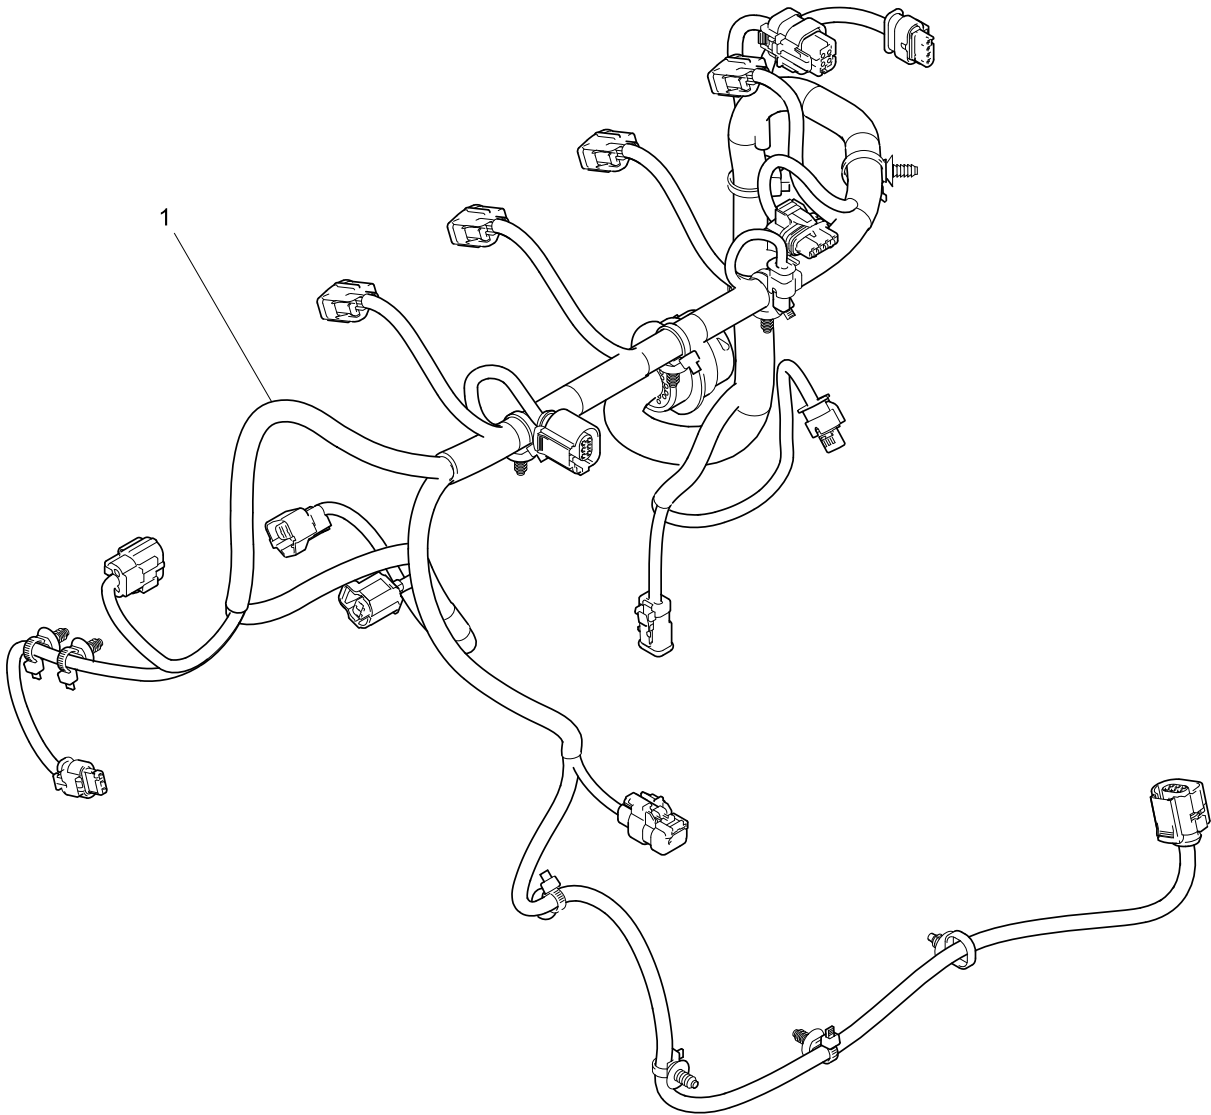 


Wiring Harness	Plate A
	5675720

Item	Part No.	References	Qty.	Description	Notes
1	T433460	↔	1	HARNESS	

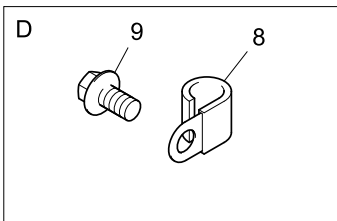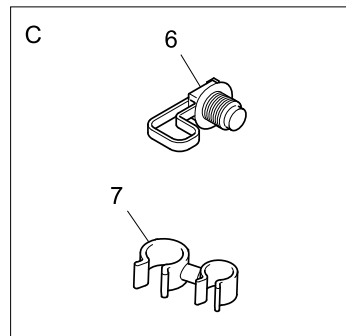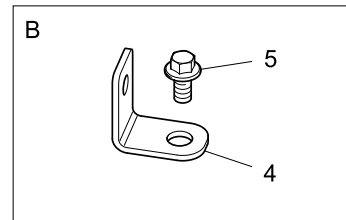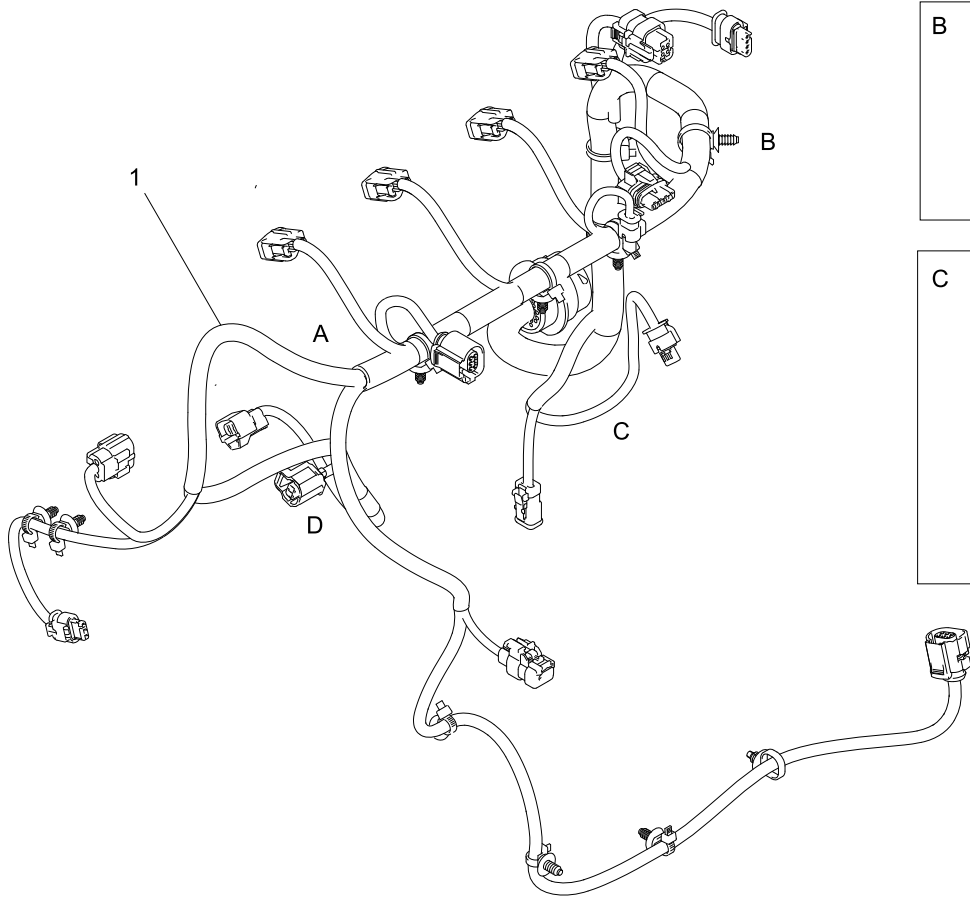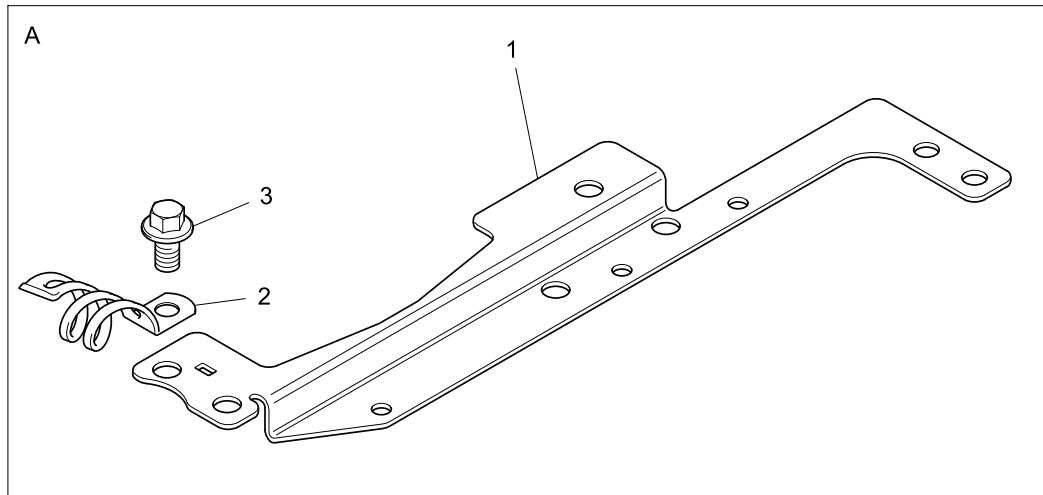     


Wiring Harness	Plate B
	5675720

Item	Part No.	References	Qty.	Description	Notes
1	T432099		1	BRACKET	
2	399113620		2	CLAMP	
3	2314H002		5	SCREW	
4	U85977760		1	STAY	
5	2314F002		1	SCREW	
6	2817A011		1	WIRING CLIP	
7	T433305		1	WIRING CLIP	
8	399111040		1	CLAMP	
9	2314H001		1	SCREW	

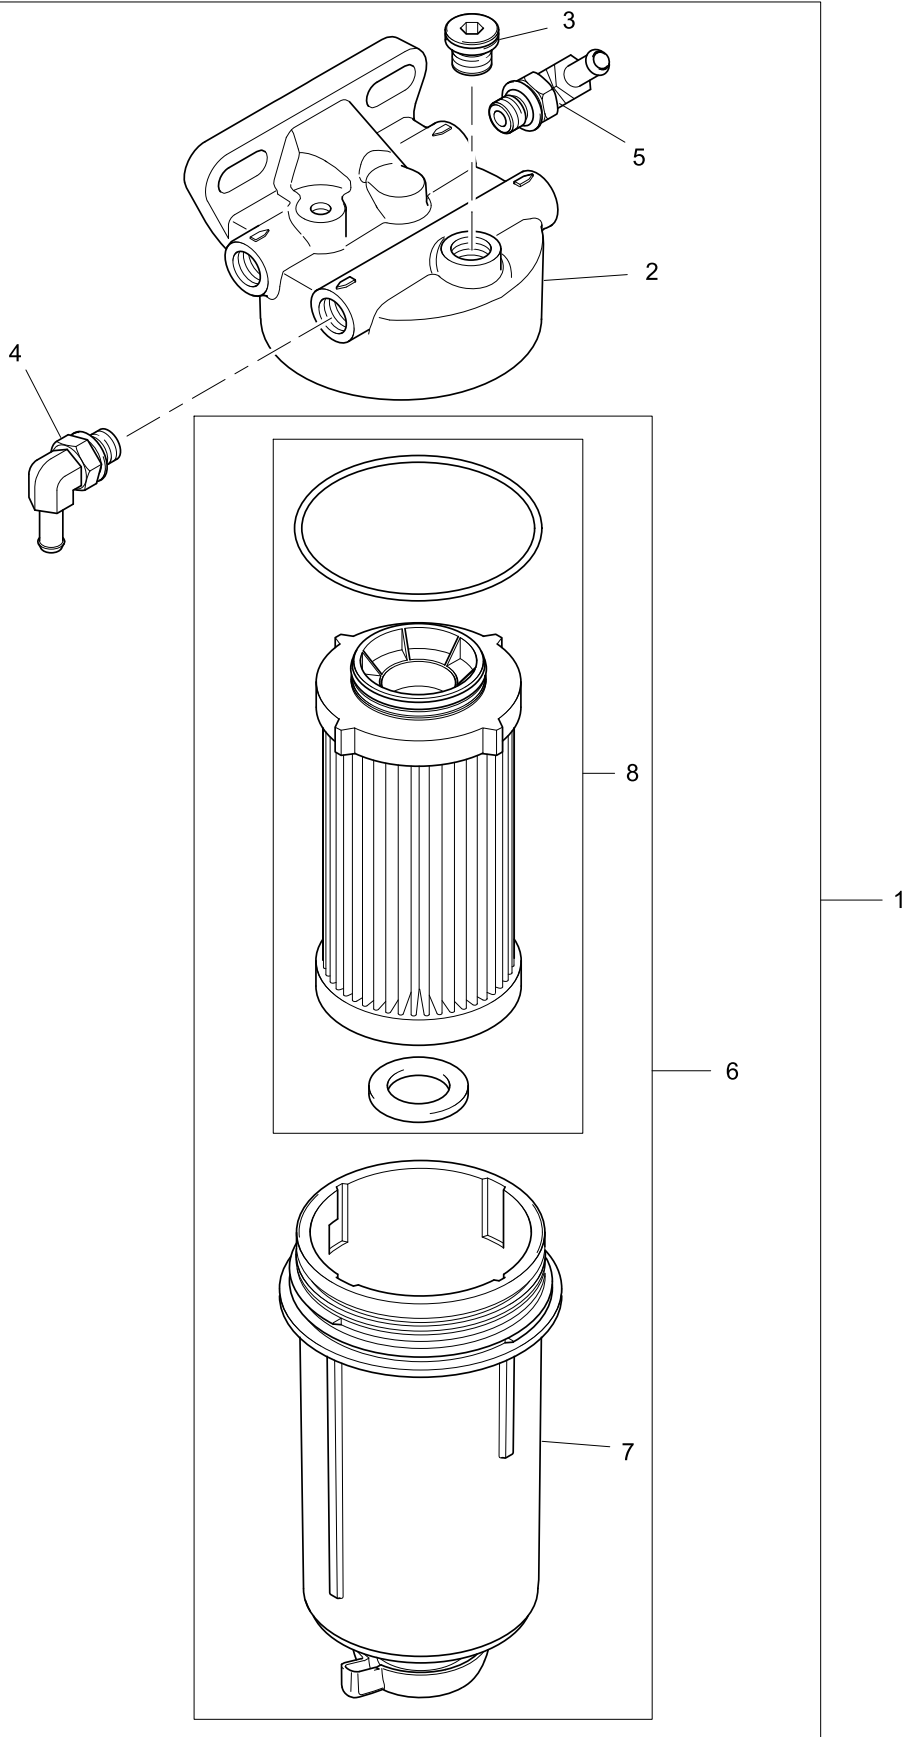 



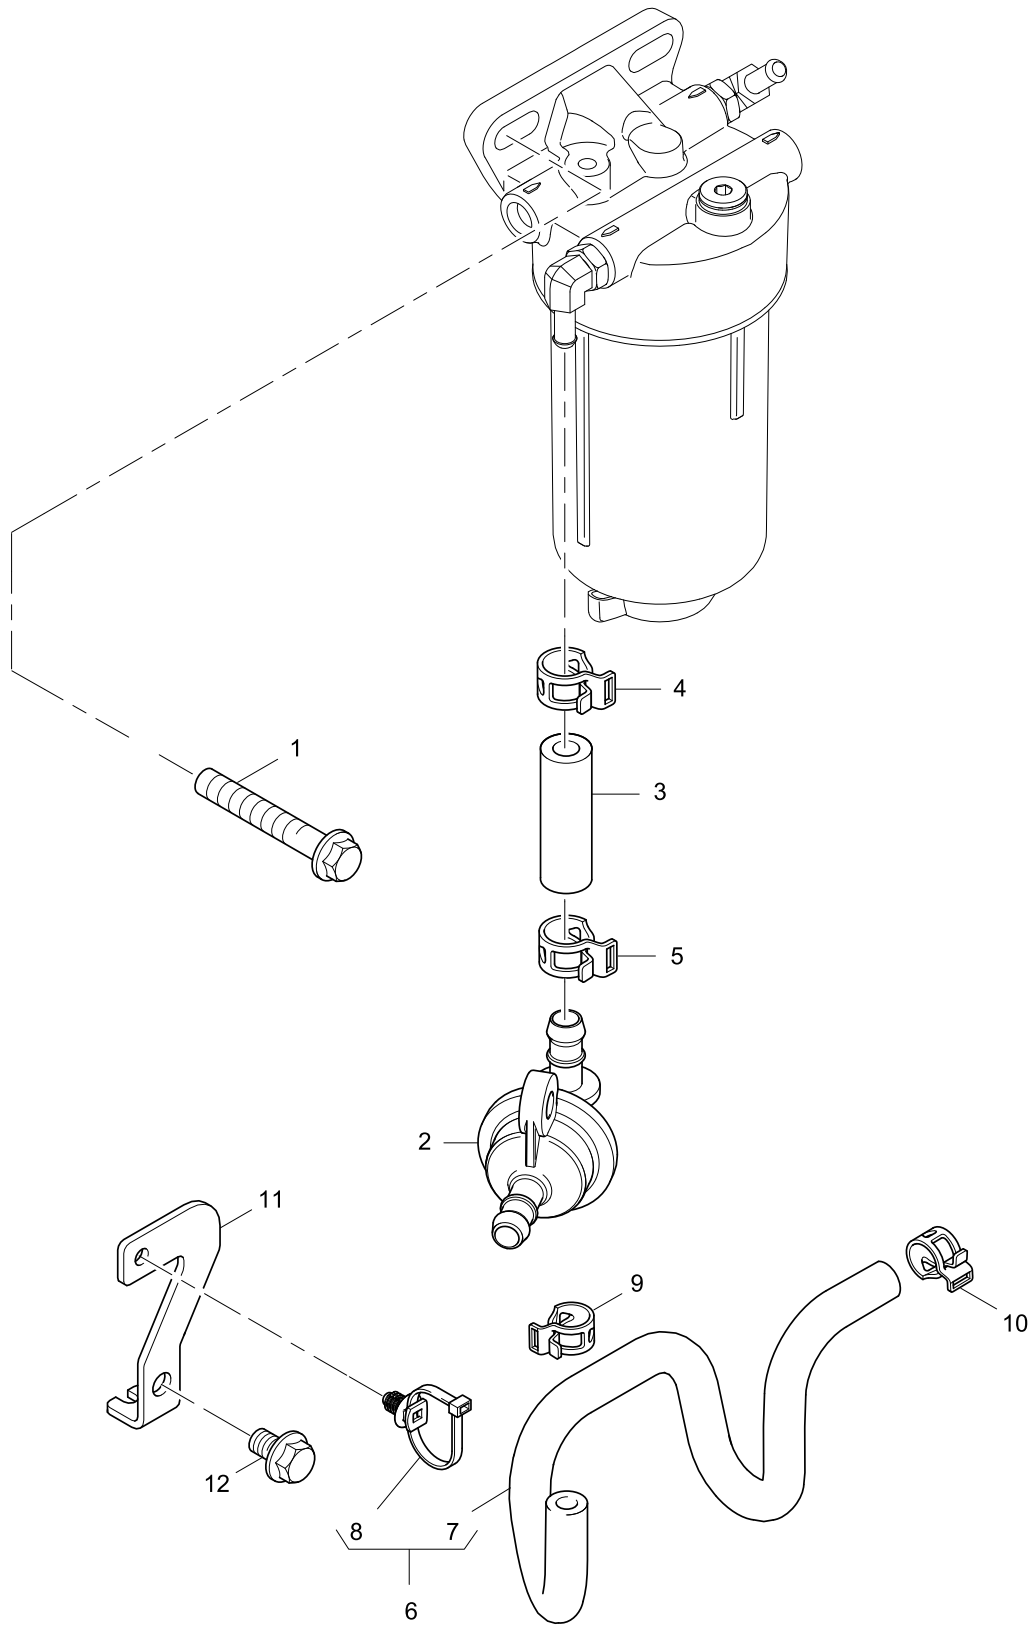 

Fuel Filter	Plate A
	4665550


Item	Part No.	References	Qty.	Description	Notes
1	4908254		1	FUEL FILTER ASSEMBLY	
2		⇒ 4908254	1	FUEL FILTER HEAD	
3	T423465		1	PLUG	
4	T423463		1	ELBOW	
5	T423463		1	ELBOW	
6	4906247		1	FUEL FILTER HOUSING	
7		⇒ 4906247	1	FUEL FILTER HOUSING	
8	4906245		1	FUEL FILTER	



Fuel Filter	Plate B
	4665550


Item	Part No.	References	Qty.	Description	Notes
1	2314J005		1	SCREW	
2	T408360		1	RELIEF VALVE	
3	T422231		1	HOSE - FUEL	
4	T424437	 a.	1	CLAMP	
5	T424437	 a.	1	CLAMP	
6	T422253		1	HOSE - FUEL	
7		⇒ T422253	1	HOSE - FUEL	
8	T409240		1	CABLE TIE	
9	T424437	 a.	1	CLAMP	
10	T424437	 a.	1	CLAMP	
11	T422201		1	BRACKET	
12	2314H102		1	SCREW	

History					
a.					
	T422532		1	BRACKET	
	2314F004		1	SCREW	
4	2481882		1	CLIP	
5	2481882		1	CLIP	
9	2481882		1	CLIP	
10	2481882		1	CLIP	

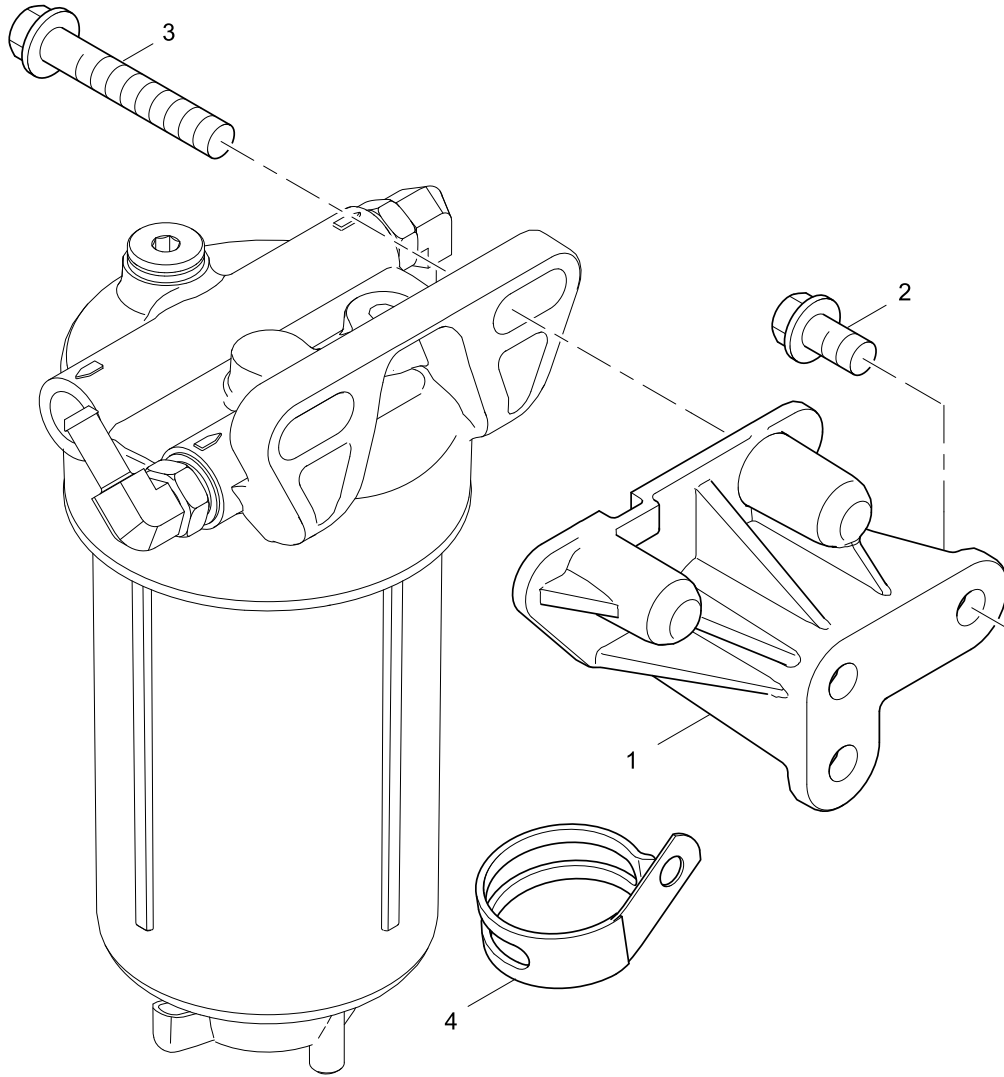 


Fuel Filter	Plate C
	4665550

Item	Part No.	References	Qty.	Description	Notes
1	T421705		1	BRACKET	
2	2314H002		3	SCREW	
3	2314J005		1	SCREW	
4	399113620		1	CLAMP	

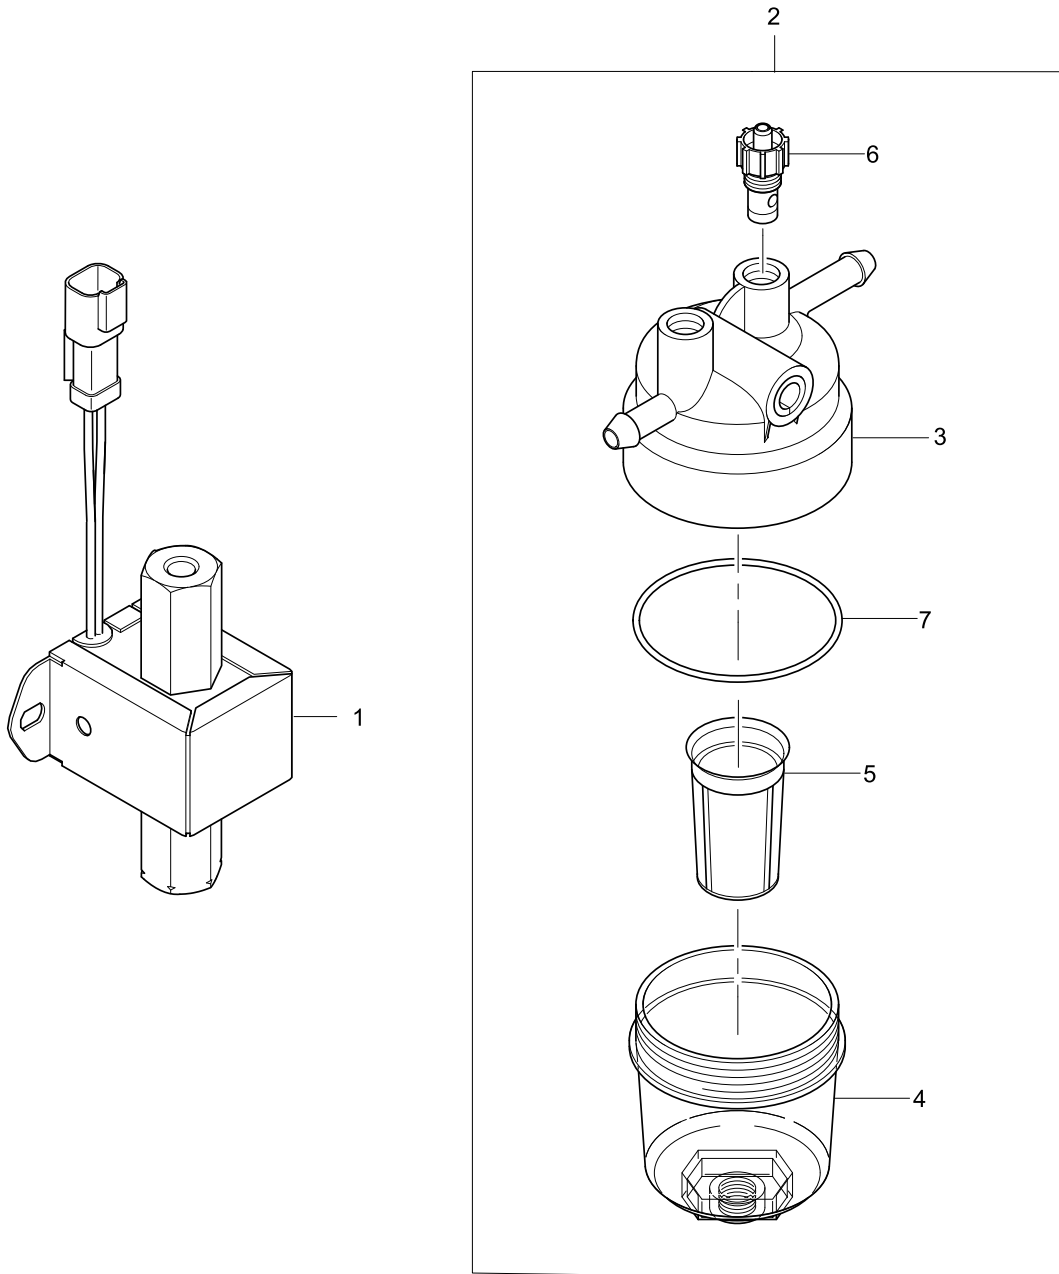 

Fuel Filter	Plate A
	4959885

Item	Part No.	References	Qty.	Description	Notes
1	4950715		1	LIFT PUMP	
2	130306380		1	PRE-FUEL FILTER ASSY	
3		⇒ 130306380	1	FUEL FILTER HEAD	
4	26560182		1	FUEL FILTER BOWL	
5	130306360		1	PRE-FUEL FILTER	
6	26560183		3	DRAIN PLUG	
7	26560184		1	SEAL - O RING	

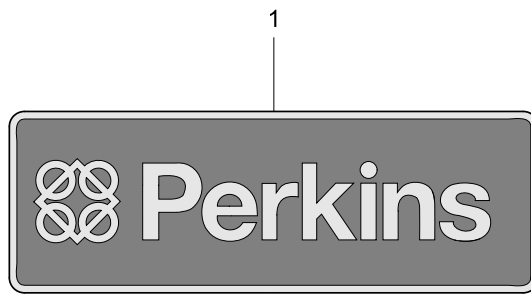 

Engine Identification Labels	Plate A
	5504407

Item	Part No.	References	Qty.	Description	Notes
1	T429007		1	LABEL	

ADAPTOR			
2486A225	79		
340674010	15		
T402565	123		
T432105	105		
AIR FILTER ASSEMBLY			
T432377	119		
ALTERNATOR			
T423270	85		
ALTERNATOR BRACKET			
T423492	85		
BACKPLATE			
110367570	53		
BALL BEARING			
040106203	13		
040109057	37		
BANJO BOLT			
198481150	47		
198486780	139		
T423366	99		
T431915	47		
BEARING HOLDER ASSEMBLY			
110156360	25		
110156370	25		
110156380	25		
110156390	25		
110416290	93		
BELT			
5138591	87		
T418022	87		
BIG END BEARING KIT			
T402620	29		
BIG END BRG KIT - U/S			
U5ME0030A	29		
U5ME0030B	29		
BOLT			
010109341	55		
010700860	25		
011310655	77		
T425405	137		
T432082	33		
T432083	33		
T432212	109		
BRACKET			
120346262	35		
120346341	35		
T421705	149		
T422201	147		
T422532	147		
T432099	143		
T432102	85		
T432124	129		
BRACKET ASSEMBLY			
T432118	125		
BREATHER			
110056060	115		
BREATHER ELEMENT			
110536010	117		
BUSH			
135591250	129		
198517222	13		
198517226	13		
198517229	13		
198517645	27		
CABLE TIE			
T401687	129		
T406992	127		
T409240	79, 127, 147		
T409393	129		
T434378	127		
CAMSHAFT			
120027150	37		
CAMSHAFT GEAR			
120276230	37		
U20276230	37		
CAP			
120186080	31		
CIRCLIP			
036500028	27		
036800010	23		
CLAMP			
0180067	97		
199106021	45		
399111040	143		
399113620	143, 149		
T424437	123, 147		
T432078	125		
T432101	121		
T432119	125		
T432422	123		
CLIP			
0180069	129		
067200100	47		
067200150	115		
2481882	147		
2481D454	127		
36565517	123		
COLLAR			
199236540	23		
CON ROD ASSEMBLY			
115026390	27		
CON ROD BOLT			
115176140	27		
CON ROD NUT			
020109120	27		
CONNECTION			
140546020	13		
145226320	81		
185376180	135		
198487890	15, 115		

Parts Index

CONNECTOR			
198481280	75, 79		
T412089	129		
T420245	79		
COOLER			
T433904	111		
COVER			
140116220	23		
165206740	89		
U65206791	93		
CRANKSHAFT ASSEMBLY			
T430998	25		
CRANKSHAFT GEAR			
U15276270	25		
CRANKSHAFT PULLEY			
U15397401	73		
CYLINDER HEAD ASSEMBLY			
T432006	31		
CYLINDER HEAD BOLT			
T427106	33		
CYLINDER HEAD COVER			
U11211490	107		
DIPSTICK TUBE			
T430685	65		
DOWEL			
030500612	25		
030500616	89		
030501025	13		
DRAIN PLUG			
26560183	151		
T10109238	67		
ELBOW			
T423463	145		
ENGINE CONTROL MODULE			
T432007	51		
EXHAUST MANIFOLD			
T432093	109		
EXHAUST OUTLET			
T432398	121		
EXHAUST VALVE			
U20176420	31		
EXTENSION			
145386910	61		
FAN			
145306730	83		
FAN DRIVE PULLEY			
U45336620	59		
FLANGE			
T428531	41		
FLYWHEEL ASSEMBLY			
T432100	55		
FLYWHEEL HOUSING			
4794840	53		
FUEL FILTER			
4906245	145		
FUEL FILTER ASSEMBLY			
4908254	145		
FUEL FILTER BOWL			
26560182	151		
FUEL FILTER HOUSING			
4906247	145		
FUEL INJECTION PUMP KIT			
131296979	39		
FUEL RAIL			
T432112	43		
GASKET			
165996750	93		
3688A035	101		
T432094	113		
T432095	111		
T432843	113		
GASKET - CYL. HEAD COVER			
U11996520	107		
GASKET - CYLINDER HEAD			
111147751	33		
111147761	33		
111147771	33		
111147780	33		
GASKET - EXHAUST			
T432096	121		
GASKET - EXHAUST MANIFOLD			
U35997200	109		
GASKET - IND MANIFOLD			
U35997170	103		
U35997180	103		
GASKET - SUMP			
110996860	63		
GASKET - THERMOSTAT HSG			
U45996051	81		
U45996930	77		
GASKET - TIMING CASE			
165996780	93		
GASKET - TURBOCHARGER			
135997240	97		
GASKET - WATER PUMP			
U45996990	75		
GEAR			
T432046	41		
GLOWPLUG			
T431257	135		
GUDGEON PIN			
T432047	27		
HARNESS			
T433460	141		
HEATER			
T412087	129		

HIGH PRESSURE FUEL PUMP		MAIN BEARING KIT	
T432111	39	U5MB0025	25
HOSE		U5MB0025A	25
068209648	79		
130806250	115	NEEDLE BEARING	
145537300	75	042309017	13
T432080	123	042309018	13
T432081	123	NUT	
T432084	115	020109076	35
T432091	129	020109086	73
T432098	97	020800016	37
T432130	113	020900008	85
T432131	111	023100004	135
T68209268	79	023100006	35, 45, 75, 77, 89
HOSE - AIR		023100010	35
135591220	129	023109011	41
HOSE - FUEL		2318A604	53, 93
068209668	47	2318D240	125
T422231	147	T401456	97
T422253	147	T428481	107
HOSE CLIP			
2481863	111, 113	O RING	
398750450	129	2415H011	103
T424438	79	T432194	103
T424439	129	T432689	91
T426675	75, 115, 129	OIL COOLER	
T428346	129	2486A218	79
		OIL FILLER CAP	
INDUCTION MANIFOLD		198436390	91
T432092	103	U98436350	69
INJECTOR		OIL FILLER CAP BLUETOOTH®	
T432110	49	T403274	69
INJECTOR CLAMP		OIL FILTER	
131566080	49	140517050	71
INJECTOR SEATING WASHER		OIL PRESSURE SENSOR	
131996130	49	T431758	99
INTAKE VALVE		OIL PUMP KIT	
U20166400	31	T431279	23
		OIL SUCTION STRAINER	
KEY		U40406790	63
030509020	25		
034100508	37, 73	PIN	
		030300414	41, 89
LABEL		030300816	55
2638C245	133	PIPE - AIR	
T407729	45	T422319	129
T429007	153	PIPE - AIR BALANCE	
LB - Thermostat		T432120	123
T432011	77	PIPE - COOLER TO MANIFOLD	
LEVER		T432113	111
T432106	85	PIPE - FUEL	
LIFT PUMP		131501070	45
4950715	151	PIPE - FUEL INJ NO 1 CYL	
LIFTING EYE		131501080	45
195816941	137	PIPE - FUEL INJ NO 2 CYL	

Parts Index

131501090	45	T408360	147
PIPE - FUEL INJ NO 3 CYL		ROCKER ARM ASSEMBLY	
131501100	45	120356131	35
PIPE - FUEL INJ NO 4 CYL		120356141	35
131501110	45	ROCKER BOX ASSEMBLY	
PIPE - LEAK OFF		120036393	35
131607270	47	ROCKER SHAFT	
131607330	47	120316201	35
PIPE - OIL		ROCKER SHAFT SPRING	
140607720	19	198217170	35
PIPE - OIL SUCTION			
140987090	63	SCREW	
PIPE - TURBO OIL DRAIN		010109406	25
T432127	101	010110625	45
PIPE - TURBO OIL FEED		011310612	63
T432122	99	011310625	35
PIPE CLIP		011310640	89
T432502	99	011310645	75
PISTON AND RING KIT		011510825	81
T432028	27	015600406	107
PISTON RING KIT		199486220	35
T432033	27	2314F001	37, 63, 65, 93
PLATE		2314F002	53, 99, 143
110666280	107	2314F003	41, 101, 111, 115
165166860	93	2314F004	147
199566750	37	2314F005	103, 111, 113
U98436290	63	2314F006	61
PLATE CLAMPING		2314F009	123
T432088	123	2314F010	127
PLUG		2314F011	35
064100045	13	2314F013	103
064209055	13	2314H001	89, 125, 143
064210010	31	2314H002	85, 123, 129, 143, 149
064210018	31	2314H003	85, 95, 125
064210025	13, 31	2314H004	85, 113
064210030	31	2314H005	41, 49, 121
064400010	139	2314H007	43
064510030	77	2314H008	125
198466010	13	2314H012	105
198466020	13	2314H022	85
198466920	13	2314H102	53, 109, 147
198466940	13	2314J001	53
2487646	53	2314J002	125
CH10287	77	2314J004	53, 57
T420246	13	2314J005	147, 149
T423465	145	2314J006	53
PRE-FUEL FILTER		2314J011	25
130306360	151	2314J017	93
PRE-FUEL FILTER ASSY		2314J604	53
130306380	151	T418686	63
PUSHROD		SEAL	
120456310	37	052301150	41
120456311	37	052400500	41
		SEAL - FRONT END OIL	
RELIEF VALVE		198636160	89
140036220	21	SEAL - O RING	

052100100	63, 65	U20116160	37
052100400	69	TEMPERATURE SENSOR	
052109076	35, 63	T405451	39
052109078	21, 99	T407354	77, 131
052109136	117	T433897	127
052300850	93	THERMOSTAT	
052400180	49	145206230	77
052400480	89	THROTTLE	
2415H002	99	T431847	105
2415H003	77, 131	THRUST WASHER	
2415H014	95	199266200	25
2486A223	79	199266210	25
26560184	151	199266270	23
CH10146	77	TIMING CASE	
CH10229	99	T432679	89
CH12649	53	TIMING DEVICE	
T431846	113	T432087	41
SEAL - REAR END OIL		TURBOCHARGER	
050209083	17	T432501	97
SEAL - ROCKER BOX		VALVE ASSEMBLY	
U20996250	35	T433908	113
SEAL - VALVE STEM		VALVE COLLET	
U20406140	31	120226070	31
SENSOR		VALVE SEAT INSERT	
T430823	123	110136560	31
T431796	103	110136570	31
T432195	103	VALVE SPRING	
SHIM KIT		198217470	31
199286340	23	VALVE SPRING CAP	
SPACER		120216041	35
135596911	103	WASHER	
199216360	37	025100016	67
U99216320	37	027100008	85
SPEED SENSOR		131426400	47
T431201	95	131576010	49
T432003	53	140996260	139
SPRING		199280300	35
198216720	23	2411D010	107
SPRING PIN		T432437	85
T30309005	13	T432440	85
STARTER RING		WATER PUMP KIT	
U15376160	55	T432009	75
STAY		WIRING CLIP	
U85977760	143	2817A011	143
STUD		T433305	143
012109044	35		
012109235	97		
012110625	35		
012110635	75		
012110645	89		
012110655	31		
T432038	125		
SUMP			
U10701050	63		

TAPPET

Perkins Sales

Americas

North America

1600 W Kingsbury St
Seguin
Texas 78155
United States
Toll free number: 1-888-PERK-ENG

South America

Rua Dr. Chucri Zaidan, 1240
Golden Tower – 17th Floor
São Paulo – SP CEP 04711-130
Brazil
Tel: +55 11 2109 2038

Asia

China

20/F Lei Shing International Plaza
1319 West Yan'an Road
Shanghai 200050
China
Tel: +86 21 22160774
Fax: +86 21 52136624

India

Floor 6, Tower 'B' Prestige Shantiniketan
The Business Precinct, Whitefield Main Road
Bangalore 560048
India
Email: IPSD_India@perkins.com

Japan

Ocean Gate Minato Mirai 12F
3-7-1 Minatomirai, Nishi-ku, Yokohama city
Kanagawa, 220-0012
Japan
Tel: +81 45 682 3579
Fax: +81 45 682 3690

Asahi Seimei Matsumoto Fukashi building 3F
1-1-15 Fukashi, Matsumoto city
Nagano, 390-0815
Japan
Tel: +81 263 87 2003
Fax: +81 263 39 1682

Korea

11F, Songchon Building, 503
Nonhyeon-ro, Gangnam-gu
Seoul 06132
Korea
Tel: +82 10 8669 8358

Singapore

14 Tractor Road
Singapore 627973
Tel: +65 6828 7469
Fax: +65 6828 7414

Europe, Middle East and Africa

Peterborough, PE1 5FQ
United Kingdom
Tel: +44 1733 583000

www.perkins.com

Copyright © 2019 Perkins Engines Company Limited, all rights reserved. No part of this document may be reproduced in any form or by any means, without prior written permission of Perkins Engines Company Limited. The information in this document is substantially correct at the time of printing and may be altered subsequently.



THE HEART OF EVERY GREAT MACHINE